

Specifications, Installation, Operation Service and Spare Parts Manual **CAL-SERIES**



Vented Radiant Tube Heater/ L'Appareil de chauffage de Tube Rayonnant donné vent
Gravity Vented Wall Furnace/ La gravité A Donné vent Fournaise de Mur
Low Intensity Infrared Heater/Radiateur à infrarouge à faible intensité
Also for Brooder Use/Auss pour l'éveage des poules

For either indoor or outdoor installation/Installer à l'intérieur ou à l'extérieur
For Industrial, Commercial, Agricultural, Restaurant, Patio and Residential Garage Applications.

⚠ WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read (refer to) the installation operating and maintenance instructions thoroughly before installing or servicing this equipment. For assistance or additional information consult a qualified installer, service agency or the gas supplier.

⚠ ADVERTISSEMENT. L'installation déplacée, l'ajustement, le changement, le service ou l'entretien peuvent causer les dommages de propriété, la blessure ou la mort. Lire (se référer à) l'installation qui fonctionne et les instructions d'entretien à fond avant d'installer ou entretenir cet équipement. Pour obtenir de l'aide ou les informations supplémentaires consultez un programme d'installation, une agence de service ou le fournisseur de gaz qualifié.

⚠ WARNING: If the information in these instructions are not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

⚠ ADVERTISSEMENT: Assurez-vous de bien suivre les instructions données dans cette notice pour réduire au minimum le risqué d'incendie ou d'explosion ou pour éviter tout dommage materiel, toute blessure ou la mort.

-Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

- Ne pas entreposer ni utiliser d'essence ni d'autres vapors ou liquids inflammables a proximité de cet appateil ou de tout autre appareil.

- ⚠ DANGER: WHAT TO DO IF YOU SMELL GAS:**
- 1) Extinguish any open flame
 - 2) DO NOT try to light any appliance.
 - 3) DO NOT use or touch any electrical switches.
 - 4) DO NOT use any phone in your building
 - 5) Turn off gas.
 - 6) Open Windows
 - 7) Leave the building
 - 8) Immediately call your gas supplier from a neighbour's phone or after you have left the building. Follow the gas supplier's instructions.
 - 9) If you cannot reach your gas supplier, call the fire department.

- ⚠ DANGER: QUE FAIRE SI VOUV SENTEZ UNE ODEUR DE GAZ:**
- 1) Eteindre la flamme ouverte
 - 2) Ne pas tenter d'allumer d'appareils
 - 3) Ne touchez á aucun interrupteur.
 - 4) Ne pas vous server des telephones dans le bâtiment où vous vous trouvez.
 - 5) le Virage du gaz.
 - 6) Ouvrir Windows
 - 7) Part le bâtiment
 - 8) Appelez immédiatement votre fournisseur de gaz depuis un voisin ou après que vous êtes parti le bâtiment. Suivez les instructions du fournisseur.
 - 9) Si vous ne pouvez rejoindre le service des incendies.

- Installation and service must be performed by a qualified installer, service agency or the gas supplier

- L'installation et l'entretien doivent être assures par un installateur ou un service d'entretien qualifié ou par fournisseur de gaz.

⚠ WARNING: Heat exchanger surface is hot. Do not touch surface or burn may result. Combustible material or articles should not be placed on or near heater. Observe clearance to combustibles as noted on heater and in this manual.

INSTALLER: Leave this manual with the appliance.

INSATLLATEUR: Laissez cette notice avec l'appareil.

CONSUMER: Retain this manual for future reference.

CONSOMMATEUR: Conservez cette notice our consultation ultérieure.

Calcana USA Ltd.
30245 Suite A,
County Rd 49
Loxley, Al, 36551
Tel: 251-964-4400 Fax: 251-964-4404

TABLE OF CONTENTS

Table of Figures		Gas Connection.....	38 & 39
Owners Responsibility.....	1 & 2	Checking Gas Input Rate.....	40 & 41
Installers Responsibility.....	3 & 4	Electrical Connection.....	42
Code Compliance.....	5	Wiring Diagram:	
Specifications.....	6	- Single Input 120.....	43
Dimensions.....	7	- Hi/Lo 120 Volt.....	43A
Clearance to Combustibles.....	8 & 9	- Modulating 120 Volt.....	43B
Preinstallation Inspection.....	10	- Single Input 24 Volt.....	44
		- Hi/Lo 24 Volt.....	44A
		- Modulating 24 Volt.....	44B
Packaging Contents & Description of Parts:		Thermostats	
- CAL-40A Preassembled Model.....	11	- Low Voltage.....	45
- CAL-50A-15' (4.16m).....	12	- Line Voltage.....	46
- CAL40A Two Piece Model.....	13	Initial Start-Up.....	47 to 48B
- CAL-50A -15' (4.16m) Three Piece...	13A	Sequence of Operation.....	49
- CAL75A-20' (6.1m) Four Piece.....	13B	Troubleshooting	
- Sidewall Vent Kit.....	14	- No Power To Heater.....	50
- Outside Combustion Air Kit.....	14	- Initial Electrical Check.....	50
- 90° Elbow Kit.....	15	- Initial Gas Checks.....	51
- 180° U-Bend Kit.....	15	- Electricity & Gas to Heater but	
- Protective Screen.....	15A	Still Inoperative.....	51
Installation:		- Check Control Board.....	52
- Planning.....	16	- Fault Conditions.....	52
- Location.....	16A	- Internal Control Fault.....	52
- Suspension Points.....	17	- Air Flow Fault.....	52
- Horizontal Installation:		- Flame with No Call For Heat.....	53
- CAL40A Preassembled Model.....	17	- Ignition Lock Out.....	53
- CAL-40 10' (3m) 2 Piece.....	18	- Flame Sensor Current Check.....	53
- CAL50A-15' (4.16m) 3 Piece.....	18	- Proper Electrode Location.....	54
- CAL75A-20' (6.1m) 4 Piece.....	18	Maintenance.....	55
- 25° Tilt Installation.....	19	Parts:	
- 45° Tilt Installation.....	19	- Burner Head Parts.....	56
Assembly of Components.....	20	- Reflector and Tube Parts.....	57
- Joint Hanger to Reflector.....	21	- Parts List.....	58
- Clamp Coupler.....	21	Warranty.....	59
- End Cap to Reflector.....	22	Fuel Conversion: Single Input.....	60
- Baffle/Turbulator Installation.....	23	Variable Input.....	63
- Vent Adaptor Installation.....	23	Lighting & Operating Instructions.....	66
Assembly Overview:.....	24		
- CAL40A-10' (3m) Preassembled.....	25		
- CAL40A-10' (3m) 2 Piece Model.....	26		
- CAL50A-15' (4.16m) Model.....	26		
- CAL75A-20' (6.1m) Model.....	27		
- 90° Elbow Kit.....	28		
- 180° U-Bend Kit.....	28		
Outside Combustion Air Supply.....	29		
Venting (Sidewall & Roof).....	30 to 34		
Outdoor Applications.....	35		
Unvented Applications.....	35A		
Gas Piping.....	36 & 37		

TABLE OF FIGURES

Figure #	Description	Page #
1	Equipment Dimensions.....	7
2	Outdoor End Clearances.....	8
3	Vented Clearances.....	8
4	Clearance to Combustibles Installation Type 1.....	9
5	Clearance to Combustibles Installation Type 2.....	9
6	CAL-40A-10' Assembled Model.....	11
7	CAL-50A-15'.....	12
8	CAL-40A-10' Two Piece Model.....	13
8	CAL-75A-20'.....	13
9	Outside Combustion Air Supply Kit.....	14
10	Side Wall Vent Kit.....	14
11	90° Elbow Package Contents.....	15
12	180° U-Bend Package Contents.....	15
12A	Typical Garage Installation.....	16A
13	Suspension Details.....	17
14	Horizontal Installations - CAL-40A-10' Preassembled.....	17
15	Horizontal Installations - CAL-40A-10' Two Piece Model..... - CAL-50A-15'..... - CAL-75A-20'.....	18
16	25° Tilt.....	19
17	45° Tilt.....	19
18	Joint Hanger Installation.....	21
19	Tube Clamp Installation.....	21
20	Reflector Support Strap Installation.....	22
21	End Cap Installation.....	22
22	Baffle Installation CAL-40A Two Piece.....	23
22A	Baffle Installation CAL-50A & 75A.....	23
23	Baffle/Turbulator + Flue Adaptor Installation CAL-50A & 75A.....	23
24	CAL-40A-10' Preassembled Model.....	25
25	CAL-40A-10' Two Piece Model.....	26
25	CAL-50A-15'.....	26
26	CAL-75A-20'.....	27
27	90° Elbow Kit Installation.....	28
28	180° U-Bend Kit Installation.....	28
29	Outside Combustion Air Supply.....	30
30	Sidewall Vent.....	32

Figure #	Description	Page #
31	Vertical Venting, Single Unit.....	33
32	Common Vertical Venting, Two Units into One Common Vent.....	34
33	Outdoor Installation Kit.....	35
34	Hard Pipe Gas Connection.....	38
35	Gas Line Connection with Certified Flexible Gas Connector.....	39
36	Gas Valve - Single Input Gas Valve.....	48
36A	- Hi/Lo Gas Valve.....	48A
36B	- Modulating Gas Valve.....	48B
37	Pressure Regulator.....	48
38	Electrical Connection.....	42
39	Wiring Diagram - Single Input 120 Volt.....	43
39A	- Hi/Lo 120 Volt.....	43A
39B	- Modulating 120 Volt.....	43B
40	- Single Input 24 Volt.....	44
40A	- Hi/Lo Input 24 Volt.....	44A
40B	- Modulating 24 Volt.....	44B
41	Low Voltage Thermostat Wiring.....	45
42	Line Voltage Thermostat Wiring.....	46
43	Flame Sensor Current Check.....	53
44	Proper Electrode Location.....	54
45	Burner Head Parts.....	56
46	Reflector and Tube Parts.....	57

OWNER'S RESPONSIBILITY:

1

Thank you for purchasing our product. We have designed this unit to provide you with years of trouble free heating enjoyment.

READ THIS MANUAL IN ITS ENTIRETY! If you do not understand any of the safety or hazardous warnings contained in this manual, or have questions or concerns about the installation, operation, maintenance or service of this heater, or any other questions or concerns relating to this heater, you **MUST CALL THE FACTORY** at the telephone number noted on the front cover of this manual or as detailed on the rating plate on the heater before operating this heater. Store this manual in a location near the heater, for future reference. Make sure installation is performed by well-qualified, licensed contractors in the required field of work. If in doubt, DO NOT allow unit to be installed. DO NOT park vehicles or place combustible objects close to the heater other than specified on the Clearance to Combustible chart located in this manual and on the heater. Failure to observe the clearance to combustibles can result in property damage, injury or death.

IMPORTANT NOTICE: The installation portion of these instructions are for the use of qualified individuals specially trained, licensed and experienced in the installation of this type of equipment and related system components.

NOTE: - The words "shall" or "must", indicate a requirement, which is essential to satisfactory and safe performance.

⚠ GENERAL HAZARD WARNING: The heater and related gas piping, fitting & wiring must be installed by individuals or firms qualified, licensed and specially trained and experienced in installation of this type of equipment and related system components. Only persons who can understand and follow the instructions shall install or service this heater. Persons not qualified shall not install this equipment nor interpret these instructions. Failure to comply with the precautions and instructions provided with this heater can result in death, serious bodily injury and property loss or damage from hazards of fire, explosion, burn, asphyxiation, carbon monoxide poisoning or electrical shock.

⚠ WARNING: Installation and repair should be done by a qualified service person. The heater should be inspected before use and at least annually by a qualified service person and prior to heating season. Heaters used in dusty locations such as brooder barns, sawmills, woodworking shops, etc. will require more maintenance on a more regular basis and more frequent cleaning may be required as necessary. It is imperative that the control compartments, burner(s) and circulating air passageways of the appliance be kept clean. Periodic examination of the venting system is to be performed.

No one should work on a heater unless they are a licensed/qualified gas fitter or contractor. For all repairs, parts **MUST** originate from the manufacturer of this heater in order not to void CGA/AGA certification. Safety devices are not allowed to be rendered inoperative and left unattended as this action can cause property damage, injury or death. Failure to do so will void your warranty.

⚠ WARNING: Do not store or use halogen-emitting substances in the vicinity of this heater. Such substances include chlorine based cleaners and swimming pool chemicals, water softening chemicals, de-icing salts and chemicals, cleaning solvents such as carbon tetrachloride or perchloroethylene, halogen type refrigerants, printing inks, paint and paint removers, varnishes, hydrochloric acid, cements and glues, and masonry acid washing materials. The air used by the burner for combustion must be free of halogens to avoid possible corrosion to the heating surfaces, which could result in asphyxiation, fire and/or death.

⚠ WARNING: Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition.

Young children should be carefully supervised when they are in the same place as the heater.

Clothing or other flammable materials should not be hung from the heater, or places on or near the heater.

Any safety screen, guard or other protective device removed for servicing a heater must be replaced prior to operating the heater

⚠ WARNING: Do not operate heater in a residential garage application without an approved (exhaust) venting system installed and connected to the heater. When this heater is installed in a residential garage, the operation of the heater, when not connected to a properly installed and maintained venting system, can result in carbon monoxide (CO) poisoning and possible death.

Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.

Ne pas se servir de cet appareil s'il a été plonge dans l'eau, complètement ou en partie. Faire inspecter l'appareil par un technicien qualifié et remplacer toute partie du système de control et toute commande qui ont été plongée dans l'eau.

INSTALLER RESPONSIBILITY



WARNING:

FIRE OR EXPLOSION HAZARD

The heater and related gas piping and wiring must be installed only by individuals or firms well qualified and licensed in the required field of work.

Read and understand this manual in its entirety BEFORE you install this heater. If you have any questions call your local representative. Verify that the fuel on the installation site is the same as what is required for this heater. Check heater for damage or missing parts. If damage has occurred, notify carrier or point of purchase at once for reconciliation of damaged goods. We are not responsible for transit damage. Do not install if heater is damaged.

If you do not understand any of the safety or hazardous warnings contained in this manual, or have questions or concerns about the installation, operation, maintenance or service of this heater, or any other questions or concerns relating to this heater, you MUST CALL THE FACTORY at the telephone number noted on the front cover of this manual or as detailed on the rating plate on the heater before operating this heater.

Verify that model, input & length is what was ordered and is appropriate for installation. If heater is too small for the heating load of the building, property damage can occur due to freezing. If unit is too large, severe heat damage can occur to the building and/or its contents, fire, explosion, injury or death. If in doubt compare heat loss of building with unit on site. If you are unable to calculate heat loss call your local representative for assistance.

Installation shall be in accordance with local codes. (see code compliance).

If installation requires tilting, DO NOT over tilt the unit. Units are certified for installations up to 45°, however the maximum recommended tilt is 25°.

Install unit according to the Clearance to Combustibles for that particular heater and type of installation. Make sure that clearances are maintained from vehicles parked below or in front of heater. Take into consideration hoists. Failure to do so could result in property damage, injury or death.

Make sure unit is adequately suspended from ceiling or roof. Select hanging location that has adequate strength to support heater.

This heater needs fresh air for safe operation and must be installed so there are provisions for adequate combustion and ventilation air. In the USA, do not operate this heater without installing air intake hood or duct (pin #800209) and exhaust/chimney vent in a residential garage application. In Canada, the outside air intake is optional for residential garages.

This heater must not be connected to a chimney flue serving a separate solid-fuel burning appliance. This heater must only be installed with the venting that it is certified for. Refer to the installation instructions for installation details. See pages 29 & 30)

If unit is to be sidewall vented, use pin #800208 sidewall vent kit. Make sure vent cap is past eave. (see pages 31 & 32 titled 'Venting').

Do not render safety devices inoperable. Make sure gas line and/or service have adequate capacity for the increased load of heater.

Check line and manifold pressure with a manometer to confirm unit is set according to the specification on the rating plate and altitude. Perform check with all gas-fired appliances operating. (see pages 40, 41, 47 & 48 for further details).

Provide adequate accessibility clearances for servicing.

Leave copy of this manual with owner (or a copy) for future reference.

HEATER OPERATION NOTE: Heater will have a higher heat output at the burner end as compared to the exhaust end.

SPACE HEATING: As a general rule, it is suggested to locate the burner end toward the highest heat-loss area (doors) of the space being heated. If you have any concerns or questions concerning orientation or layout of the heater in your application, contact factory for assistance.

SPOT HEATING: On heaters with a straight line configuration as well as units that have the maximum length of radiant tube selected for the input capacity of a given burner, there will be a noticeable and more pronounced perception of greater heat output from the burner end of the heater as compared to the exhaust end. As a general rule, it is suggested for spot heating applications, to use a u-tube configuration to provide a more even source of heat. If you have any concerns or questions concerning orientation or layout of the heater in your application, contact factory for assistance.

NOTE: A small amount of condensation may occur from the heater when it starts the heating cycle. The condensation will stop once the heater warms up. Make sure venting is sealed according section titled "Venting".

CODE COMPLIANCE

Installation shall be in accordance with local building codes, or in the absence of local codes, in accordance with:

A) FUEL SUPPLY:

CANADA: *Natural Gas and Propane Installation Code, CSA B149.1* or latest edition.

USA: *National Fuel Gas Code, ANSI Z223.1/NFPA 54*, or latest edition.

B) ELECTRICAL GROUNDING:

CANADA: *Canadian Electrical Code, CSA C22.1* or latest edition.

USA: *National Electrical Code, ANSI/NFPA 70* or latest edition

In Canada: Electrical equipment and wiring shall comply with the applicable provisions of the current *Canadian Electrical Code, CAN/CSA C22.1, Part I and Part II, and CAN/CSA C22.2 No. 3, Electrical features of Fuel Burning Equipment.*

C) PUBLIC GARAGE INSTALLATION: Adequate clearances must be maintained according to the following standards:

CANADA: *Natural Gas and Propane Installation Code, CSA B149.1* or latest edition.

USA: *Parking Structures, ANSI/NFPA 88A* or the standard for *Repair Garages, ANSI/NFPA 88B* or latest edition.

Heaters must be installed a minimum of eight feet above the floor. Minimum required safe distances to combustibles must be maintained from vehicles parked below the heater.

- When installed over hoists, the minimum required safe distances to combustibles must be maintained from the uppermost point of the combustible materials placed on the hoist.

D) AIRCRAFT HANGERS: Adequate clearances must be maintained according to the following standards:

CANADA: *Enforcing Authority*

USA: *Aircraft Hangars, ANSI/NFPA 409*

- Heaters in aircraft storage or service areas must be installed a minimum of ten feet above the upper surface of wings or engine enclosures of the highest aircraft which may be housed in the hangar. (This should be measured from the bottom of the heater to the top of the wing or engine enclosure, whichever is highest from the floor.)
- In other sections of aircraft hangars, such as shops or offices, heaters must be installed a minimum of eight feet above the floor.
- Heaters installed in aircraft hangars shall be located so as not to be subject to damage by aircraft, cranes, movable scaffolding or other objects.
- When installed over hoists, the minimum safe distances to combustibles must be maintained from the uppermost point of the combustible materials placed on the hoist.

E) OTHER TYPES OF INSTALLATIONS: If the installation is such that it doesn't meet the above mentioned criteria or there is a possibility of airborne combustible vapor or material in the building (HAZARDOUS LOCATION), consult the local Fire Marshall, the Fire Insurance Carrier or other authorities for approval of the proposed installation prior to installing the heater.

SPECIFICATIONS: General specifications**Rating:** (Input: Natural and L.P. Gas)

In Canada: 0-4500' (1372m) In USA: 0-2000' (610m) – De-rate Above 2000' (610M) (see pg 40)

Model	Burner Input Btu/hr		Tube
	Min	Max	Length
CAL-40A	N/A	40,000	10' (3m)
CAL-40AHL	20,000	40,000	10' (3m)
CAL-40AM	20,000	40,000	10' (3m)
CAL-50A	N/A	50,000	15' (4.2m)
CAL-50AHL	25,000	50,000	15' (4.2m)
CAL-50AM	25,000	50,000	15' (4.2m)
CAL-75A	N/A	75,000	20' (6.1m)
CAL-75AHL	37,500	75,000	20' (6.1m)
CAL-75AM	37,500	75,000	20' (6.1m)

Gas Pressure at Manifold:

	Single Input	Variable Input
Natural Gas.....	3.5" (8.89cm) W.C.	Lo: 1.5" (3.8 cm) W.C. Hi 3.5" (8.89cm) W.C
L.P. Gas.....	10.5" (26.67 cm) W.C.	Lo: 5.5" (13.97 cm) W.C. Hi: 10.5"(26.67 cm) W.C.
Gas Connection Size.....	0.5" (1.27 cm) N.P.T.	

Gas Inlet Pressure:

<i>GAS</i>	<i>MINIMUM</i>	<i>MAXIMUM</i>
Natural	4.5" (11.43 cm) W.C.	14.0" (35.56 cm) W.C.
L.P.	11.5" (29.21 cm) W.C.	14.0" (35.56 cm) W.C.

Flue connection.....3" (7.62 cm)

Electrical Rating:

DSI Ignition, 120v. 60hz, 1 Amps, Appliance, 3 prong plug connection, 24 volt low voltage thermostat

Standard Equipment:

Burner control housing is pre-assembled and pre-wired, unit comes complete with the following: industry standard gas, electrical and venting connections, balanced air rotor, thermal overload protected motor, visual burner inspection sight glass, combustion and air proving safety switches, 3-try spark ignition control, low voltage thermostat connection, 4" aluminized steel combustion tube, polished aluminum standard reflector, 4" aluminized steel radiant heat exchanger, tube couplers, joint/hanger pieces, heat economizer baffle, low voltage thermostat, and hanging chain kit.

Optional Equipment:

- 90° Elbow Kit
- Variable Input Control
- Stainless Steel Construction
- 24 Volt input
- Hi/Lo Control
- Two Piece Construction
- 180° U-Bend Kit
- Fresh Air Kit
- Sidewall Vent Kit
- Protective Screen
- Three Piece Construction
- Four Piece Construction

DIMENSIONS

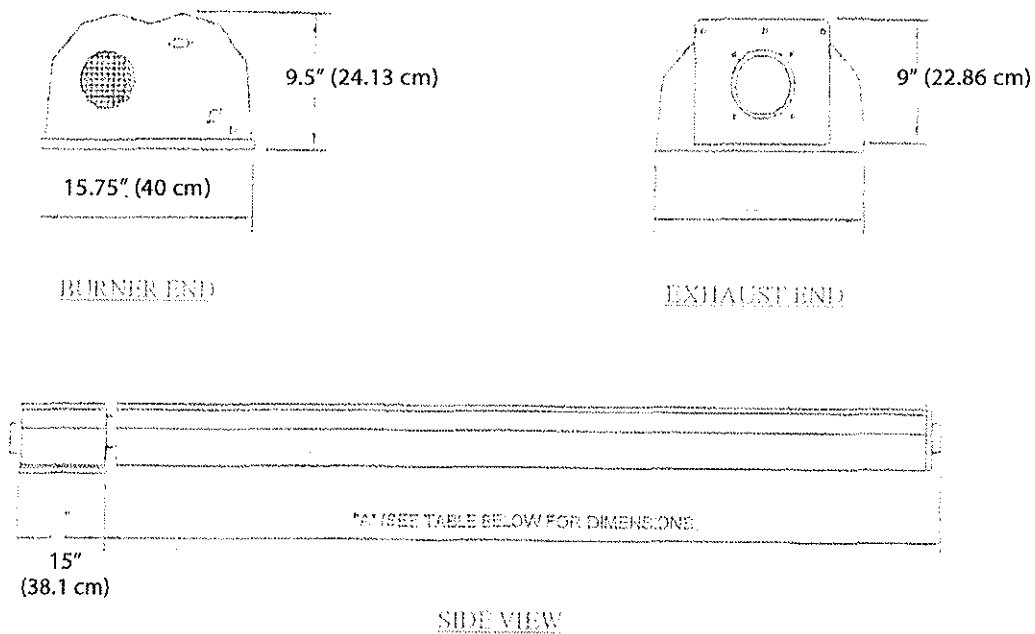


FIGURE #1 EQUIPMENT DIMENSIONS

TABLE OF DIMENSIONS

MODEL	DIMENSION "A"
Burner Input	Length
40,000 Btu/Hr	10' - 4" (3.15 m)
50,000 Btu/Hr	15' - 4" (4.7 m)
75,000 Btu/Hr	20' - 4" (6.4 m)

INSTALLATION CLEARANCES AND CLEARANCE TO COMBUSTIBLES

Installation of overhead heaters in garages or hangars MUST meet the requirements for bottom (below) clearances detailed in CANADA: *Natural Gas and Propane Installation Code, CSA B149.1* or latest edition or USA: *National Fuel Gas Code, ANSI Z223.1/NFPA 54*, or latest edition.

⚠ WARNING: In all situations, clearance to combustibles must be maintained. Minimum clearance from heater must be maintained from vehicles parked below heater. The posting of signs may be required in storage areas referring to clearance to combustibles to the heater and/or limiting the stacking height of stored items near the heater specifying a maximum height. Clearances are not for use in four (4) sided enclosures. Certain materials or items, when stored under the heater, will be subjected to radiant heat and could be seriously damaged.

The stated clearance to combustibles represents a surface temperature of 90°F (32°C) above room temperature. Building material with low heat tolerance (such as plastics, vinyl siding, canvas, tri-ply, etc) may be subject to degradation at lower temperatures. It is the installer's responsibility to assure that adjacent materials are protected from degradation.

END CLEARANCES (Burner Head End)

Minimum clearances from air intake end of burner head to object is 12" (30.5 cm)

Provide adequate accessibility clearances for servicing and proper operation. Do not install unit in such a manner that the combustion air entering the heater is reduced in any manner.

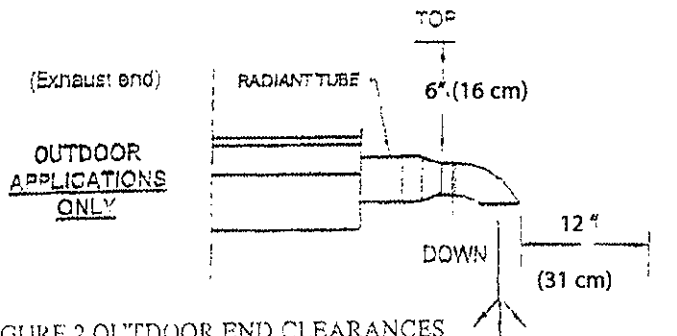


FIGURE 2 OUTDOOR END CLEARANCES

VENTED

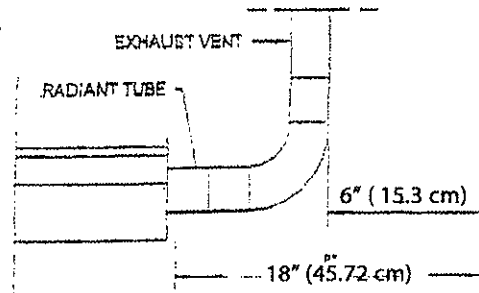


FIGURE 3 VENTED CLEARANCES

WARNING: DO NOT INSTALL INRESIDENTIAL GARAGE WITHOUT AN APPROVED VENTING SYSTEM For Brooder use and some industrial applications, unvented installations are permitted.

In these applications refer to page 35A for details On clearances and ventilation requirements.

CLEARANCE TO COMBUSTIBLES FOR SPACE HEATING AND BROODER INSTALLATION

IN THE USA: Residential Garage heater installations with less than an 8' (2.44 m) clearance from the bottom of the tube to the floor require the installation of the Protective Screen Kit PIN#3900212 (see page 15A for details) The minimum floor clearance is 6' (1.83 m) from the floor to the bottom of the reflector.

IN CANADA: Residential Garage heater installations with less than an 7' (2.14 m) clearance from the bottom of the tube to the floor require the installation of the Protective Screen Kit PIN#3900212 (see page 15A for details) The minimum floor clearance is 6' (1.83 m) from the floor to the bottom of the reflector.

⚠ WARNING: In all situations, clearance to combustibles must be maintained. Minimum clearance from heater must be maintained from vehicles parked below heater. The posting of signs may be required in storage areas referring to clearance to combustibles to the heater and/or limiting the stacking height of stored items near the heater specifying a maximum height. Clearances are not for use in four (4) sided enclosures. Certain materials or items, when stored under the heater, will be subjected to radiant heat and could be seriously damaged.

The stated clearance to combustibles represents a surface temperature of 90°F (32°C) above room temperature. Building material with low heat tolerance (such as plastics, vinyl siding, canvas, tri-ply, etc) may be subject to degradation at lower temperatures. It is the installer's responsibility to assure that adjacent materials are protected from degradation.

TYPE 1

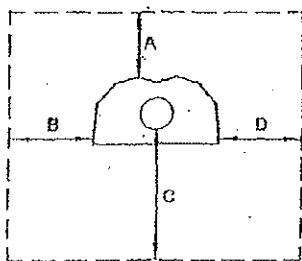


FIGURE #4

TYPE 2

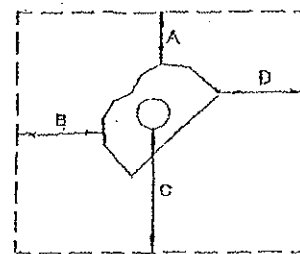


FIGURE #5

STANDARD REFLECTOR

INSTALLATION TYPE 1				
INPUT	A	B	C	D
40	4" (10.2 cm)	12" (31 cm)	36" (92 cm)	12" (31 cm)
50	4" (10.2 cm)	12" (31 cm)	43" (110 cm)	12" (31 cm)
75	4" (10.2 cm)	15" (32 cm)	48" (122 cm)	15" (32 cm)

25° TO 45° TILT

INSTALLATION TYPE 1				
INPUT	A	B	C	D
40	4" (10.2 cm)	4" (10.2 cm)	36" (92 cm)	28" (72 cm)
50	4" (10.2 cm)	4" (10.2 cm)	40" (102 cm)	28" (72 cm)
75	4" (10.2 cm)	4" (10.2 cm)	45" (115 cm)	31" (79 cm)

PRE-INSTALLATION INSPECTION:

Refer to pages 11 to 15 for packaging contents.

Inspect the shipping container and heater for any evidence of shipping damage. If heater damage is found, notify freight carrier and file a claim.


WARNING


If heater is damaged, DO NOT install.

Check that all parts and pieces are present and accounted for. Report any missing items to carrier or point of purchase at once,

Check that overall general appearance, source of fuel required and model numbers match unit requested. Report any discrepancy to carrier or point of purchase at once,

**THOROUGHLY INSPECT THE EQUIPMENT
IMMEDIATELY UPON ARRIVAL**

**OUR RESPONSIBILITY FOR THIS SHIPMENT CEASED WHEN THE CARRIER.
SIGNED THE WAYBILL.**

If goods are received short or in damage condition, It is important that you notify the carrier and insist on a notation of the loss or damage across the face of the freight bill, otherwise no claim can be enforced against the transportation company.

If concealed loss or damage is discovered, notify your carrier at once and request an inspection. This is absolutely necessary. A concealed damage report must be made within 15-days of delivery of shipment Unless you do this the carrier will not entertain any claim for loss or damage. The Agent will make an inspection and grant a concealed damage notation. If you give the Transportation Company a clear receipt for goods that have been damaged or lost in transit, you do so at your own risk and expense.

WE ARE WILLING TO ASSIST YOU IN EVERY POSSIBLE MANNER TO COLLECT CLAIMS FOR LOSS OR DAMAGE, BUT THIS WILLINGNESS ON OUR PART DOES NOT MAKE US RESPONSIBLE FOR COLLECTION OF CLAIMS OR REPLACEMENT OF MATERIAL. THE ACTUAL FILING AND PROCESSING OF THE CLAIM IS YOUR RESPONSIBILITY.

WE ARE NOT RESPONSIBLE FOR FREIGHT DAMAGED IN TRANSIT!

IF CONTENTS ARE DAMAGED,

EVEN THOUGH CARTON DOES NOT LOOK DAMAGED:

- A. MAKE CLAIM TO DELIVERY CARRIER AT ONCE**
- B. SAVE CARTONS FOR INSPECTION BY CARRIER**

A) CAL-40A-10' (3.m)
Preassembled Model
(For two piece model see page 13 for details)


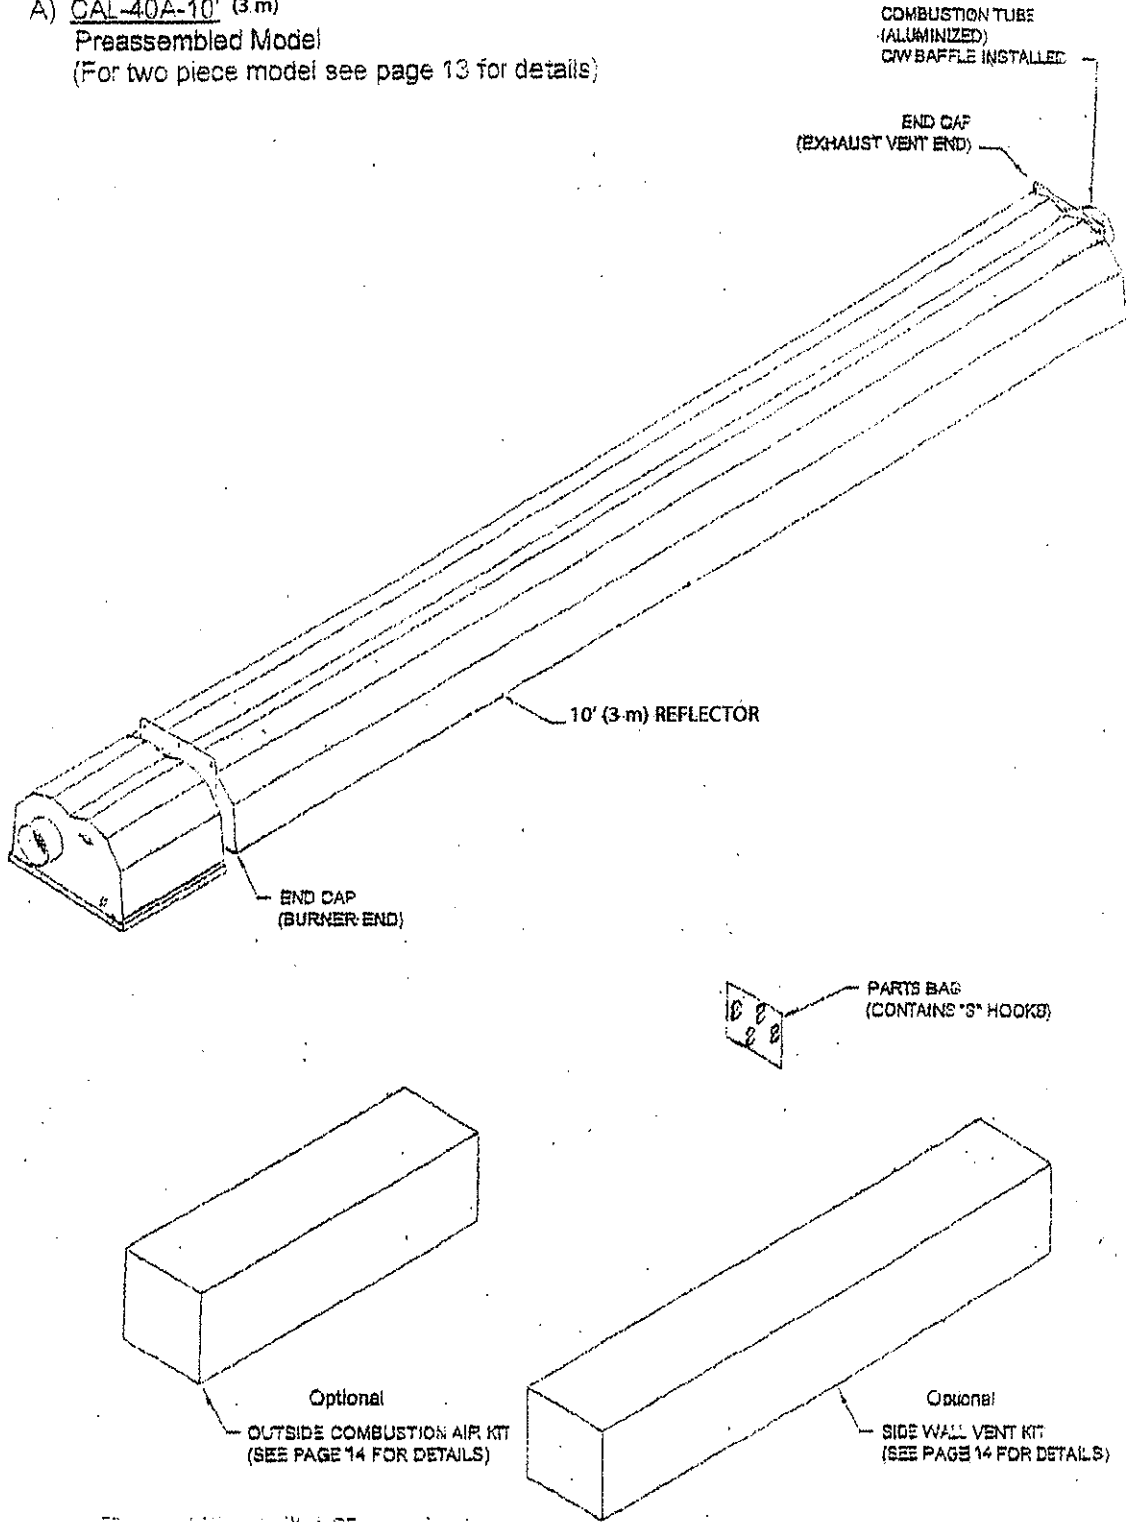



FIGURE #6 CAL-40A-10' (3 m) ASSEMBLED MODEL

B) CAL - 50A - 15' (4.16 m)

12

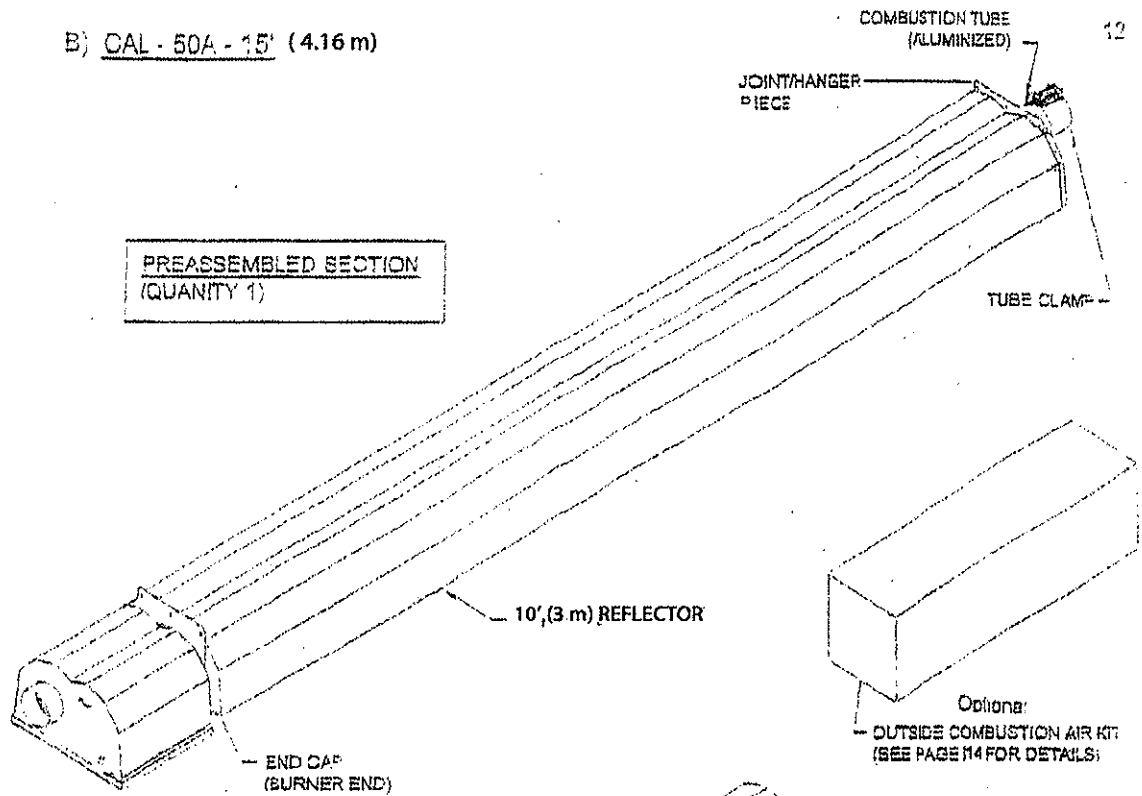


UNASSEMBLED PIECES

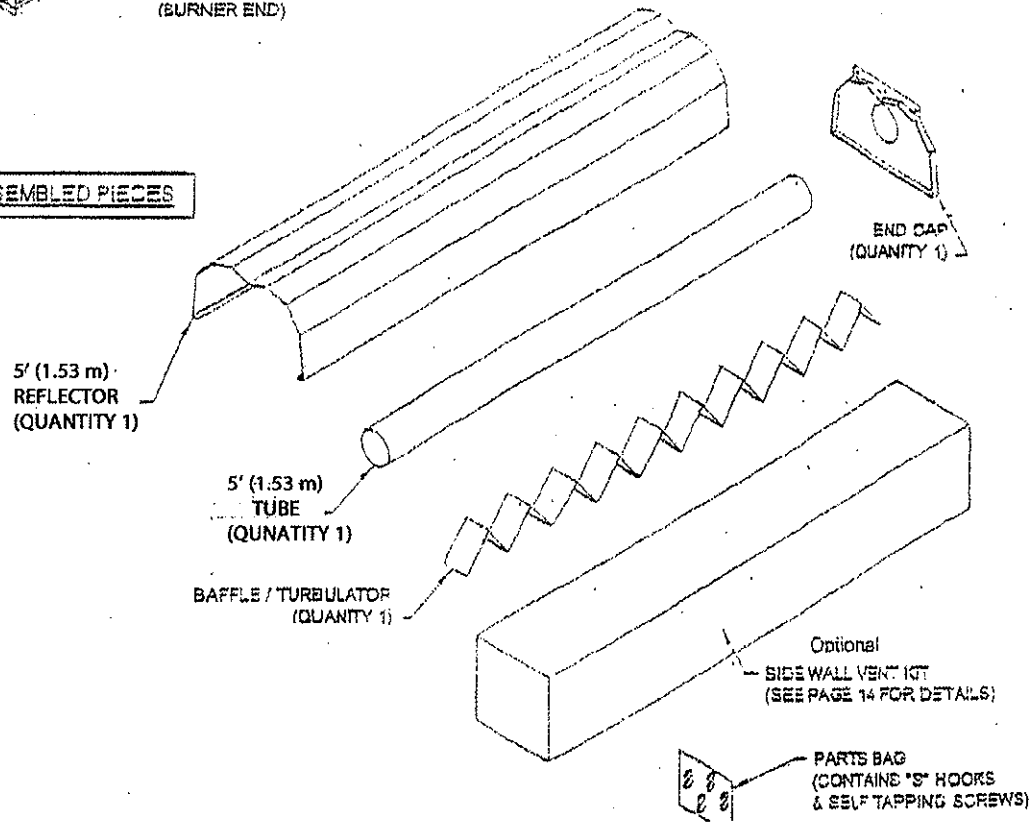

C) CAL-40A-10' (3 m)
(Two piece model)
OR
CAL-75A-20' (6.1 m)

PREASSEMBLED SECTION
(QUANTITY 1)


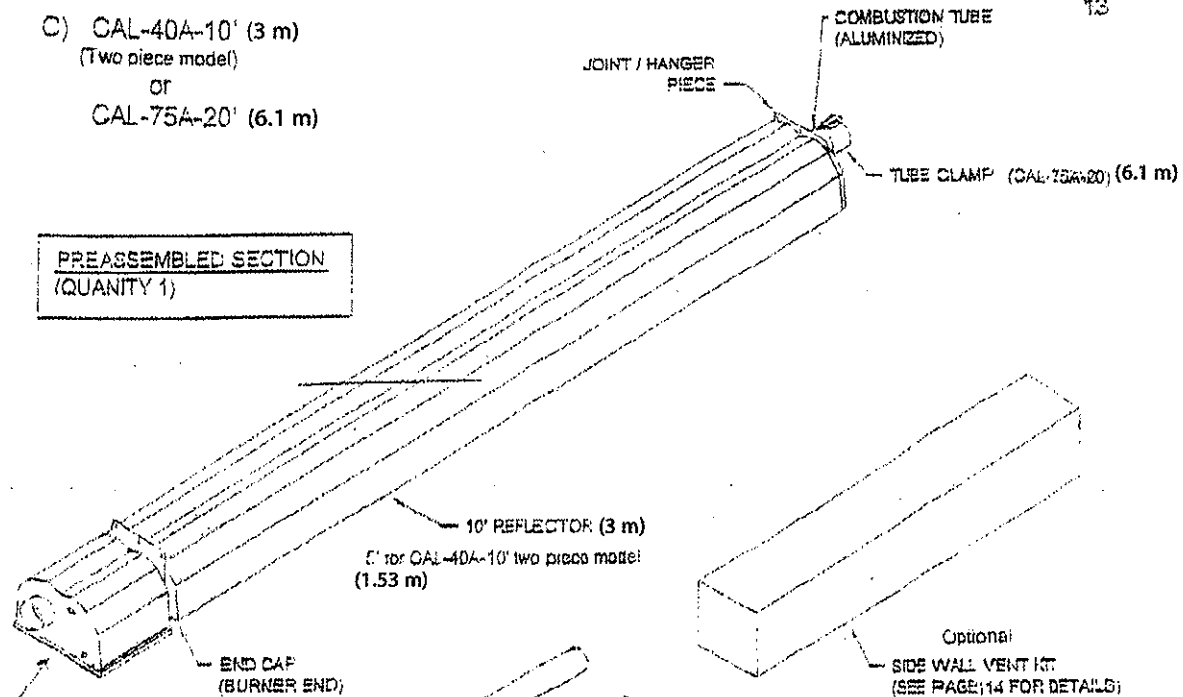


Attach burner head to reflector kit
(CAL-40A-10' two piece construction only)
(3 m)


CAL-40A-10' (3 m) TWO-PIECE

CAL-75A-20' (6.1 m)

UNASSEMBLED PIECES

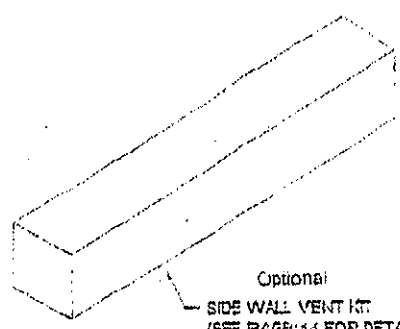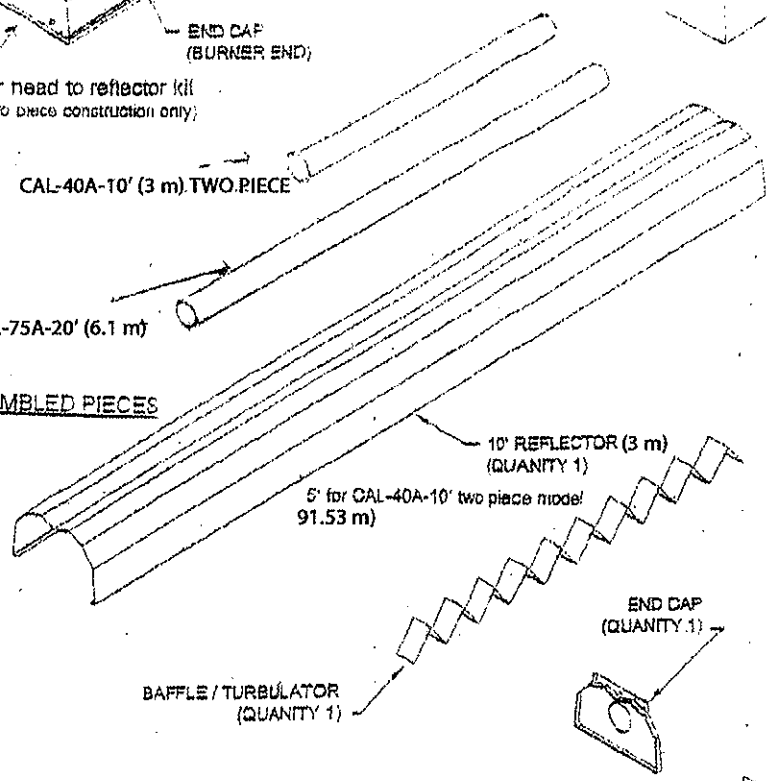


Optional
SIDE WALL VENT KIT
(SEE PAGE 14 FOR DETAILS)

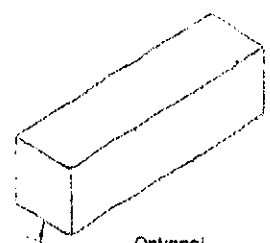

Optional
OUTSIDE COMBUSTION AIR KIT
(SEE PAGE 12 FOR DETAILS)




PARTS BAG
(CONTAINS "S" HOOKS
& SELF TAPPING SCREWS)
(QUANTITY 1)

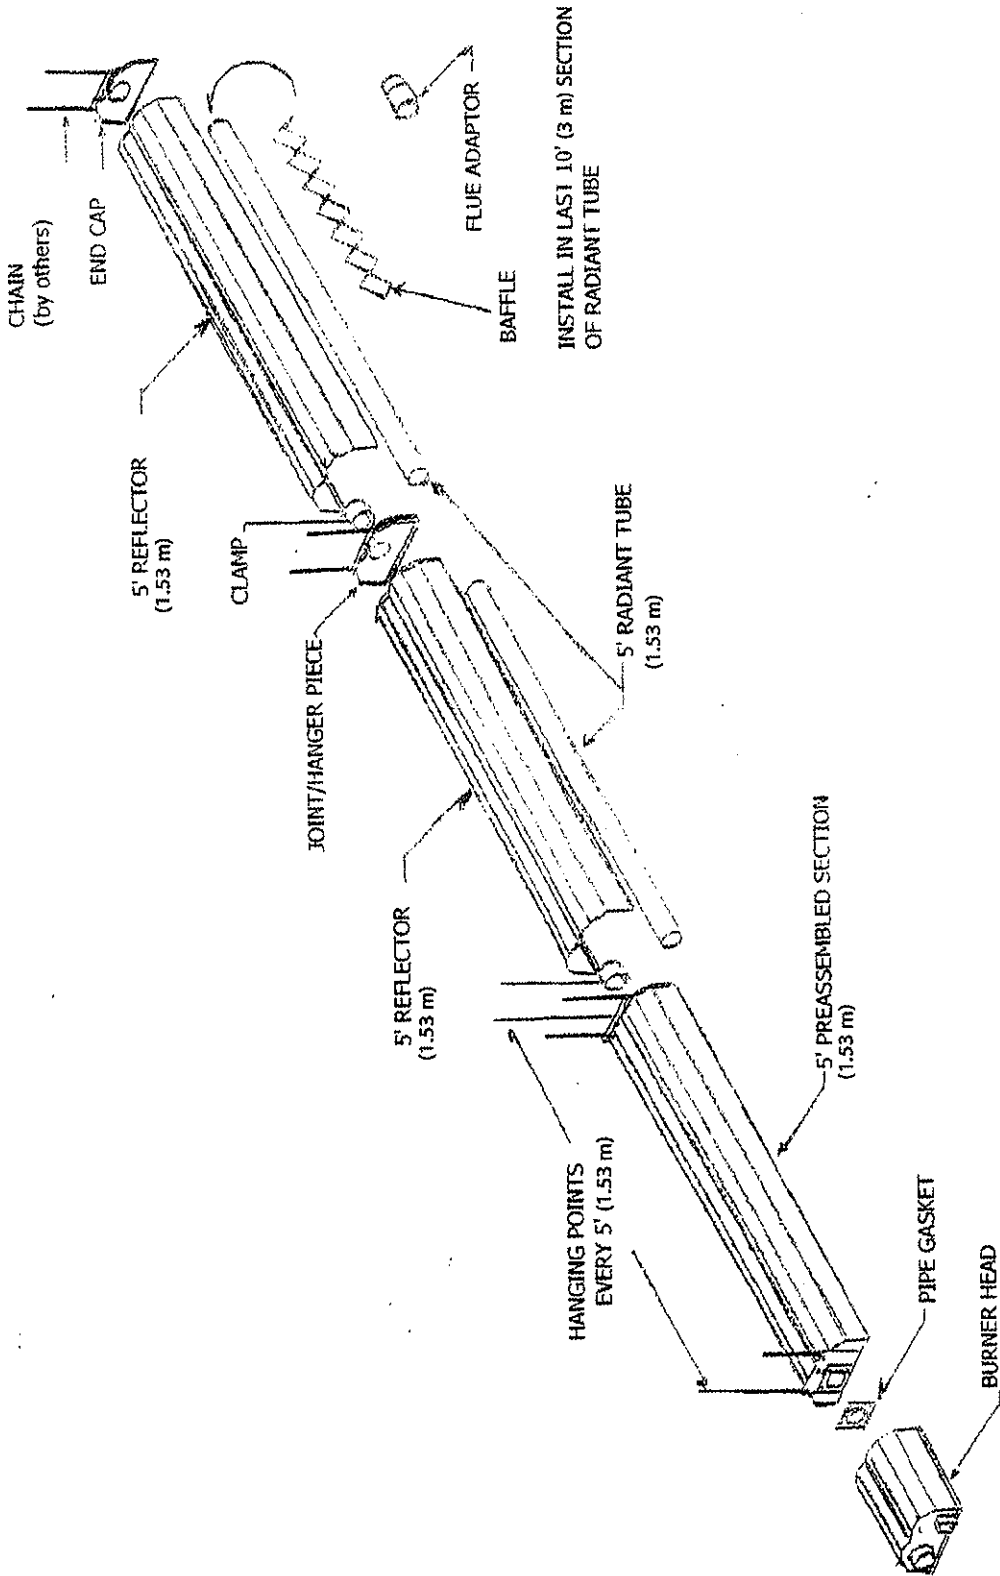

C) (1) CAL-50A-15' (4.16 m)
(Three piece model)

D) CAL -75A -20' (6.1 m)
Four Piece

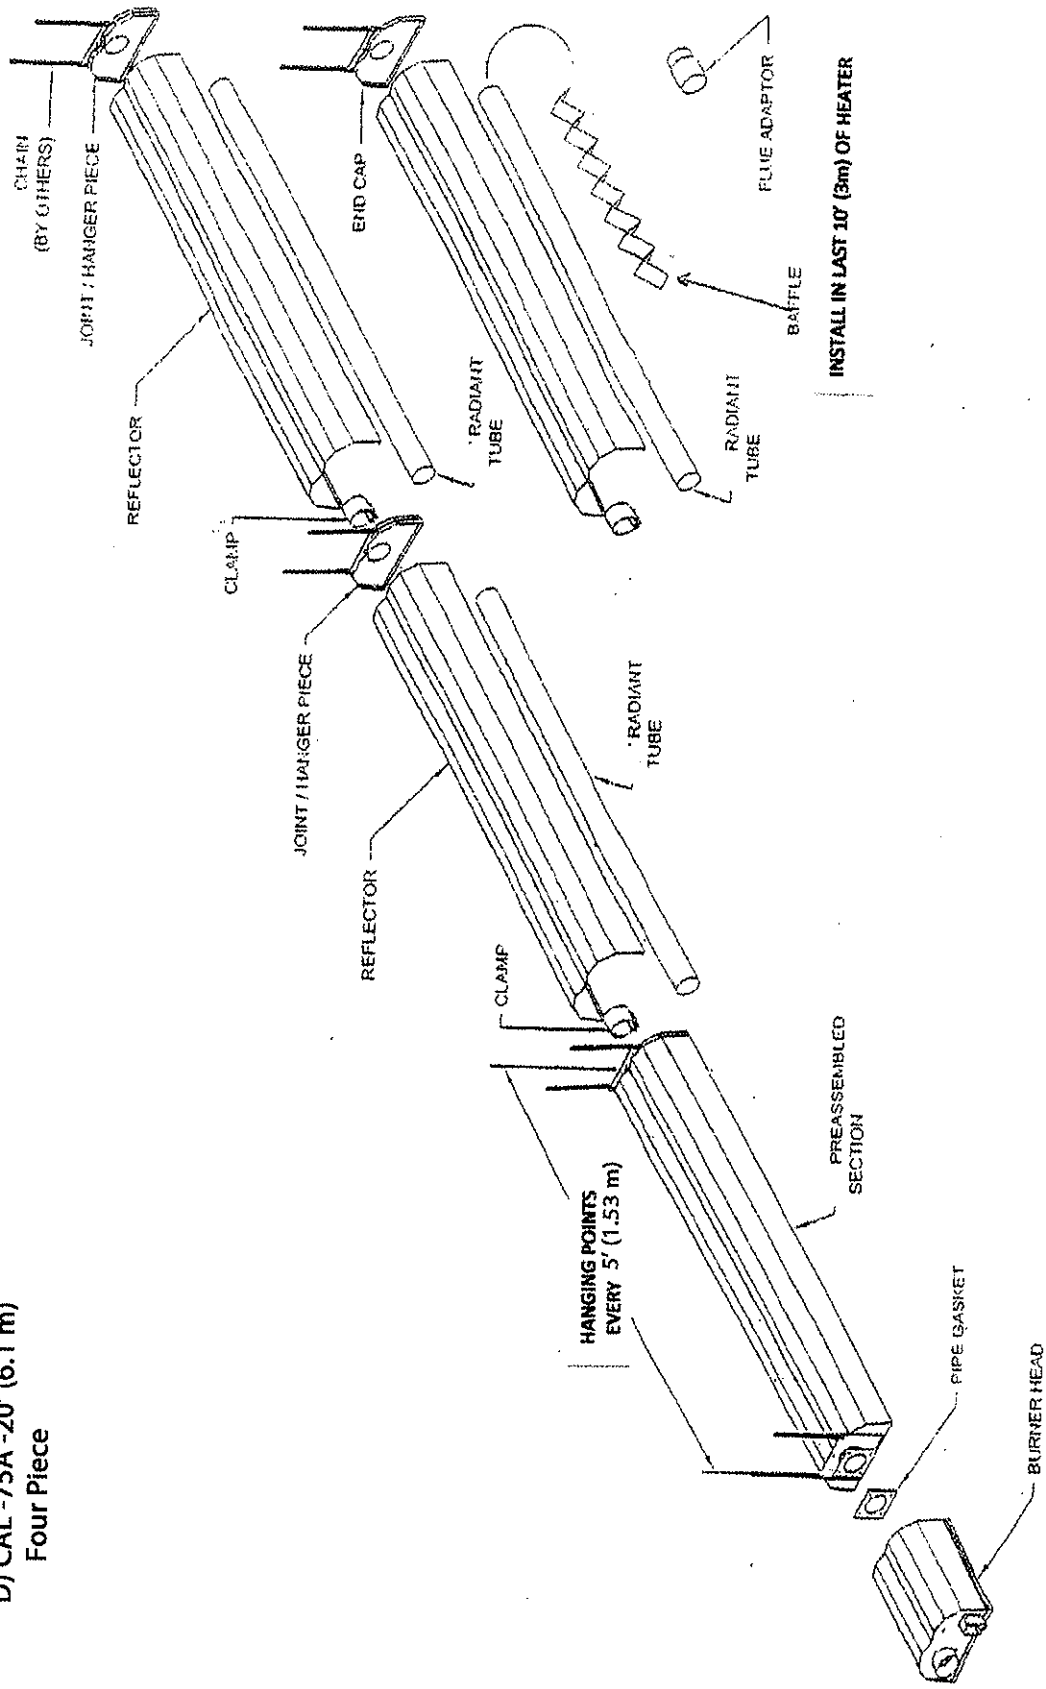

D) OUTSIDE COMBUSTION AIR KIT


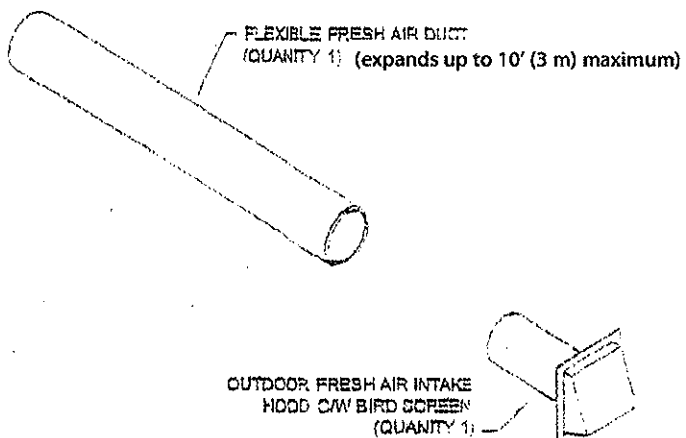


FIGURE #9. OUTSIDE COMBUSTION AIR KIT

E) SIDE WALL VENT KIT

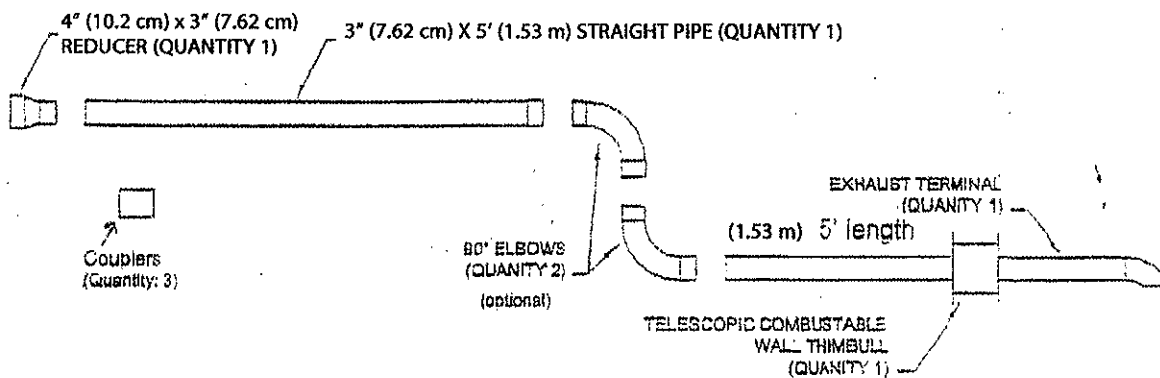

F) 90° ELBOW PACKAGE

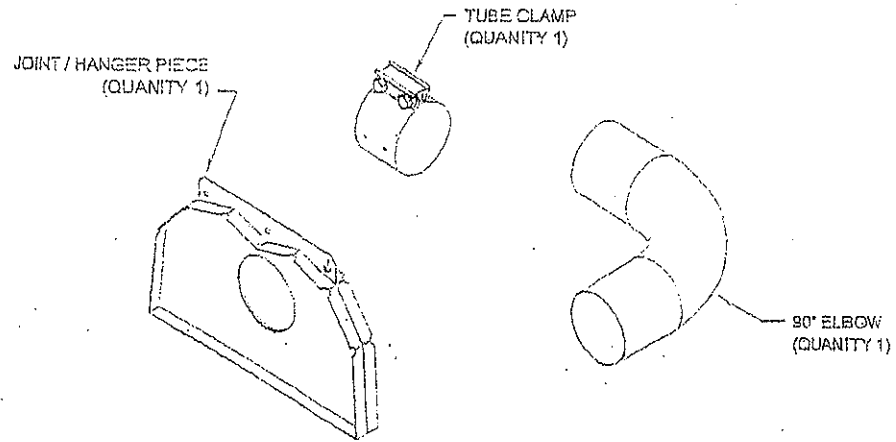


FIGURE #11. 90° ELBOW PACKAGE CONTENTS

G) 180° U-BEND PACKAGE



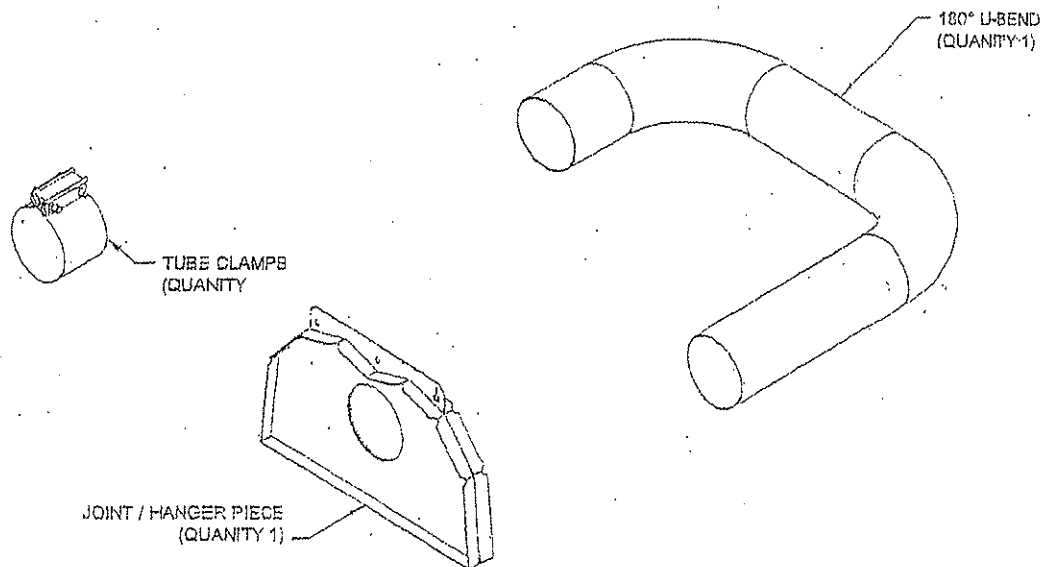


FIGURE #12. 180° U-BEND PACKAGE CONTENTS

PROTECTIVE SCREEN KIT

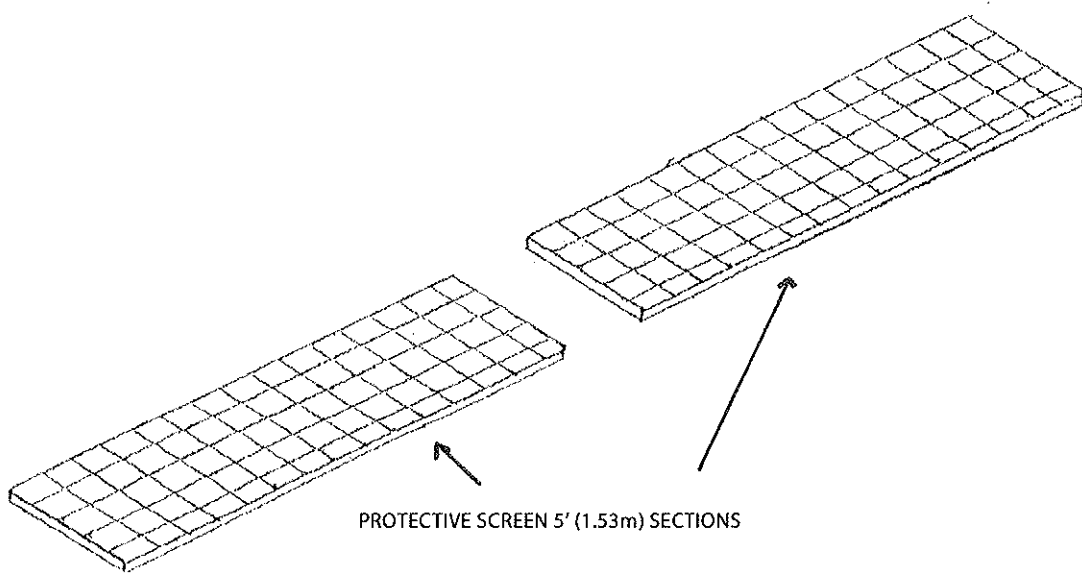

PROTECTIVE SCREEN INSTAIIATION

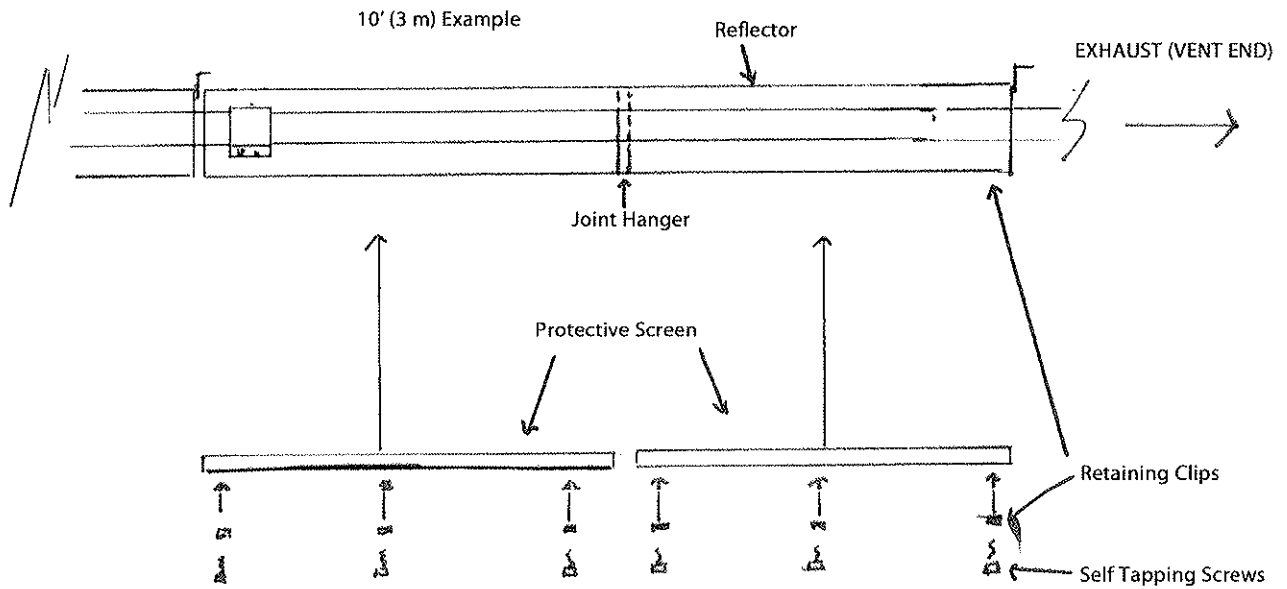

INSTALLATION:

Provide for adequate clearance around air openings into the combustion chamber, clearances from combustible material, provisions for accessibility and for combustion and ventilating air supply.

PLANNING:

- Familiarize yourself with the equipment and any accessories that you may require.
- Locate the area where unit is to be installed
- Locate area where any holes might have to be cut for:
 - a) Venting
 - b) Any gas piping requirements
- Make sure that there is no obstruction such as hidden electrical wiring, water lines etc... in the areas of concern.
- Locate the thermostat location.



WARNING

Observe minimum clearance to combustibles. REFER TO PAGES 8 & 9

- Locate a grounded, three prong electrical source.
- Measure required amount of various materials required to do the installation, and have these materials on site in an organized manner prior to commencement.

SUSPENSION OF HEATER:

Horizontal Installation:

Locate suspension points on ceiling or roof. Heater is suspended at standard 10' (3m) intervals (refer to page 17). Adequately secure chains to beam (refer to page 17 suspension points. Hang chains down from suspension point to desired level. Heater is to be hung level. NOTE: Front & rear endcaps are double chained.

Tilt Installation:

Refer to page 19, for 25° & 45° tilts. Locate suspension points as described above, Horizontal Installation. It is important NOT to over tilt the heater. Units are certified for installation up to 45°, however the **MAXIMUM** recommended tilt is 25°.




WARNING: It is the responsibility of the installer to use hanging chain that is a minimum of 2/0 or with a minimum support capacity of no less than 75 lbs. Also make sure all suspension points are adequate to support weight of heater and any accessories. Also make sure all S-Hooks are affixed properly and the open ends squeezed closed. If the suspension system fails, it is the responsibility of the installer. A failed suspension system can cause property damage, severe injury and/or death.

Refer to pages 20 to 28 for ASSEMBLY OF COMPONENTS and ASSEMBLY OVERVIEW.

FIGURE #12A. TYPICAL GARAGE INSTALLATION

TYPICAL GARAGE INSTALLATION
(Plan view)

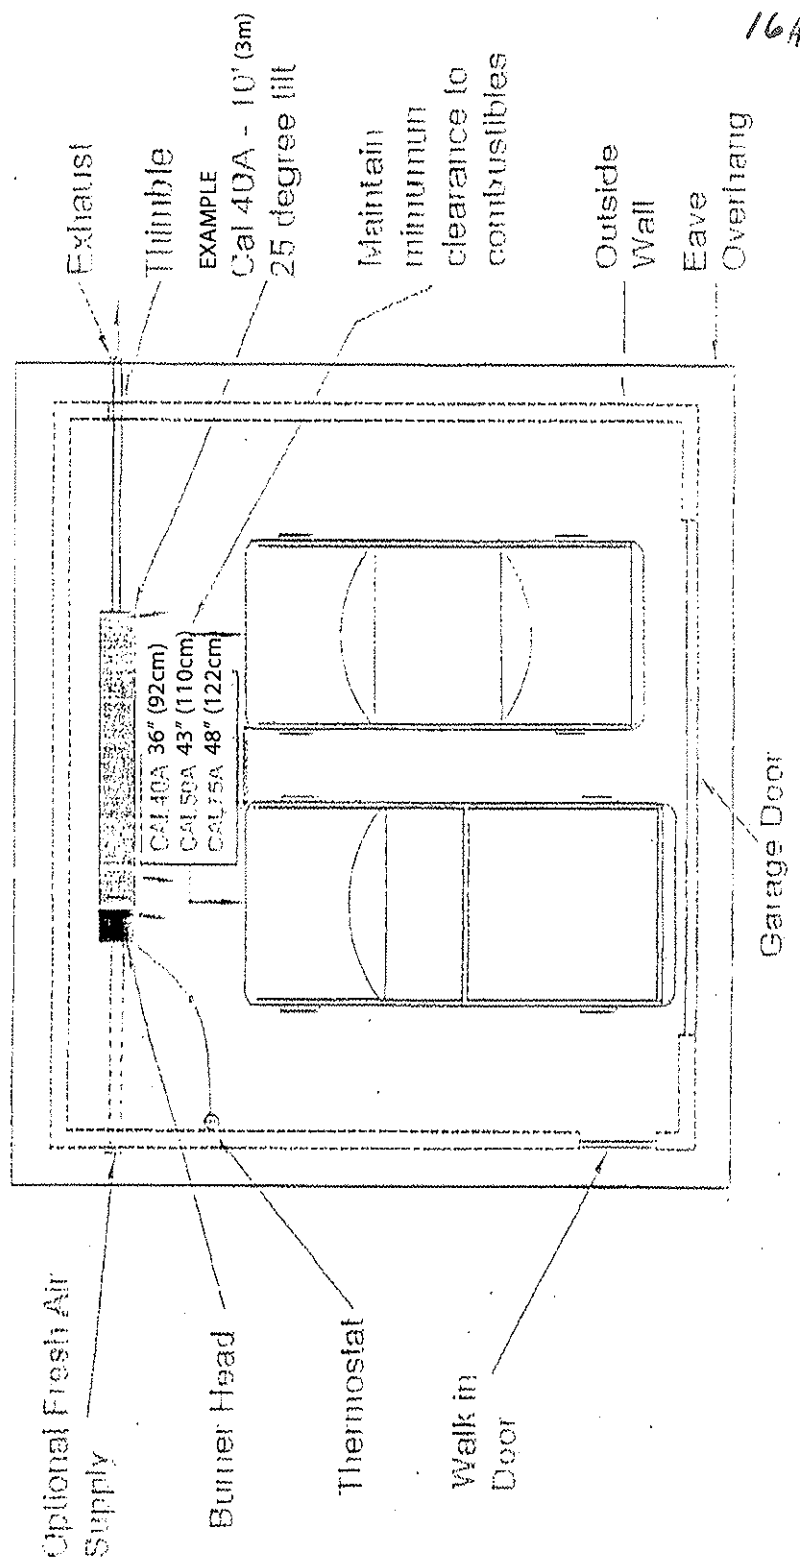

A) SUSPENSION POINTS


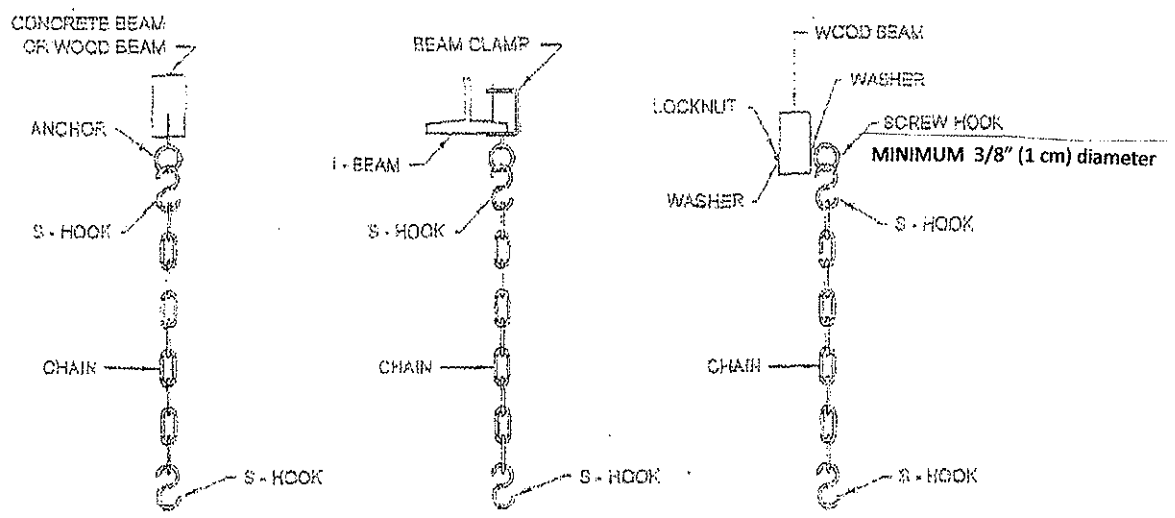


FIGURE #30. EXAMPLE SUSPENSION DETAILS

B) HORIZONTAL INSTALLATION

SUSPENSION LOCATIONS
10' (3m) REFLECTOR PACKAGE

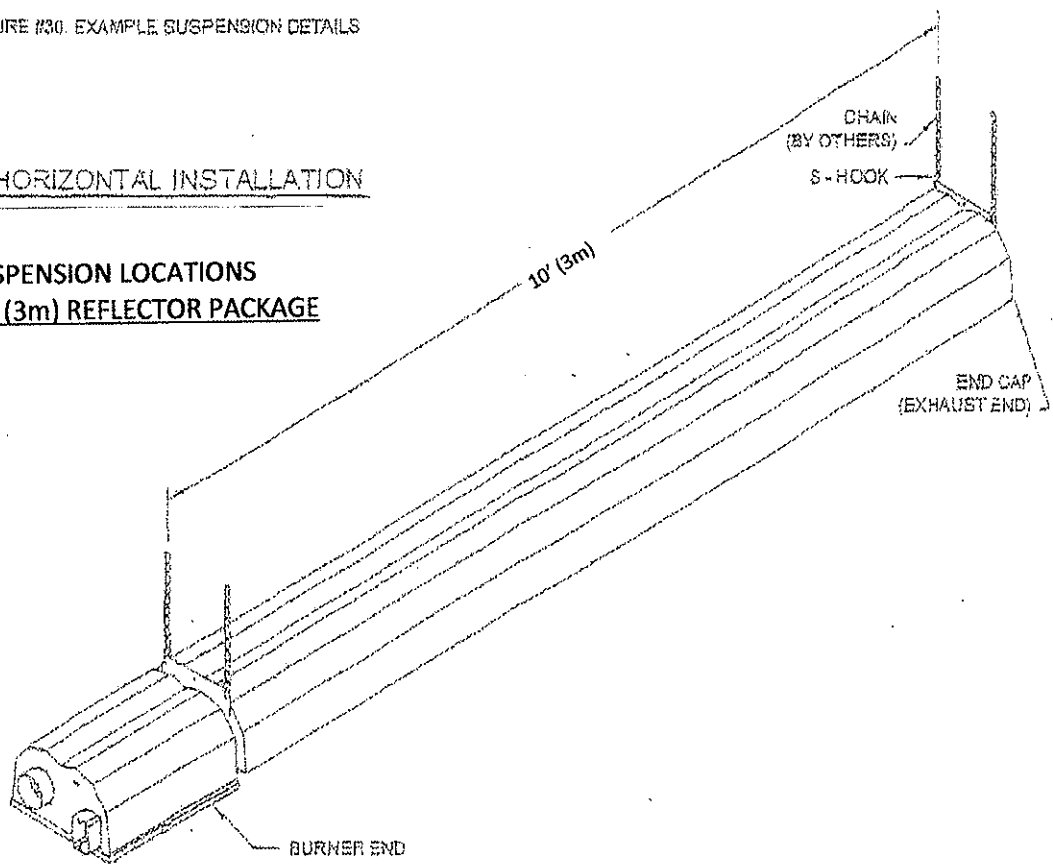

C) HORIZONTAL INSTALLATION

Suspension Locations
10' (3m) to 20' (6.1m) Reflector Packages

Note: 15' (4.6m) kit has 3 sections
20' (6.1m) kit has 4 sections

2nd Section 10' (3m) Example
Reflector Kit

5' (1.53 m)

5' (1.53 m)

CHAIN

JOINT / HANGER PIECE

END CAP
(EXHAUST END)


S - HOOK

BURNER END

FIGURE #15. HORIZONTAL INSTALLATIONS -


D) 25° TILT (ALL LENGTHS)

NOTE: 25° Tilt is the maximum recommended tilt for most tilt installations.

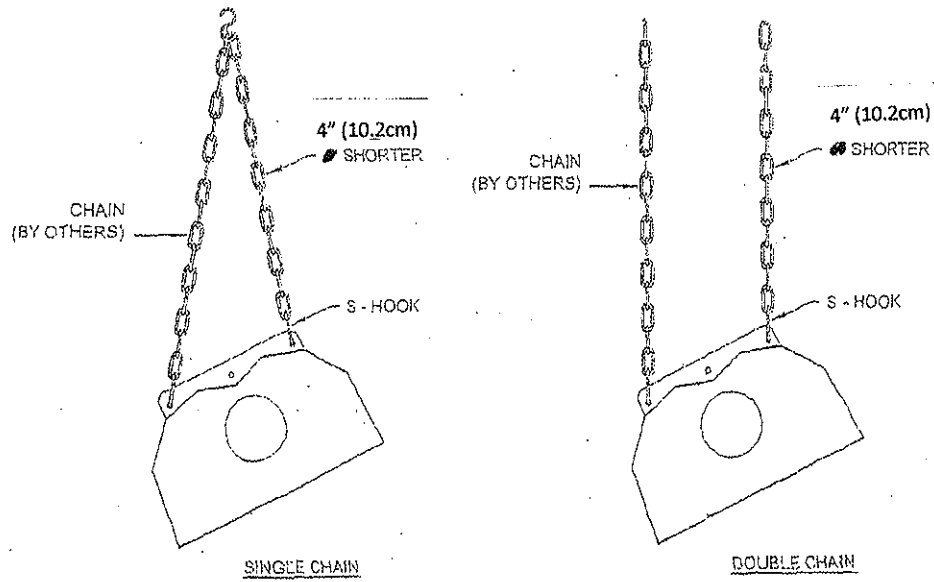

E) 45° TILT (ALL LENGTHS)

NOTE: 45 degree tilt is **NOT RECOMMENDED**. This angle of tilt causes the ambient air to form a convection current over the tube. The net effect of this action is reduced infrared output (decreased heating capacity) as well as decreased exhaust temperature which may increase the chance of condensation of combustion by-products.

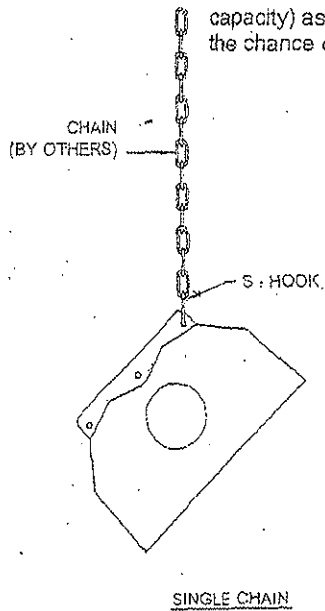

ASSEMBLY OF COMPONENTS

Refer to text & figures in section titled ASSEMBLY OVERVIEW
Refer to COMPONENT ASSEMBLY (see pages 21 to 28)

CAL-40A-10' (3m) TWO PIECE

- 1) Attach burner head to 5' (1.53 m) preassembled reflector section via bolts and washers
- 2) Assemble two piece baffle by inserting end with locking tabs into receiving end at 90° angle then rotating 90° until tabs are locked and baffle is in a straight line
(see figure 22 page 23). Set these baffles aside. They must be installed in the tube in the last 10' (3 m) of the heater. (see page 23)
- 3) Install S-hooks onto joint hangers. Hang preassembled burner box, combustion tube and reflector (first 5' (1.53 m) of heater from chains. (see warning on page 16)
- 4) Secure joint/hanger piece to one end of a reflector by overlapping onto joint/hanger piece 3/4 inch (see page 21) and securing via provided self tapping screws.
- 5) Attach the above mentioned reflector to the pre-assembled joint/hanger by overlapping reflector on hanger and securing via provided self-tapping screws. (see page 21)
- 6) Hang assembly from suspended chains via 'S' hooks, installed from ceiling trusses (see warnings on page 16)
- 7) Install radiant tube by positioning one end into the joint/hanger and butting the other end to the previously installed radiant tube. Secure with clamp and self-tapping screws.

IMPORTANT: Make sure to secure clamp to tube via self-tapping screws.
(see diagram 19 on page 21)

- 8) Secure remaining joint/hanger pieces to reflectors as per item #4.
- 9) Install baffle assembly into the last (exhaust – vent end) 10' (3 m) of the heater. (see page 23)
- 10) If side wall venting, install side wall vent adaptor/reducer and continue with the installation of the venting.
- 11) If venting through the roof, install optional flue/vent adaptor and connect to approve "B" vent chimney system.
- 12) If required, install outside combustion air hood and ducting. (see page 29 & 30 for details)
- 13) Connect fuel supply (see pages 36 to 39)
- 14) Connect electrical supply and thermostat (see pages 42 to 46)

CAL-50A-15' (4.6m) THREE PIECE

- 1) Follow CAL-40A-10' (3 m) Two Piece instructions item #1 thru #8 and then repeat from #4 thru #8 for the remaining items.
- 2) Continue to item #9

CAL-75A-20' (6.1m) FOUR PIECE

- 1) Follow CAL-40A-10' (3 m) Two Piece instructions item #1 thru #8 and then repeat from #4 thru #8 twice for the remaining items.
- 2) Continue to item #9

JOINT HANGER TO REFLECTOR

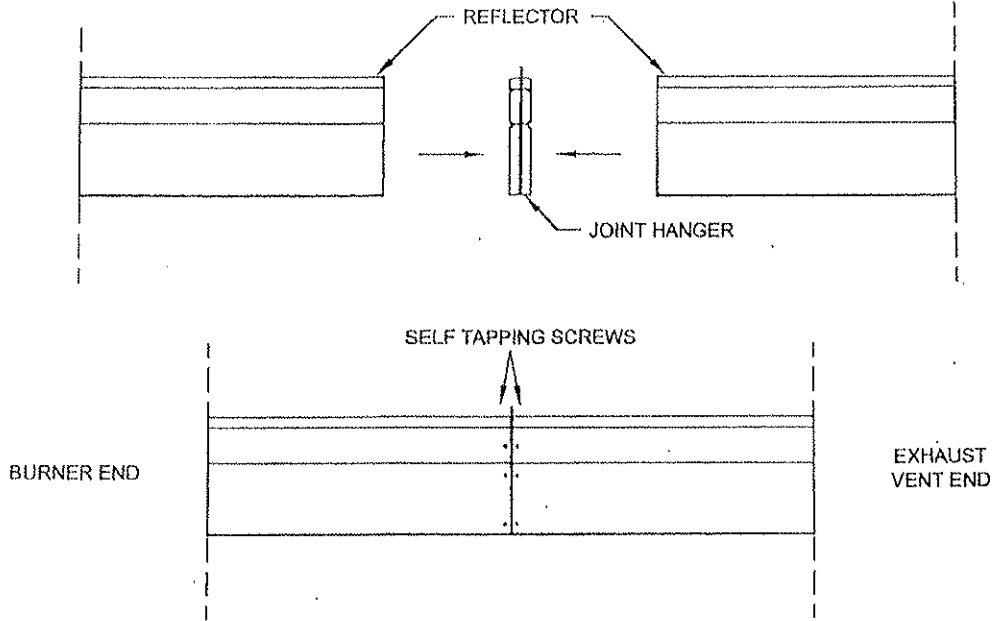


FIGURE #18. JOINT HANGER INSTALLATION

CLAMP COUPLER

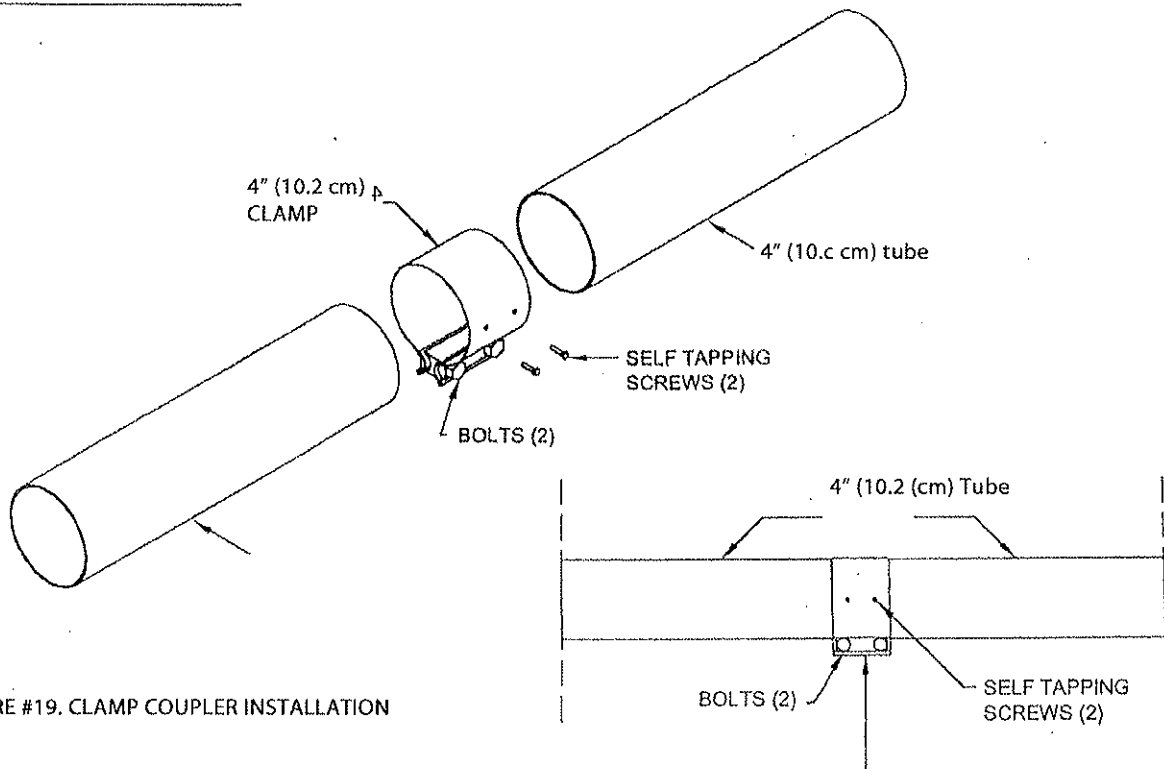


FIGURE #19. CLAMP COUPLER INSTALLATION

END CAP TO REFLECTOR

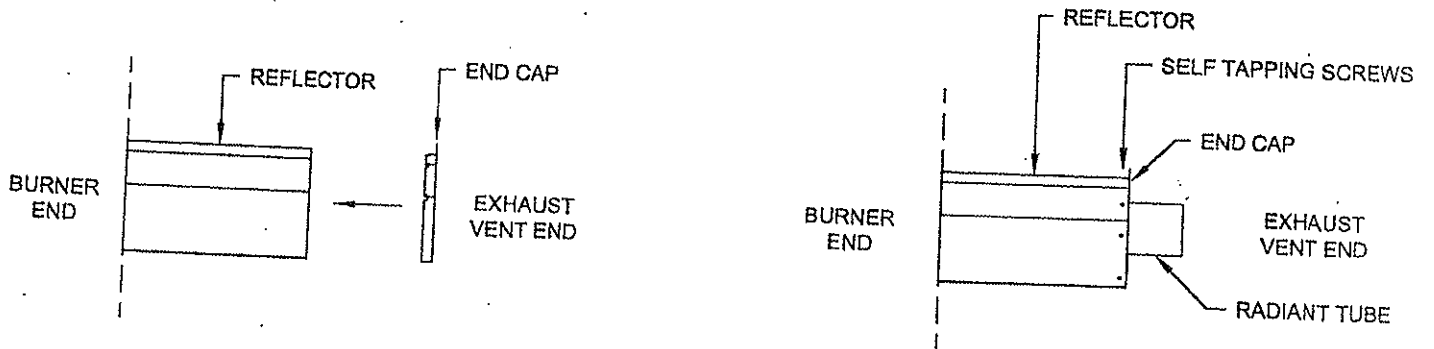


FIGURE #21. END CAP INSTALLATION

BAFFLE/TURBULATOR INSTALLATION

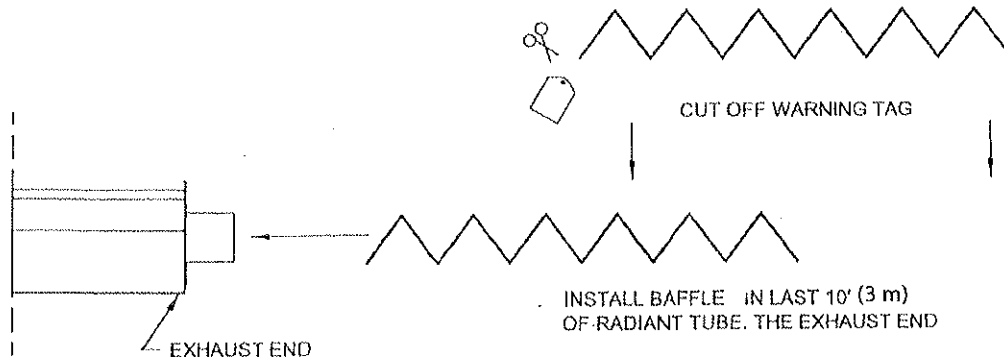


FIGURE #22. BAFFLE / TURBULATOR INSTALLATION

VENT ADAPTOR INSTALLATION

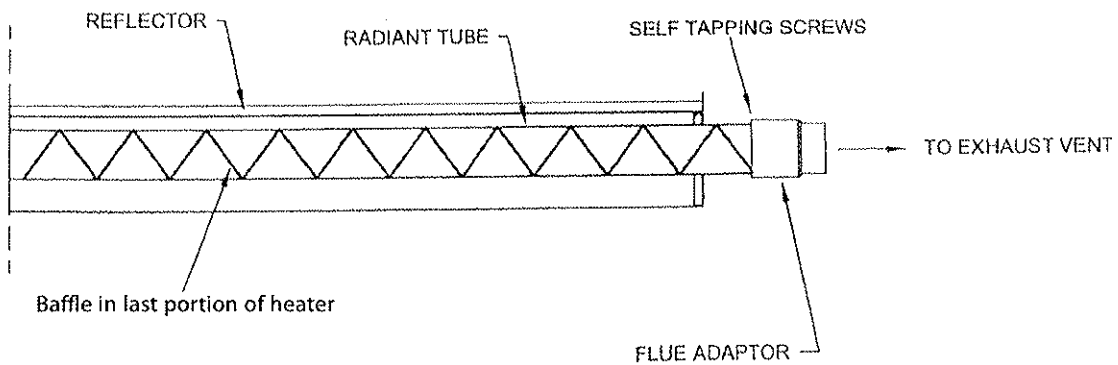


FIGURE #23. BAFFLE / TURBULATOR + FLUE ADAPTOR INSTALLATION

ASSEMBLY (OVERVIEW)

1. Verify length of reflector package to be installed. Read 'ASSEMBLY OF COMPONENTS', on page 20 and view related diagrams on pages 21 - 23.
2. Locate section of manual that corresponds with length to be installed. View the corresponding exploded view. The illustration contains the details required to install the unit.

Reflector Package Length	Corresponding Page
10' (3 m)	25
15' (4.6 m)	26
20' (6.1 m)	27

ASSEMBLY OF OPTIONS

Refer to section of manual containing accessories to be installed.

Optional Accessories	Corresponding Page
90° Elbow Kit	28
180° Elbow Kit	28
Combustion Air Kit	30
Sidewall Vent Kit	32
Outdoor Installation Kit	35
Low Voltage Thermostat	45
Line Voltage Thermostat	46

View exploded illustration, install accordingly.

90° ELBOW KIT


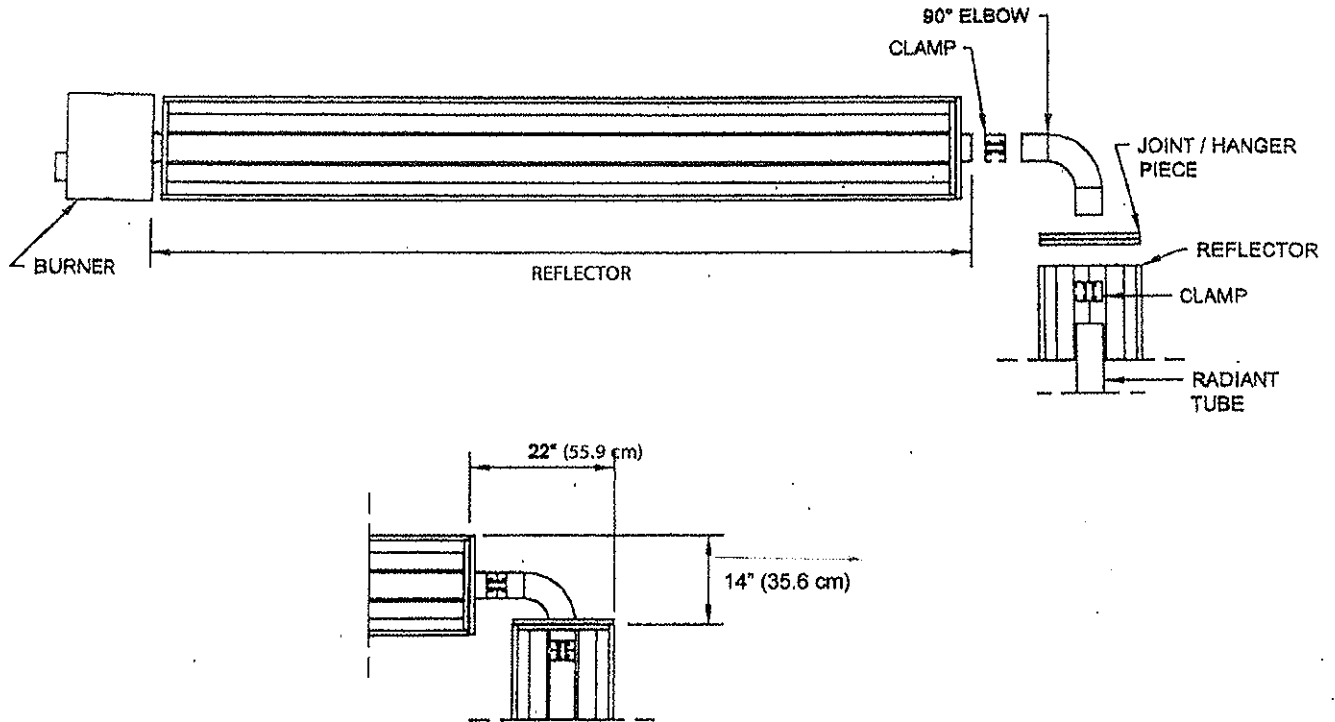


FIGURE #27. 90° ELBOW KIT INSTALLATION

180° U - BEND KIT

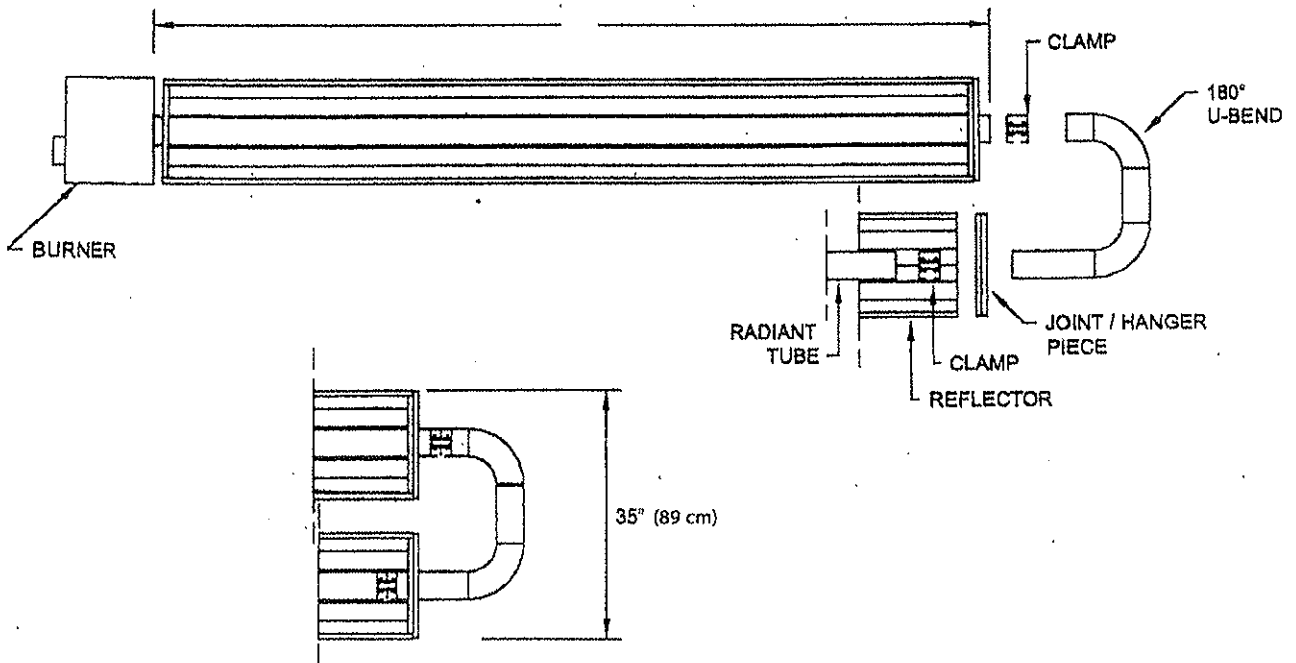

OUTSIDE COMBUSTION AIR SUPPLY (refer to page 30)

The heater must be installed in a location where there is adequate air supply for combustion to take place.

Outside Combustion Air is required for U. S. Residential Garage Heater Installations, and optional for others. Outside air can either be ducted directly to the burner head or a 4" (10.2 cm) fresh air hood can be installed in the wall in such a fashion that the outside air can enter the space that the heater is installed in.

In other installations: If the heater is: 1) Installed in a tightly closed building that has less than one (1 sq inch (2.54 sq cm) of free opening for each 1,000 b.t.u input of heater or less than 100 square inches of free opening. Or, 2) If the building has contaminants in the air or the are is under a slight negative pressure.


Provisions for adequate combustion and ventilation air must be provided. Adequate clearances around air openings into the combustion chamber must be provided.

NOTE: Maximum Duct Length is 15' (4.6 m). This length can have up to 2 - 90° elbows included, thereafter, deduct 10' (3 m) for every 90° elbow and 5' (1.53) for every 45° elbow used.

If condensation occurs, insulate duct or contact distributor for alternate methods for your installation. Slope duct down, away from burner box towards the combustion air intake hood. The combustion air intake hood must be installed at a height sufficient enough to prevent any blockage by snow.

**COMBUSTION AIR OPTION A
DUCTED**

HORIZONTAL

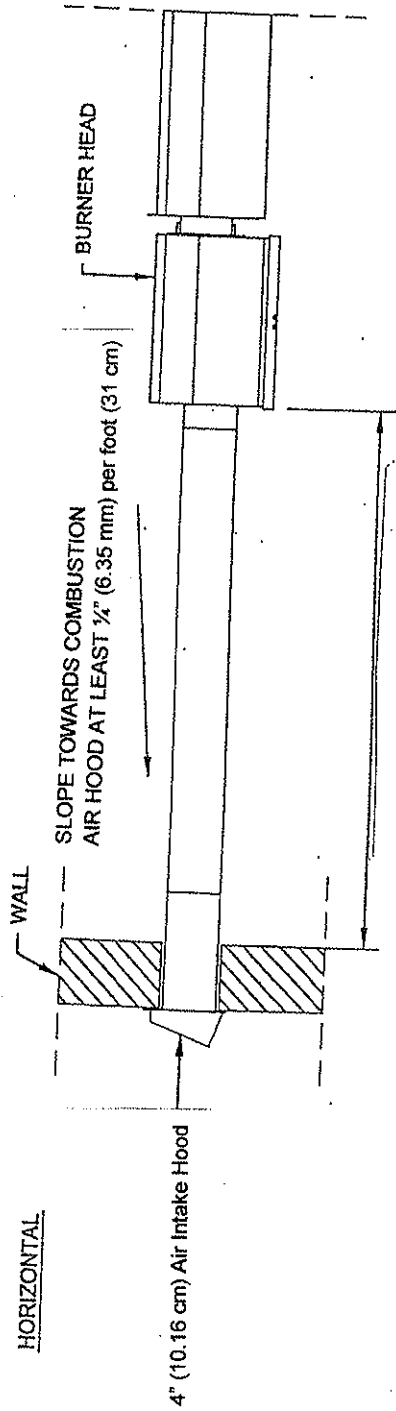

MAXIMUM LENGTH IS 15' (4.6 m)
INCLUDING 2 - 90° ELBOWS.
DEDUCT 10' (3m) FOR EVERY
ADDITIONAL 90° ELBOW AND 5 (1.5m)
FOR EVERY 45° ELBOW USED.

**COMBUSTION AIR OPTION B
UN-DUCTED**

VERTICAL

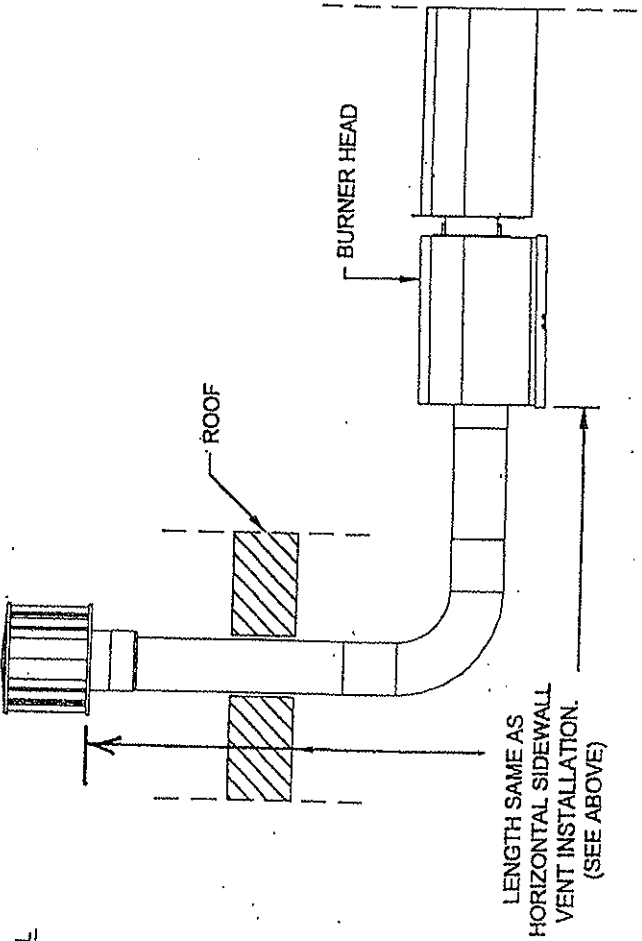
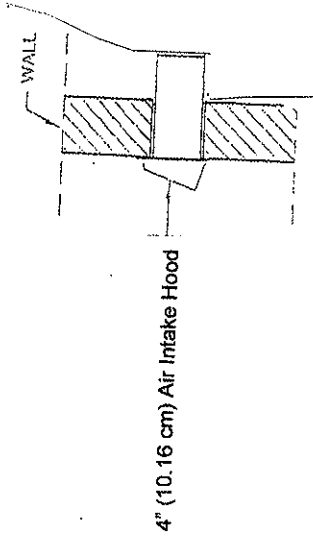



FIGURE #29. OUTSIDE COMBUSTION AIR SUPPLY

SIDE WALL VENTING

Clearance in accordance with local installation codes and the requirements of the gas supplier


Dégagement conforme aux codes d'installation locaux et aux exigences du fournisseur de gaz.

SELF TAPPING SCREWS - 2 PER JOINT, ONE PER SIDE
DO NOT INSTALL SCREWS ON BOTTOM OF VENT PIPE.

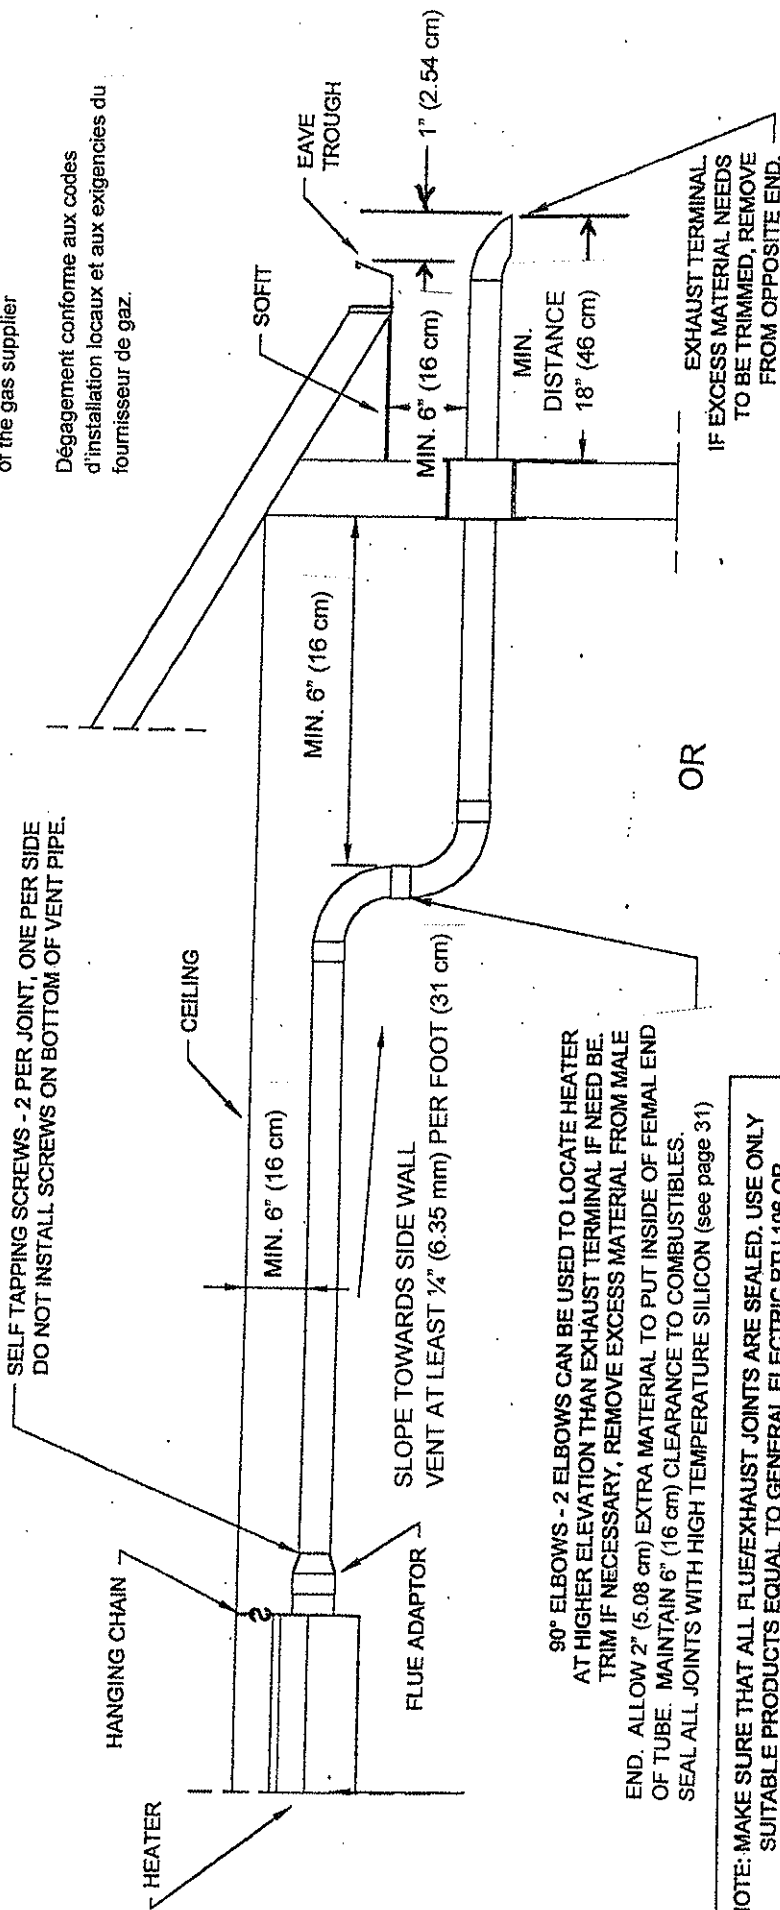

90° ELBOWS - 2 ELBOWS CAN BE USED TO LOCATE HEATER AT HIGHER ELEVATION THAN EXHAUST TERMINAL IF NEED BE. TRIM IF NECESSARY, REMOVE EXCESS MATERIAL FROM MALE END. ALLOW 2" (5.08 cm) EXTRA MATERIAL TO PUT INSIDE OF FEMALE END OF TUBE. MAINTAIN 6" (16 cm) CLEARANCE TO COMBUSTIBLES. SEAL ALL JOINTS WITH HIGH TEMPERATURE SILICON (see page 31)

NOTE: MAKE SURE THAT ALL FLUE/EXHAUST JOINTS ARE SEALED. USE ONLY SUITABLE PRODUCTS EQUAL TO GENERAL ELECTRIC RTU 108 OR PERMATEX FORM A GASKET RED HIGH TEMPERATURE SILICONE ADHESIVE SEALANT. (NOT SUPPLIED)

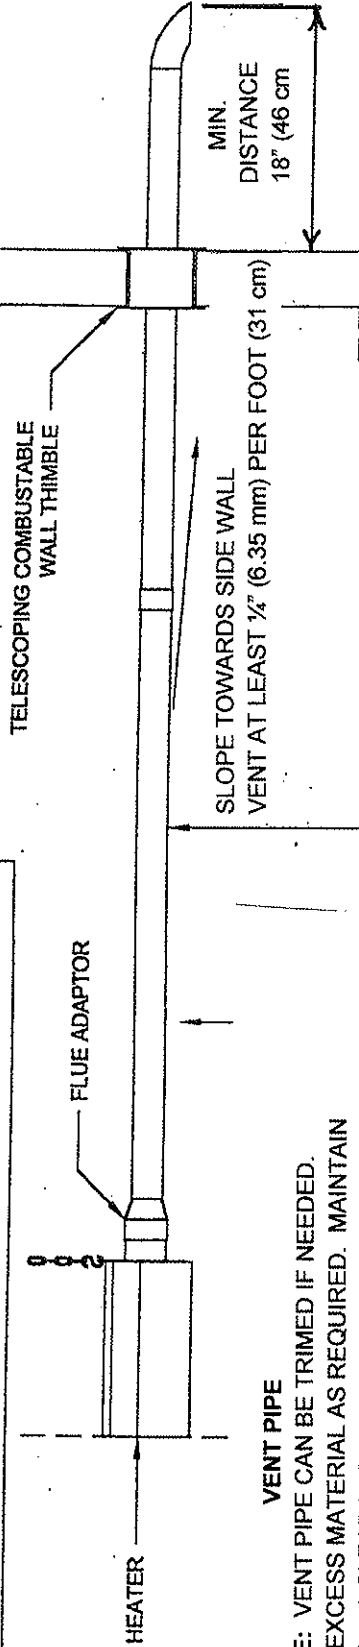

NOTE: VENT PIPE CAN BE TRIMMED IF NEEDED. CUT EXCESS MATERIAL AS REQUIRED. MAINTAIN 6" (16 cm) CLEARANCE TO COMBUSTIBLES. SEAL ALL JOINTS WITH HIGH TEMPERATURE SILICON (see page 31)

NOTE: ELBOWS ARE NOT REQUIRED IF HEATER AND VENT TERMINAL ARE TO BE INSTALLED AT SAME ELEVATION.
NOTE: ONE ELBOW CAN BE USED TO INSTALL HEATER 90° TO EXHAUST TERMINAL.

FIGURE #30. SIDE WALL VENTING, SINGLE UNIT

VERTICAL VENTING
(SIDE VIEW)


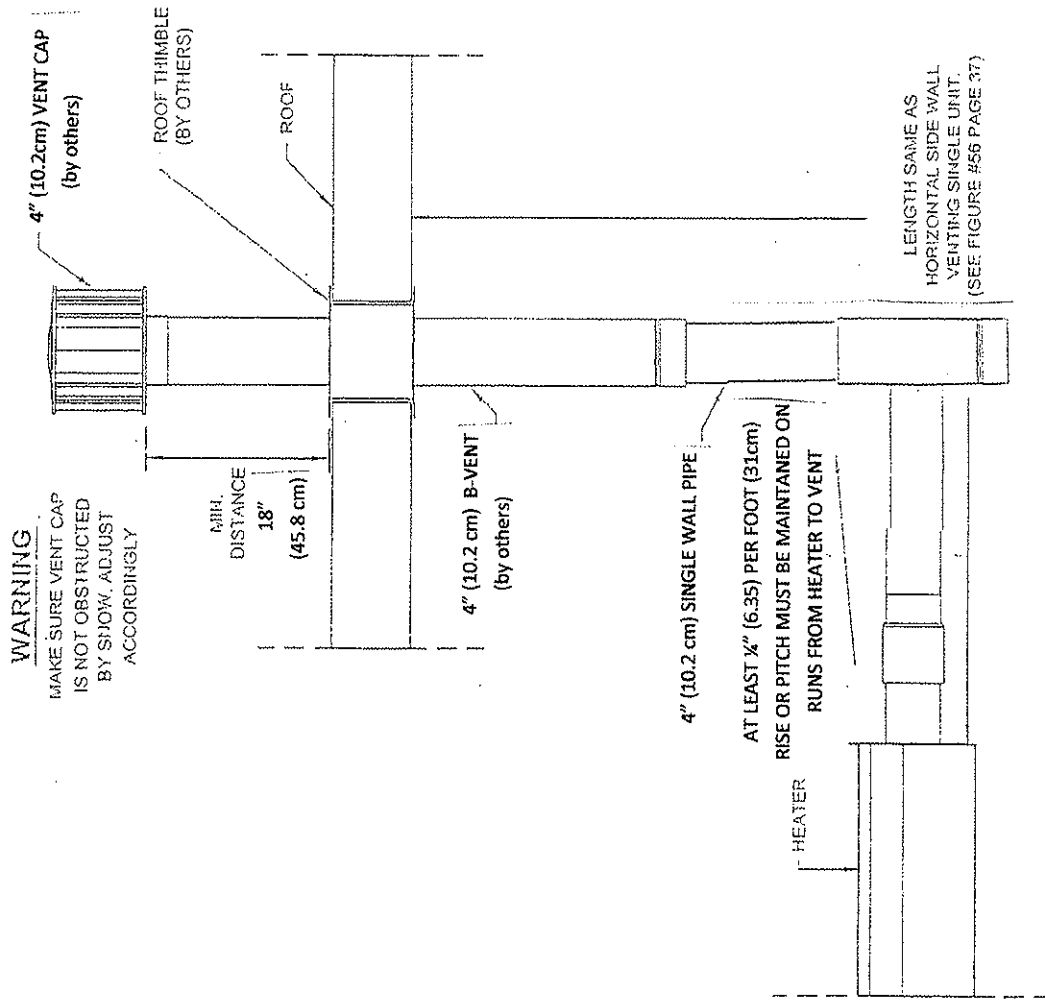


FIGURE #31. VERTICAL VENTING, SINGLE UNIT

COMMON
VERTICAL VENTING

WARNING

MAKE SURE VENT CAP IS NOT OBSTRUCTED BY SNOW. ADJUST ACCORDINGLY

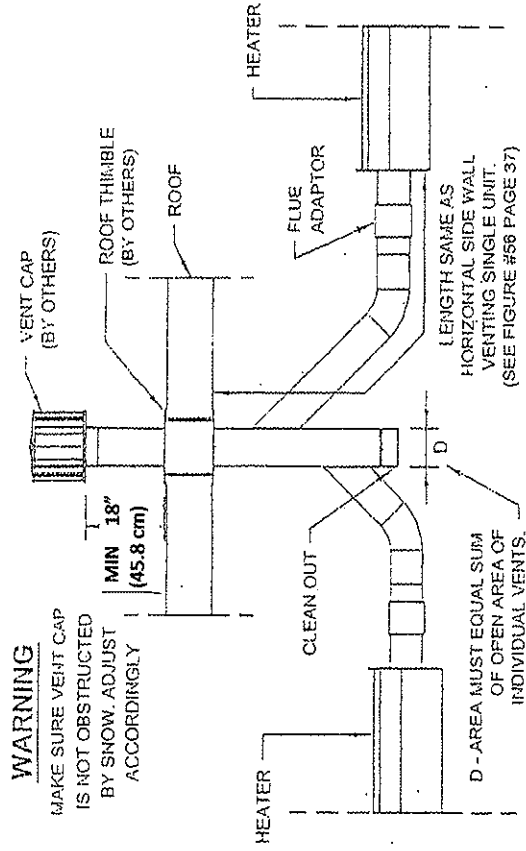

NOTE

UNITS THAT ARE COMMONLY VENTED MUST BE CONTROLLED BY THE SAME LINE VOLTAGE THERMOSTAT

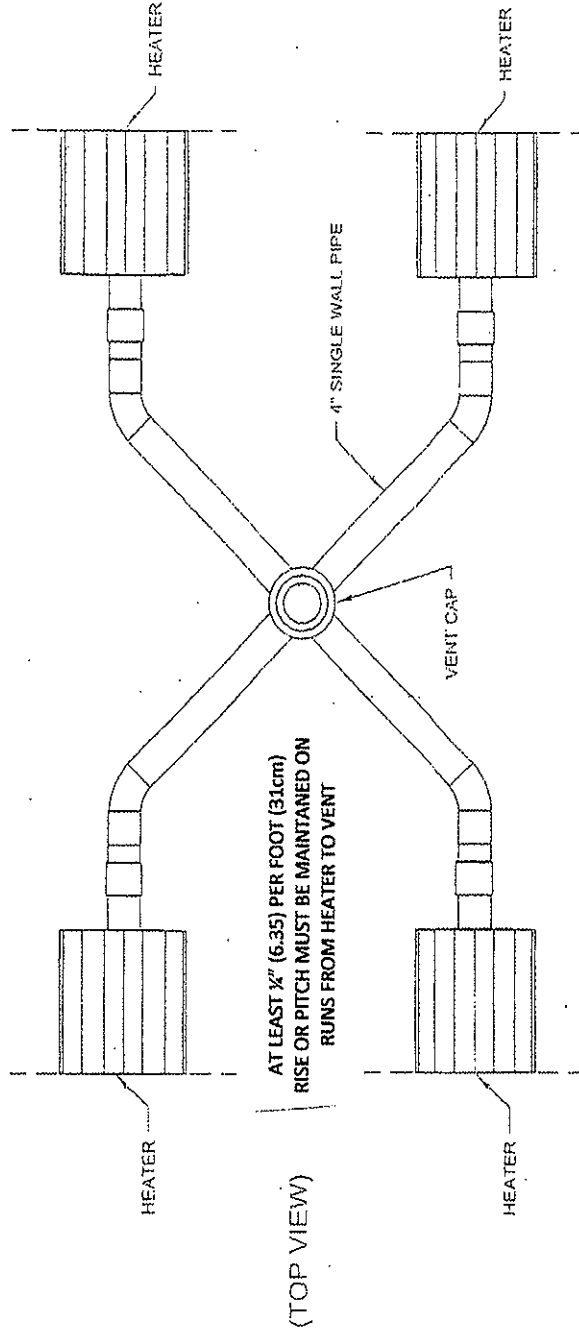


FIGURE #22. COMMON VERTICAL VENTING. TWO OR MORE UNITS INTO ONE COMMON VENT

FOR OUTDOOR APPLICATIONS

35

Units can be installed in outdoor locations.

Procedure:


- Attach Outdoor Air Intake Hood to air intake collar located on end of burner box with three (3) screws. Apply silicone adhesive to seal joint.
- Attach vent cap to exhaust end of heater with two (2) screws. Trim excess length from vent cap prior to installing into adaptor.

- **FUEL SUPPLY:** Via approved flexible connector for your area. (see page 39)
CANADA: *Natural Gas and Propane Installation Code, CSA B149.1* or latest edition.
USA: *National Fuel Gas Code, ANSI Z223.1/NFPA 54*, or latest edition.

- **Electrical connections for outdoor locations must be made in accordance with:**
ELECTRICAL GROUNDING:
CANADA: *Canadian Electrical Code, CSA C22.1* or latest edition.
USA: *National Electrical Code, ANSI/NFPA 70* or latest edition

In Canada: Electrical equipment and wiring shall comply with the applicable provisions of the current *Canadian Electrical Code, CAN/CSA C22.1, Part I and Part II, and CAN/CSA C22.2 No. 3, Electrical features of Fuel Burning Equipment.*

OUTDOOR INSTALLATIONS

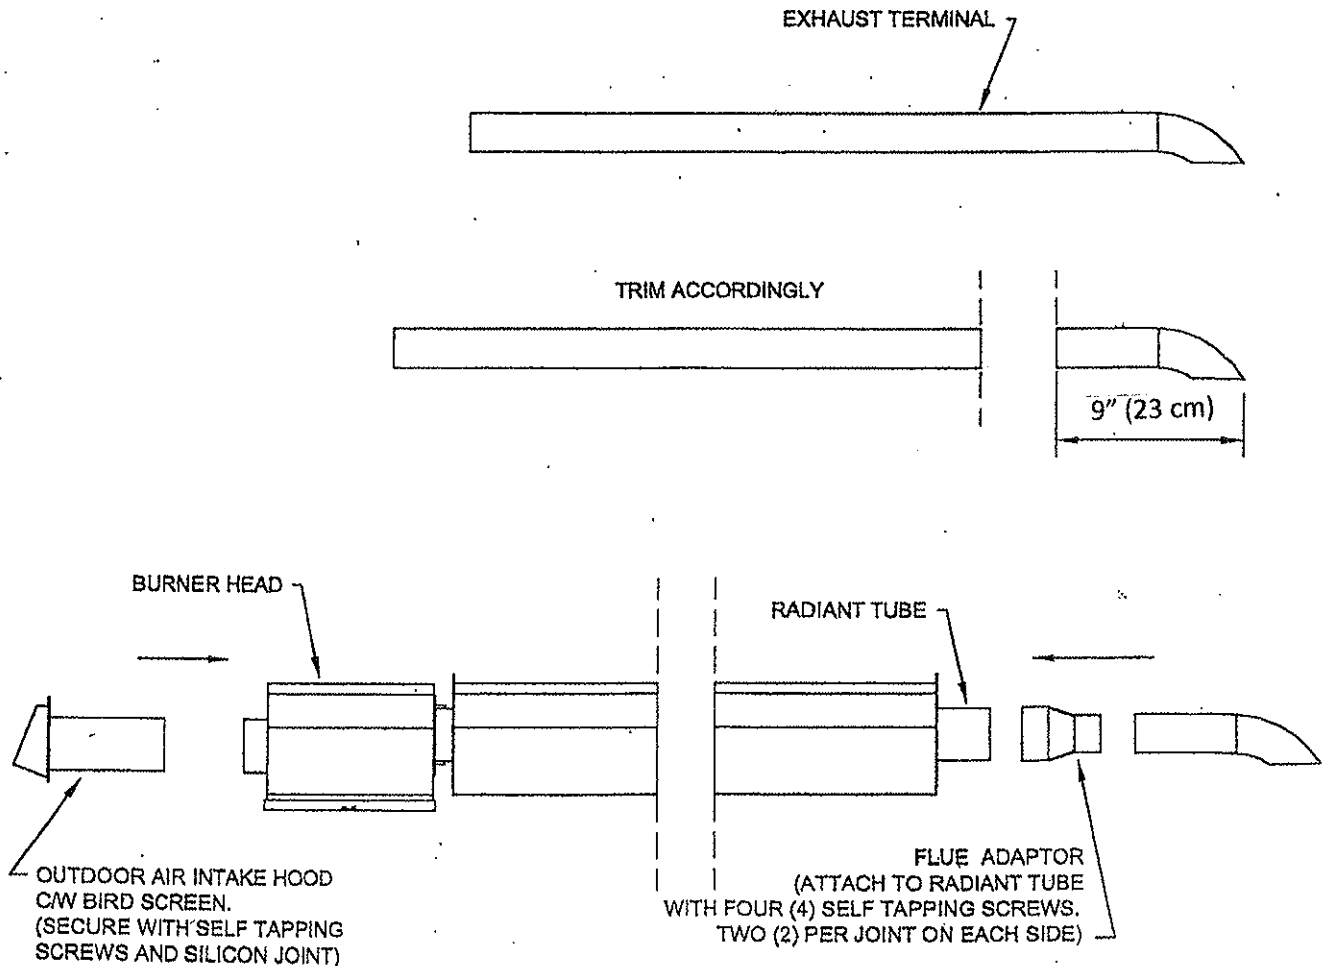



UNVENTED INSTALLATIONS: BROODER OR APPROVED INDUSTRIAL APPLICATIONS

⚠ WARNING: UNVENTED INSTALLATIONS ARE NOT APPROVED FOR RESIDENTIAL GARAGES. Do not operate heater in a residential garage application without an approved (exhaust) venting system installed and connected to the heater. When this heater is installed in a residential garage, the operation of the heater, when not connected to a properly installed and maintained venting system, can result in carbon monoxide (CO) poisoning and possible death.

Units may **ONLY** be installed in unvented installations such as brooder barns or industrial buildings if the following conditions are met:

- 1) A 4" (10.2 cm) diameter by 90° elbow must be attached to the flue, vent or exhaust end of heater and turned down pointing towards the floor. (see diagram #62)
- 2) The heater must be interlocked with an exhaust fan sized at 4 (four) CFM (114 Liters) for every 1000 Btu/hr input.
- 3) For **BROODER INSTALLATION ONLY**, the fan interlock is not required only if the maximum input does not exceed 30 Btu/hr per cubic foot (28.32 Liters) of volume of air in the building or the input specified by local codes or authorities.
- 4) **Maintain clearance to combustibles at exhaust (vent) end as noted below.**

UNVENTED INSTALLATIONS

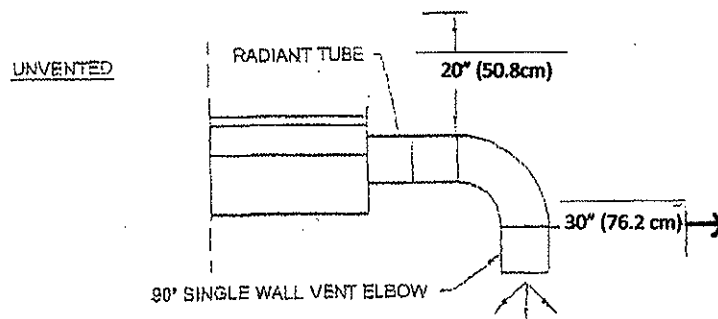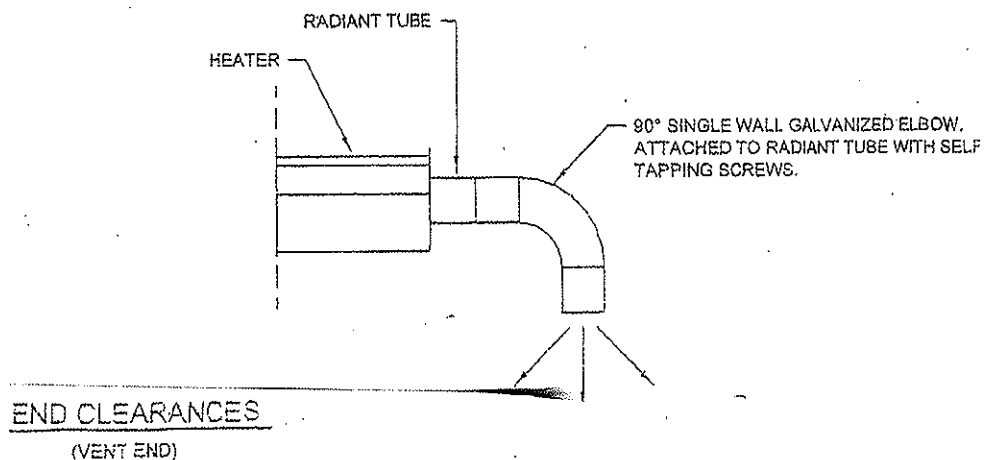

GAS PIPING

⚠ WARNING: All gas work **MUST** be performed by qualified/licensed personnel with adequate training and experience in this field.

⚠ WARNING: Use only the type of gas for which the heater is equipped. Using the wrong gas could create a hazard, resulting in damage, personal injury or death.

In Canada refer to the **Natural Gas and Propane Installation Code, CSA B149.1** or latest edition and in the USA, the **National Fuel Gas Code, ANSI Z223.1/NFPA 54** or latest edition.

- a) Adequate supply of gas to the heater is required for it to produce the designed amount of heat output. The gas meter must have a large enough capacity to handle the extra consumption required by the heater.
- b) The gas line must be of an adequate size to deliver the necessary amount of fuel to the unit.
- c) If there is any question concerning a) or b) call your local gas company for further assistance.
- d) Make sure that all piping is supported properly.
- e) All connections must have special sealing compound applied to them.
- f) A drip leg must be installed before the heater to prevent contaminating matter interfering with the operation of the unit.
- g) Check piping for leaks via pressure test. **Install a 1/8" (3.175 mm) N.P.T. plugged tapping** immediately ahead of heater in gas supply. Use this location for test gauge. A soap and water test can be used to verify location of any possible leak.

⚠ WARNING: Do not use an open flame for testing!

⚠ WARNING: For high pressure testing, disconnect heater(s) and shut-off cocks and cap off pipe for test. Failure to do so will damage pressure ratings on the above mentioned equipment and cause a complete replacement of these parts.

**WARNING**

The heater and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing for that system at test pressures in excess of $\frac{1}{2}$ psig.

The heater must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than $\frac{1}{2}$ psig.

Refer to pages 38 & 39 for gas connection to heater.

GAS CONNECTION

THE HEATER CAN BE CONNECTED TO THE GAS PIPING SYSTEM ONE OF THE FOLLOWING TWO (2) METHODS.

#1 HARD PIPE

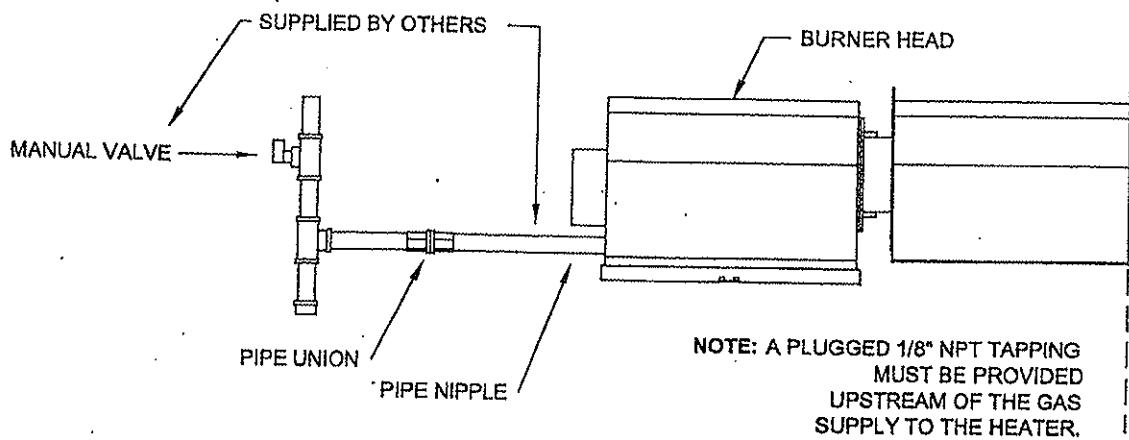


FIGURE #34. HARD PIPE GAS CONNECTION

#2 FLEX CONNECTOR


WARNING

FIRE AND/OR EXPLOSION HAZARD

Can cause property damage, severe injury or death.


With each firing cycle, the radiant pipe will expand and contract which can cause the burner head to move horizontally with reference to the gas supply line. If the gas connection is not installed in strict accordance as shown in figure 35, a gas leak can occur resulting in an extreme unsafe condition.

" Certified connectors are recommended to be installed as shown, (figure 35 page 39) in one plane, and without sharp bends, kinks, or twists. The gas take off must be parallel to the burner gas inlet connection. "
(CSA)

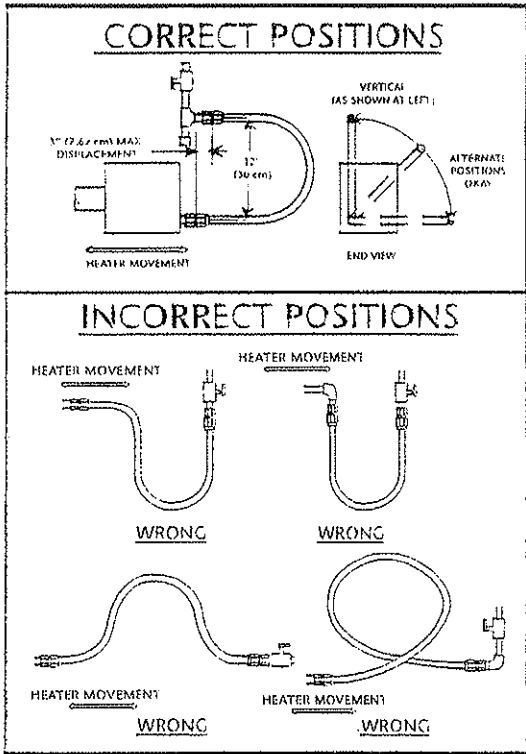

Installation Position Instructions

Connector Installation

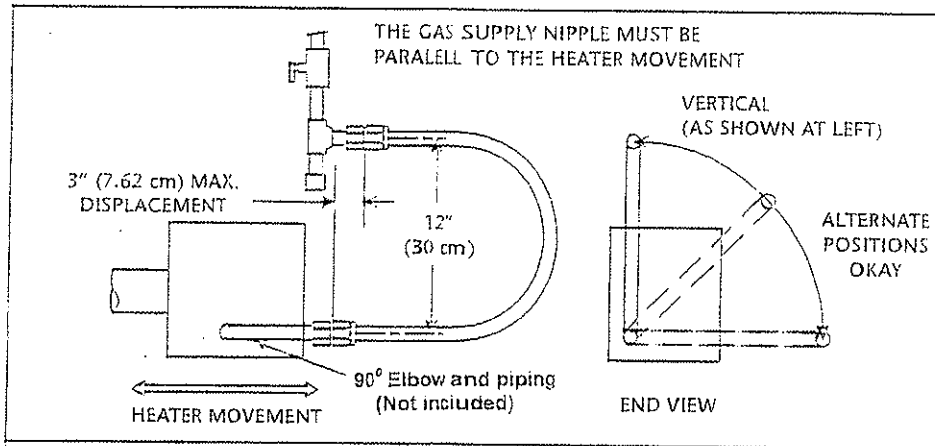

⚠ WARNING:

CONNECTOR MUST BE INSTALLED AS PER THE CONFIGURATION ILLUSTRATED ABOVE. USE ONLY THE 36" (90 cm) CONNECTOR OF 1/2" (1.27 cm) NOMINAL ID FOR LENGTHS FROM 10' (3m) TO 70' (21.3 m) AND A 36" (90 cm) CONNECTOR OF 3/4" (1.905 cm) NOMINAL ID FOR LENGTHS GREATER THAN 70' (21.3m).

IN CANADA: "A radiant tube-type infrared heater shall only be connected with a Type 1 hose connector that is (a) certified as being in compliance with the Standard for Elastomeric Composite Hose and Hose couplings for Conducting Propane and Natural Gas, CAN/CGA 8.1 and (b) of a length of 36 +/- 6" (90 +/- 15 cm)."

IN USA: Flexible Metallic connectors must be certified for use on a radiant tube-type infrared heater as per the Standard for Connectors for Gas Appliances, ANSI Z21.24/CSA 6.10. Connector is available from manufacturer.

FIGURE #35. GAS LINE CONNECTION WITH CERTIFIED FLEXIBLE GAS CONNECTION


WARNING


Natural gas heating values can vary widely. It is the responsibility of the Installer to make sure that the input rate to the heater as installed does not exceed the nameplate rating of the heater. Failure to do so can cause radiant tube failure, resulting in injury or death.

The maximum BTUH input capacity for each model is shown on the heater's rating plate and in the specification table. This input must not be exceeded.

The input shown may be used in geographic area where the elevation is from 0 to 4,500 feet (1372 m) above sea level (Canada only) in accordance with CGA 2.17-M91 (R2003), no change required to main orifice. For installations above 4,500 (1372 m) refer to *Natural Gas and Propane Installation Code, CSA B149.1* or latest edition, or contact the factory. In the USA: For installations above 2000 feet (610 m), the appliance shall be de-rated 4 percent (%) for each 1000 feet (305 m) of elevation above sea level. The Btu/hr input depends on the calorific heating value of the gas, orifice size, and manifold pressure. Orifice sizes are based upon values of 1000 Btu/hr/cu. ft (.028316 cubic meter) and 2500 Btu/hr/cu. ft. (.028316 cubic meter) for L.P.G. (propane)


WARNING


NEVER ATTEMPT TO MODIFY THIS HEATER — FIRE, EXPLOSION, OR ASPHYXIATION MAY RESULT. If malfunction is apparent, contact qualified service agency and/or gas utility for assistance.

How to Determine Gas Input Rate:

Where gas is metered, the input rate may be determined by the following method; Contact the gas supplier, public utility company or LP (propane) gas distributor to obtain the calorific gas value of the gas being used. When checking the gas input rate, any other gas burning appliances connected to the same meter must be completely off. The heater should be allowed to operate for 5 minutes before attempting to check the gas input rate.

To check flow rate, observe the one cubic foot dial on the gas meter and determine the number of seconds required for the dial hand to complete one revolution (seconds to flow one cubic foot).

To determine the number of seconds per cubic foot that is necessary to achieve the correct input rate, use the following formula:

$$\text{GAS VALUE} \times 3600 / \text{DESIRED INPUT} = \text{SECONDS NEEDED}$$

Example: 1000 BTU gas, heater input 100,000 BTUH

Seconds for one cubic foot = $1000 \times 3600 / 100,000 = 36$ seconds

If when clocking the meter, the one cubic foot dial makes a complete revolution in less time than was calculated that it should be derated. If it takes more time for the meter to make one revolution than was calculated, the unit is underfired.

The orifice size must be changed to correct an overfired or underfired condition. If it is determined that different orifices are needed, please contact your distributor for assistance in selecting the correct replacement.

ELECTRICAL CONNECTION

Refer to rating plate on heater for electrical specifications. All electrical connections must be made by a qualified/licensed experienced electrician.

Supply grounded, adequate electricity to the three prong electrical cord attached to the burner head.

WARNING: DO NOT operate heater until it has been thoroughly installed, inspected and is ready for initial fire-up.

NOTE: All Electrical connections and wiring must be made in accordance as follows:

CANADA: *Canadian Electrical Code, CSA C22.1* or latest edition.

USA: *National Electrical Code, ANSI/NFPA 70* or latest edition

In Canada: Electrical equipment and wiring shall comply with the applicable provisions of the current *Canadian Electrical Code, CAN/CSA C22.1, Part I and Part II, and CAN/CSA C22.2 No. 3, Electrical features of Fuel Burning Equipment.*

If any of the original wire as supplied with the appliance must be replaced, it must be replaced with wiring material having a temperature rating of at least 105 degree C (221 F).

This heater is equipped with a three-prong (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.

ELECTRICAL CONNECTION BURNER HEAD


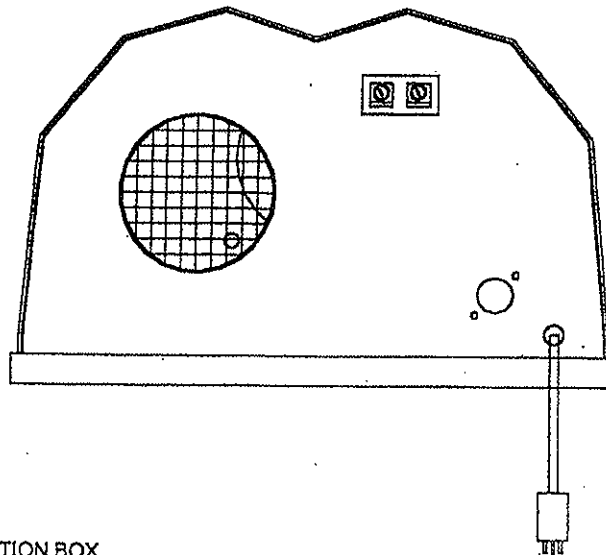


FIGURE #38. ELECTRICAL JUNCTION BOX

CAL WIRING DIAGRAM


FIGURE #39 SINGLE INPUT 120 VOLT WIRING DIAGRAM

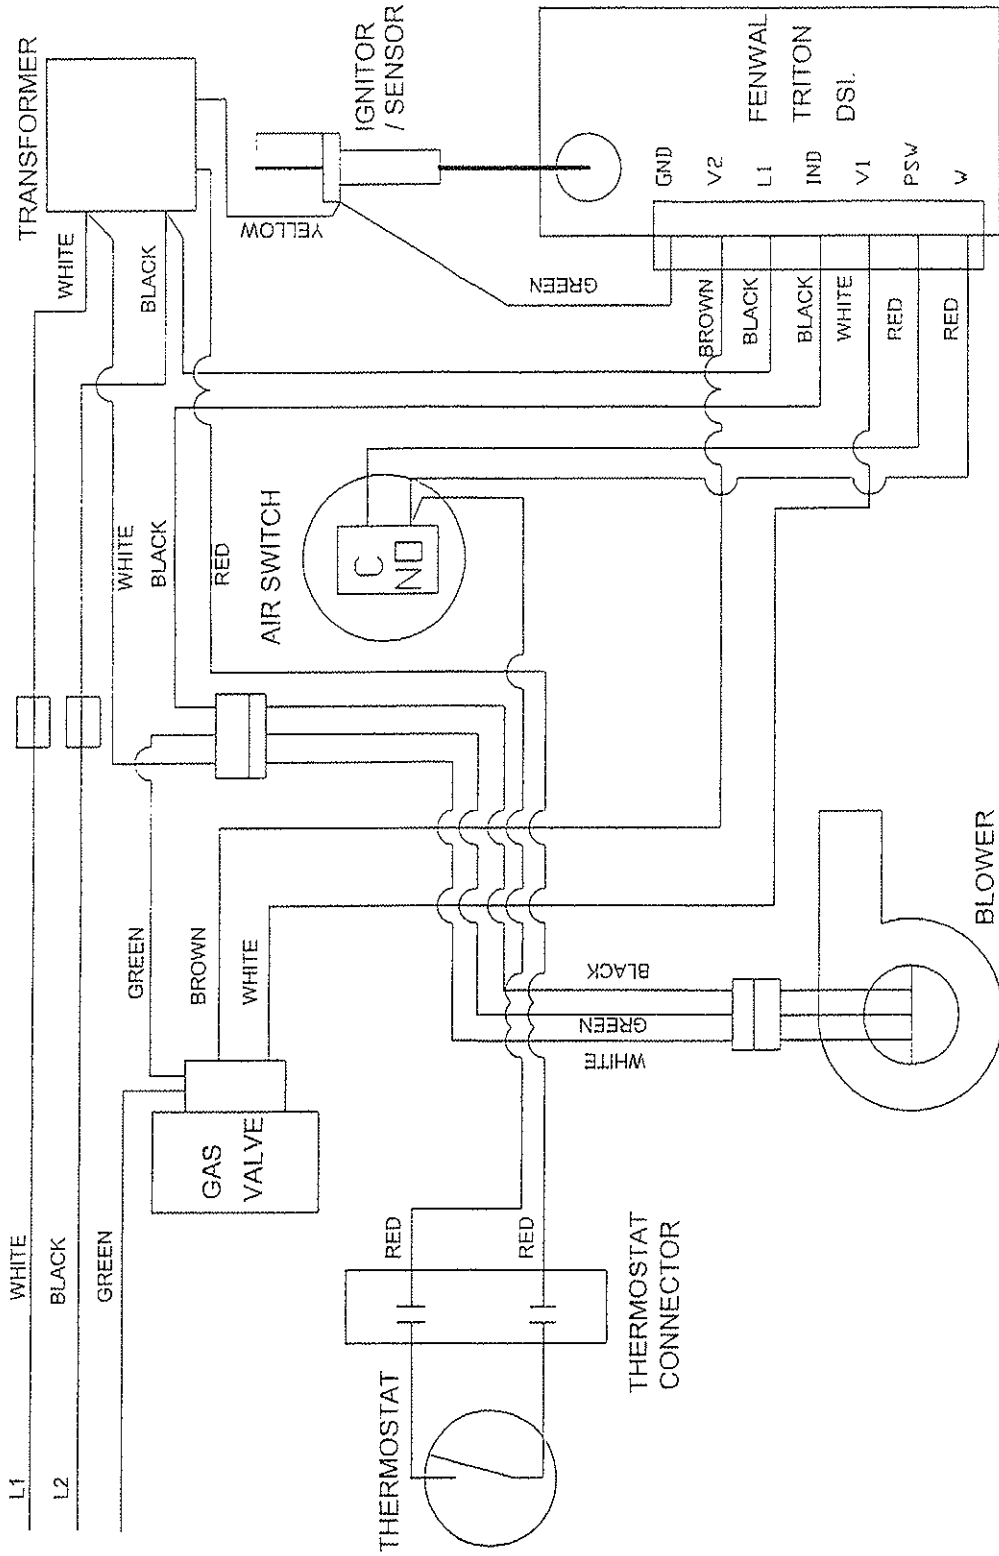

If any of the original wire as supplied with the appliance must be replaced, it must be replaced with wiring material having a temperature rating of at least 105 degree C (221 F).

CAL HI/LOW WIRING DIAGRAM


FIGURE #39A HIGH / LOW 120 VOLT WIRING DIAGRAM

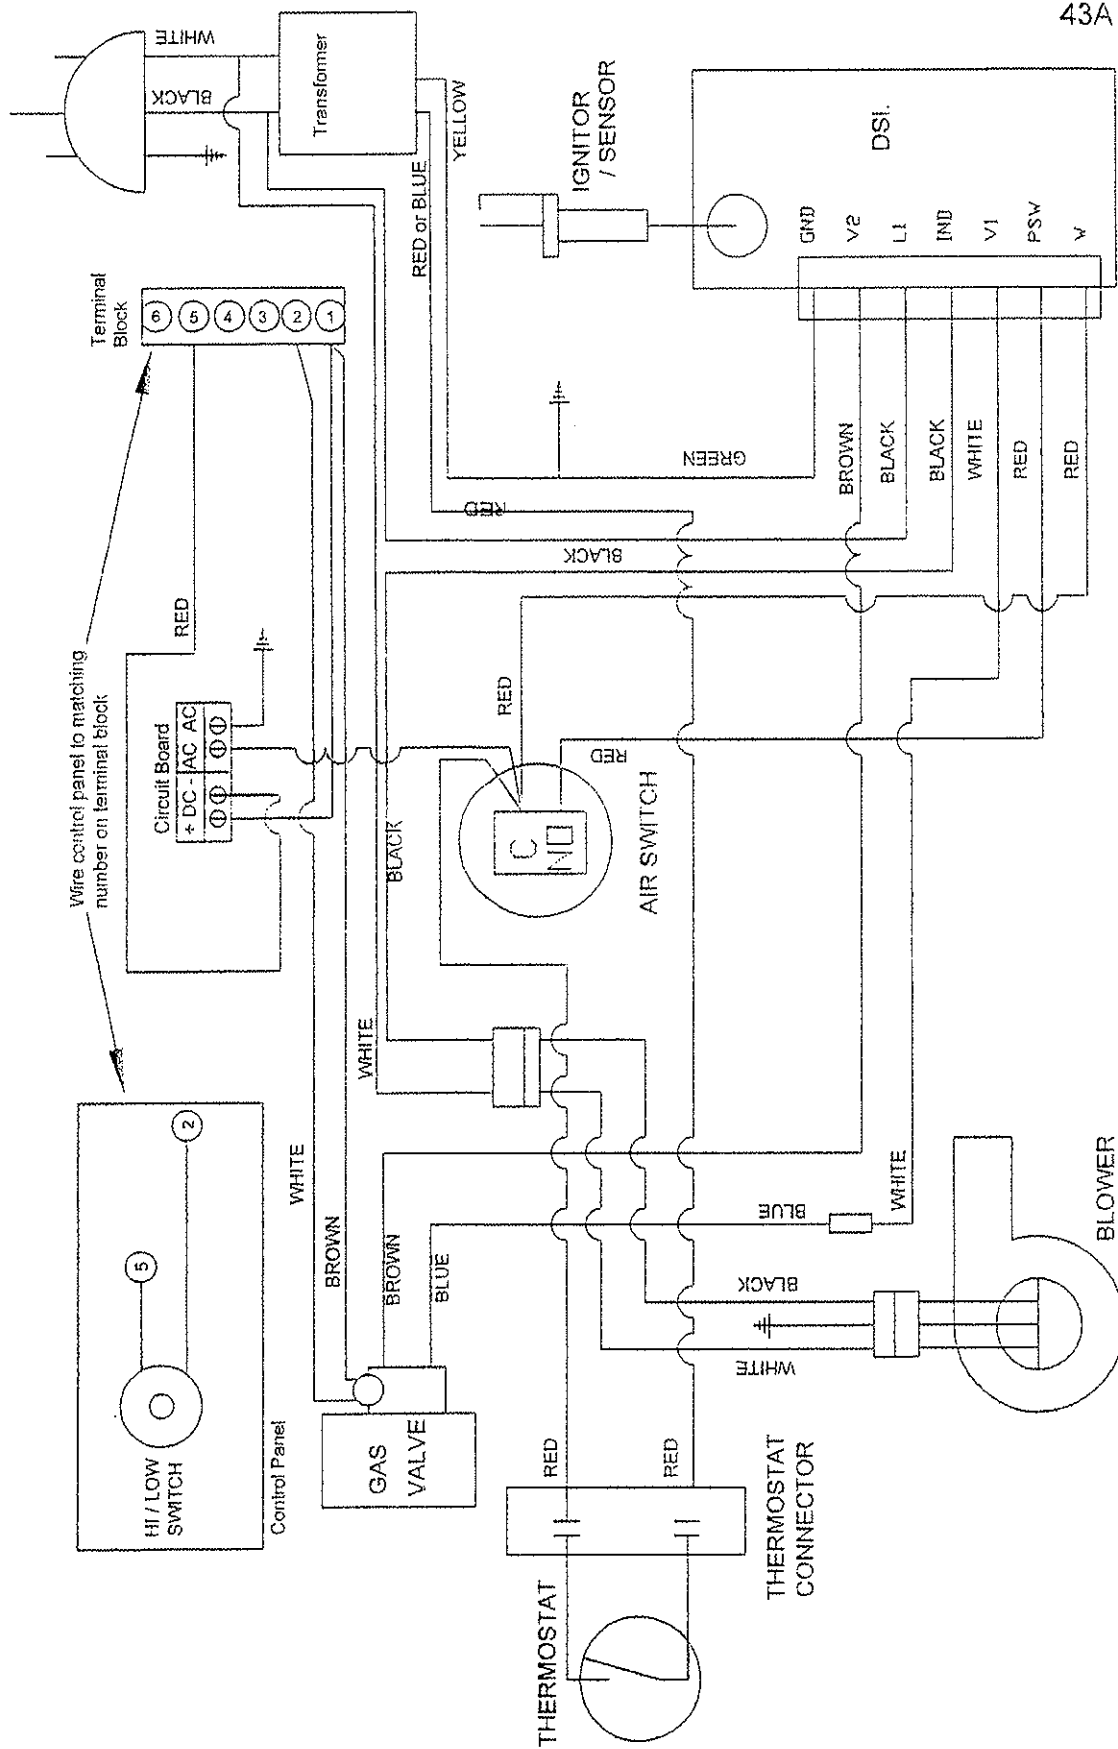

If any of the original wire as supplied with the appliance must be replaced, it must be replaced with wiring material having a temperature rating of at least 105 degree C (221 F).

CAL MODULATING WIRING DIAGRAM

FIGURE #39B MODULATING 120 VOLT WIRING DIAGRAM

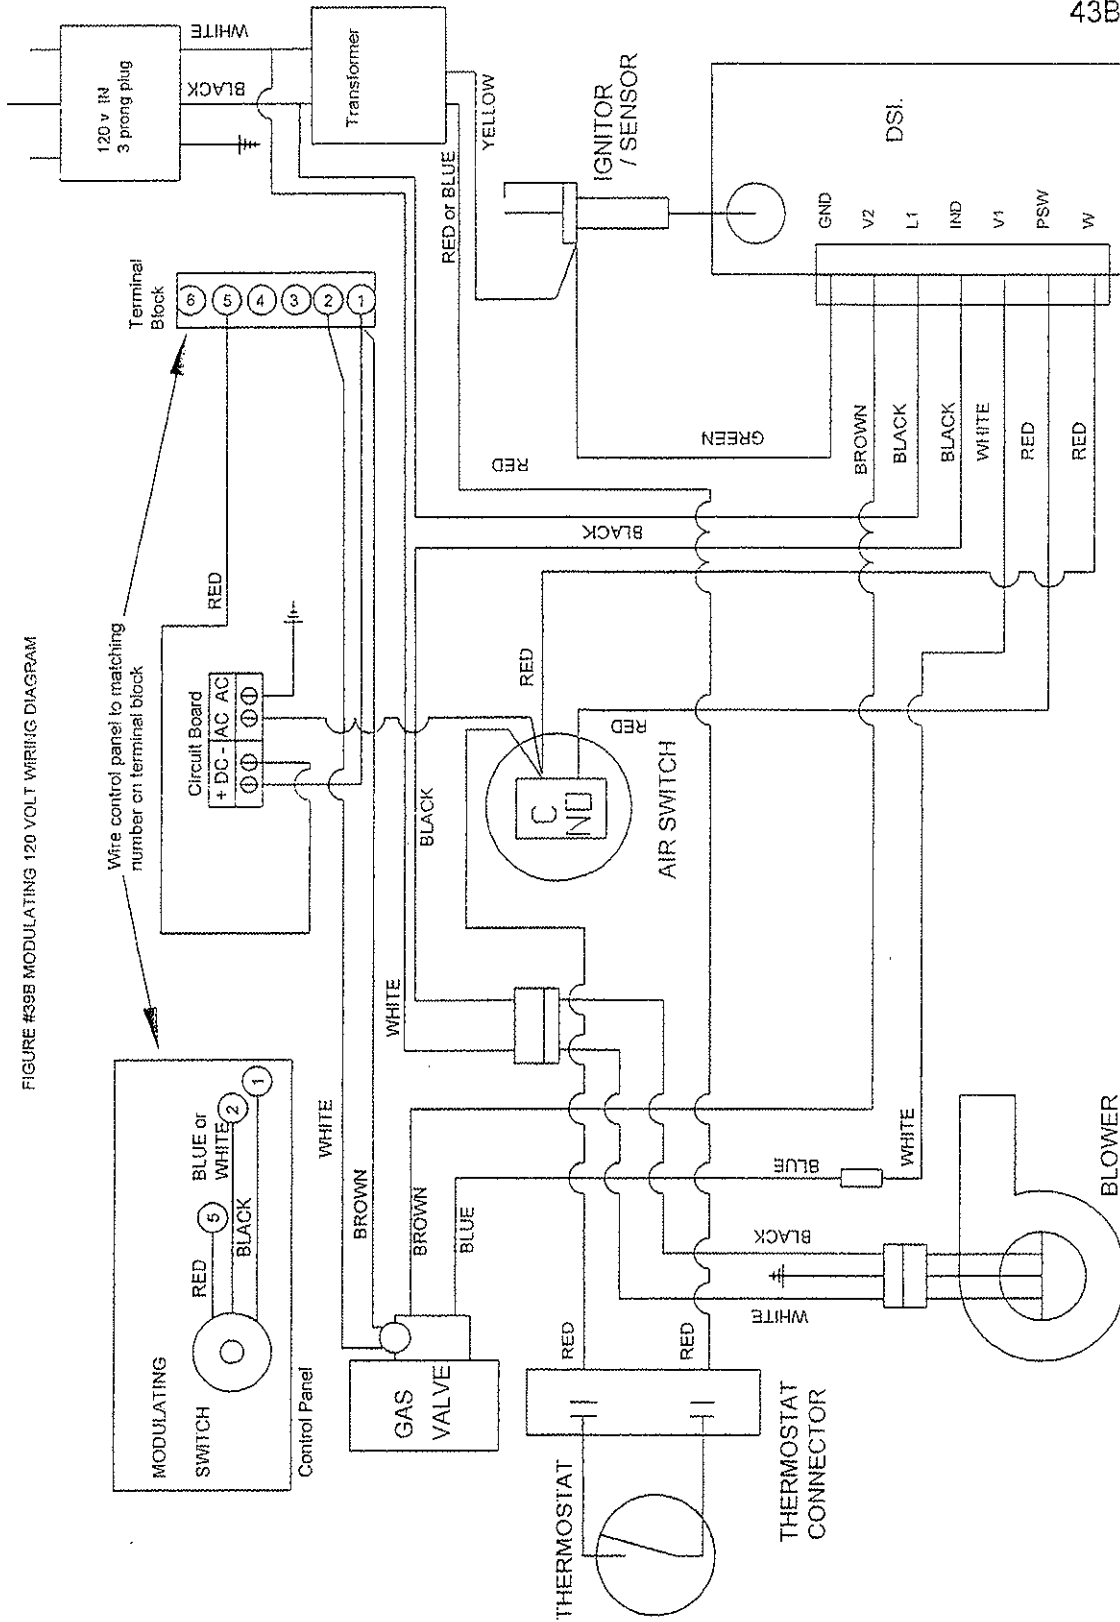

43B

If any of the original wire as supplied with the appliance must be replaced, it must be replaced with wiring material having a temperature rating of at least 105 degree C (221 F).

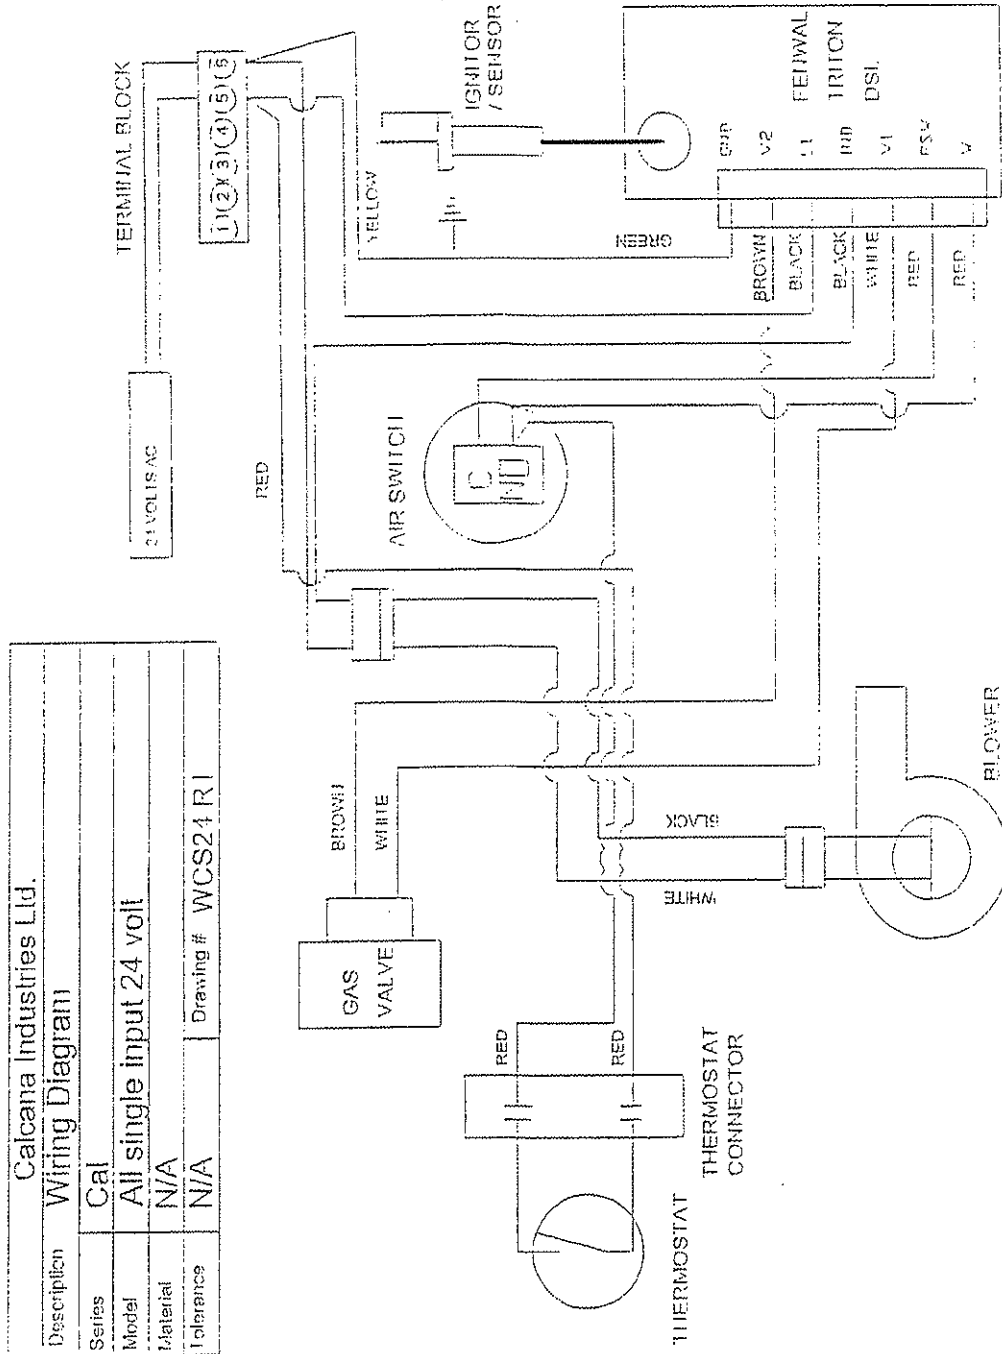


FIGURE #40 SINGLE INPUT 24 VOLT WIRING DIAGRAM

if any of the original wire as supplied with the appliance must be replaced, it must be replaced with wiring material having a temperature rating of at least 105 degree C (221 F).

Calcaia Industries Ltd.	
Wiring Diagram	
Description	Cal
Series	All High/Low 24 volt units
Model	N/A
Material	N/A
Tolerance	N/A
Drawing # WCHL24 R1	


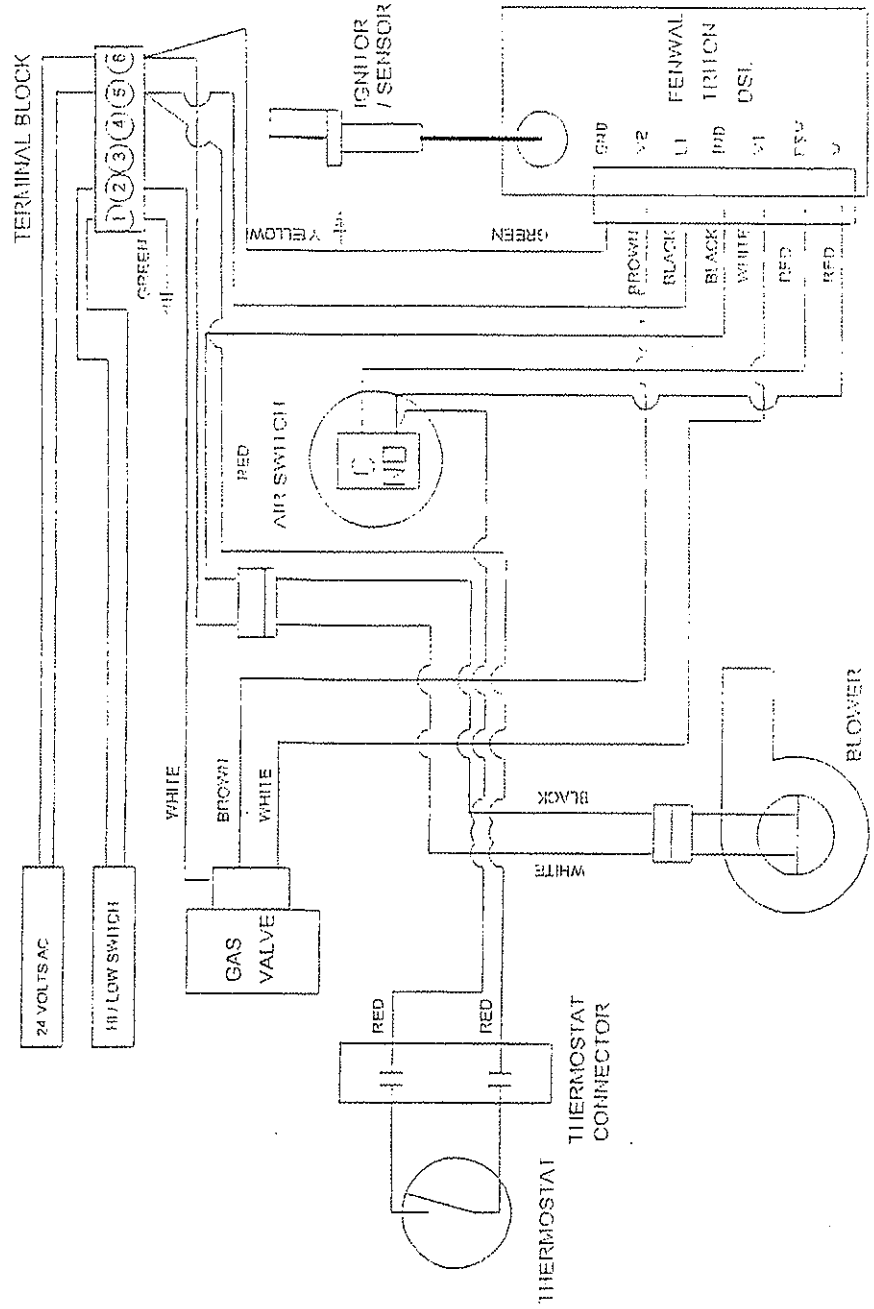


FIGURE #40A HI/LO 24 VOLT WIRING DIAGRAM

If any of the original wire as supplied with the appliance must be replaced, it must be replaced with wiring material having a temperature rating of at least 105 degree C (221 F).

CAL SS 24V MODULATING WIRING DIAGRAM

FIGURE #40B MODULATING 24 VOLT WIRING DIAGRAM

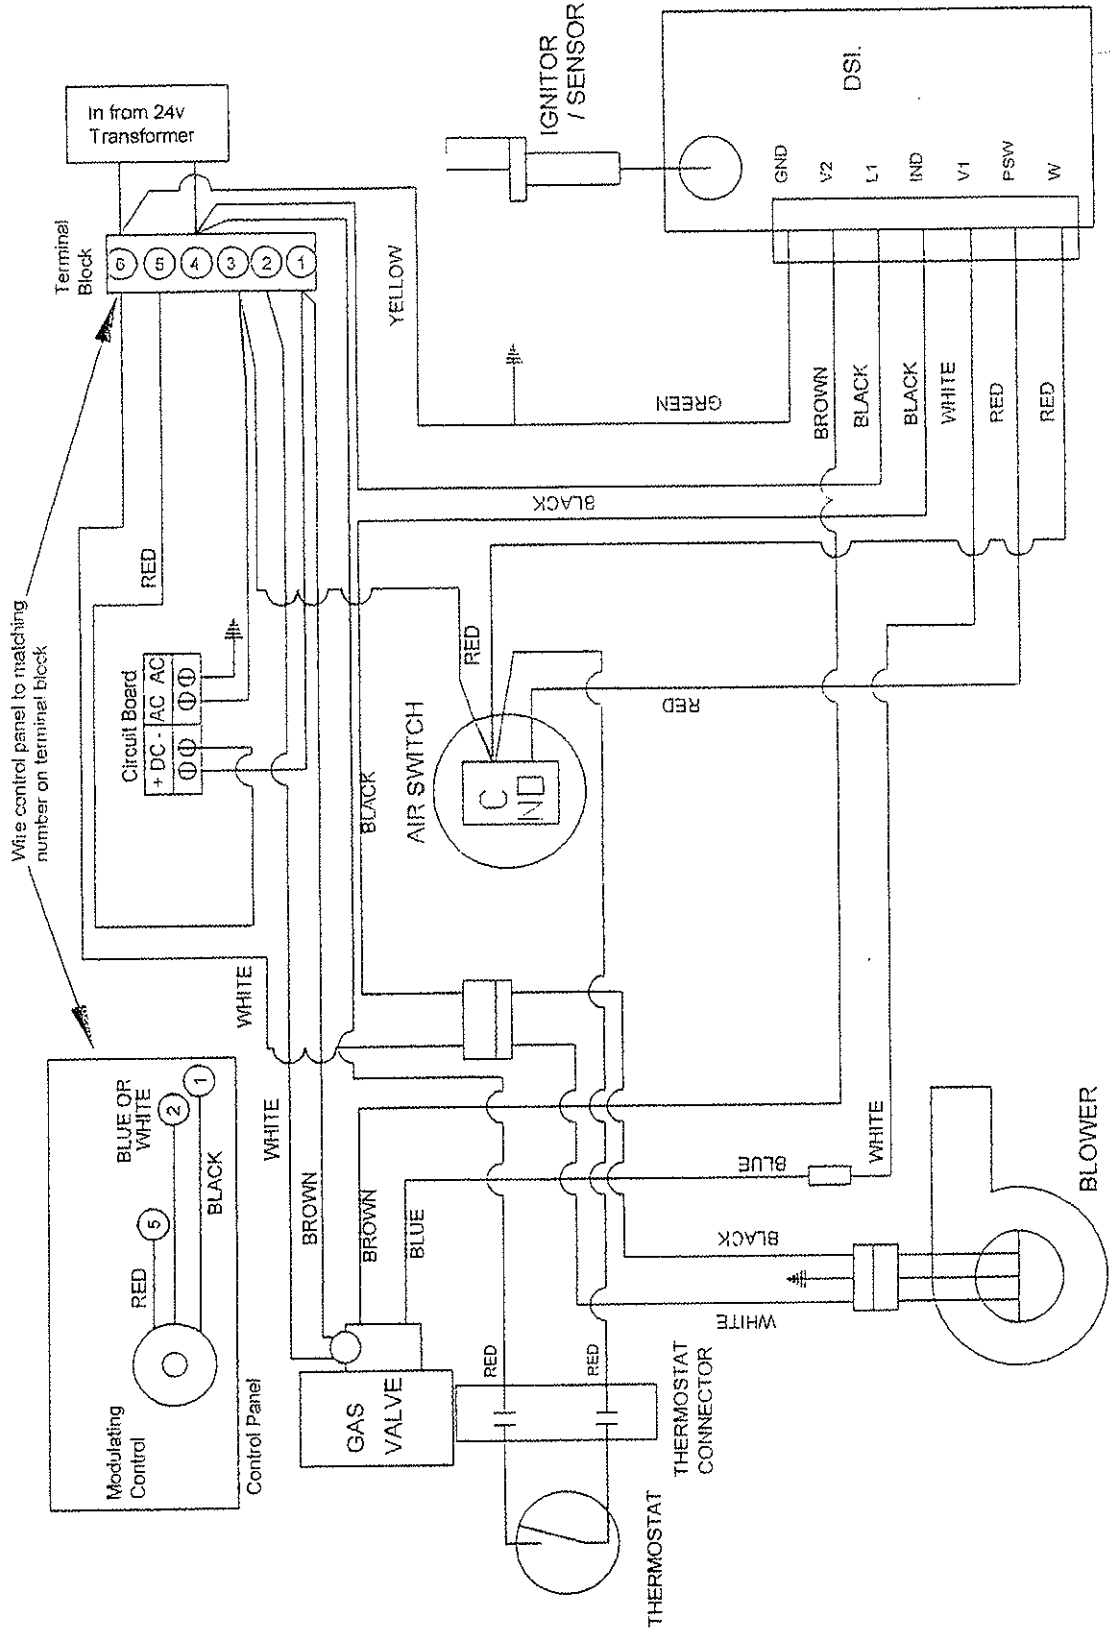

If any of the original wire as supplied with the appliance must be replaced, it must be replaced with wiring material having a temperature rating of at least 105 degree C (221 F).

THERMOSTATS

LOW VOLTAGE (SINGLE HEATER)
(for wiring diagram, refer to pages 62 & 63)

DO NOT use thermostats that have heat anticipators in them. The heat anticipators will cause the unit to cycle unnecessarily reducing its heating capacity, which can cause incomplete combustion and the combustion by products to condensate. A suitable thermostat can be purchased from Calcana.

Use (part # 3060225) for this heater.

- a) Locate thermostat in a convenient location away from drafts.
- b) Mount thermostat to wall with hardware supplied.
- c) Attach low-voltage wire to connector block on heater.
- d) Run wire from unit to thermostat securing wire to joists or studs along the way.
- e) Trim excess wire and attach to thermostat accordingly.

NOTE: Thermostat part #3060225 can be used for line or low voltage applications. For low voltage applications, simply connect the two wire leads on the thermostat to the low voltage wiring that is attached to the low voltage thermostat connector on heater and ignore the line voltage wiring diagram on the thermostat packaging. DO NOT CONNECT LINE VOLTAGE TO THE THERMOSTAT WHEN USING THE LOW VOLTAGE OPTION TO CONTROL THE HEATER OTHERWISE SEVERE, UNWARANTABLE DAMAGE WILL RESULT.

LOW VOLTAGE ONE THERMOSTAT - ONE HEATER

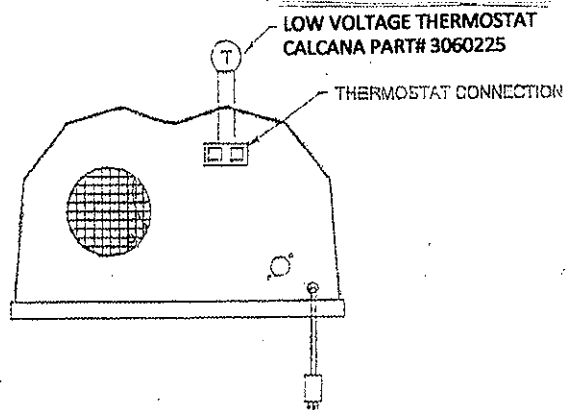


FIGURE #41. LOW VOLTAGE THERMOSTAT WIRING

THERMOSTATS - CONTINUED

LINE VOLTAGE (TWO OR MORE HEATERS), if two or more heaters are to be controlled by one common thermostat, proceed as follows:
(for wiring diagram, refer to pages 62 & 63)

- a) Provide a common switched line voltage circuit to heaters controlled by a line voltage thermostat.
- b) Connect a short piece of wire between the two low voltage thermostat connections to close low voltage circuit.

Recommended line voltage thermostats are as follows:

- Honeywell (or equivalent): - T631
- T409BA
- T410A

Thermostat part #3060225) can be purchased from Calcana.

LINE VOLTAGE
ONE THERMOSTAT - 2 OR MORE HEATERS

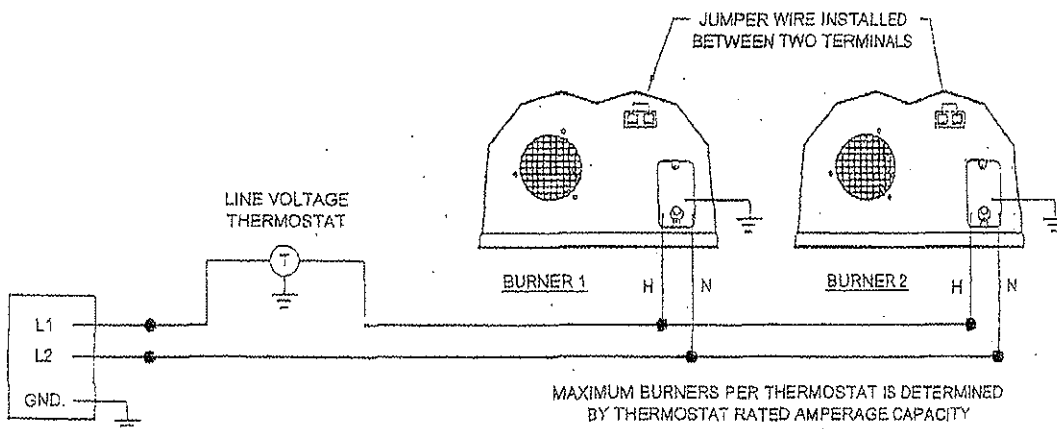


FIGURE 42 LINE VOLTAGE THERMOSTAT WIRING

INITIAL START-UP**WARNING****DO NOT ATTEMPT TO IGNITE HEATER BY HAND**

IMPORTANT NOTICE: This heater is not to be used as a construction heater to supply heat to an unfinished building during the finishing phases of construction. This practice exposes the unit to an abnormally corrosive atmosphere from sources such as paint, varnish and adhesives, which can lead to premature radiant tube exchanger or vent failure. The practice also allows foreign materials such as sawdust or sheet rock dust to enter the combustion blower, burner, heat exchanger and vent system, resulting in shorter life of the unit.

Use of the heater as a construction heater will void the warranty.

Procedure:

- a) Make sure gas is turned on.
- b) Check for any possible blockages in combustion air intake and exhaust areas of unit.
- c) Make sure that venting material is properly fastened to the unit.
- d) Make sure all options are attached securely.
- e) Make sure electricity is on to unit.
- f) Turn thermostat up past room temperature.
- g) Check the flame port to see flame has established.
- h) If flame is not established, turn the thermostat down for 5 seconds then turn back up or interrupt electrical supply to unit for 5 seconds, and allow unit to try again.
- i) Verify that the manifold pressure (outlet pressure tap) on the gas valve is the same pressure as stated on the rating plate of the unit. Use a manometer that measures inches of water column for this procedure. If adjustment is required, remove the capscrew from the pressure regulator housing. Adjust the white pressure regulator adjusting screw clockwise (in) to increase pressure, counterclockwise (out) to reduce pressure. Replace capscrew. After measurement has been taken, replace pipe plug in outlet pressure tap. Check for leaks. (see pages 3, 4 & 48)
- j) Verify gas input rate. (see page 40)

NOTE: Oil smoke might appear off of exchanger tube after it heats up initial firing. Do not be alarmed. The smoke is just a small amount of oil on the surface of the tube from manufacturing. If smoke is excessive, open door and 'air out' the building until smoke is removed.

NOTE: Heater will have higher heat output by the burner head as compared to the exhaust end. This is normal.

NOTE: A small amount of condensation may occur from the heater when it starts the heating cycle. The condensation will stop once the heater warms up. Make sure venting is sealed.


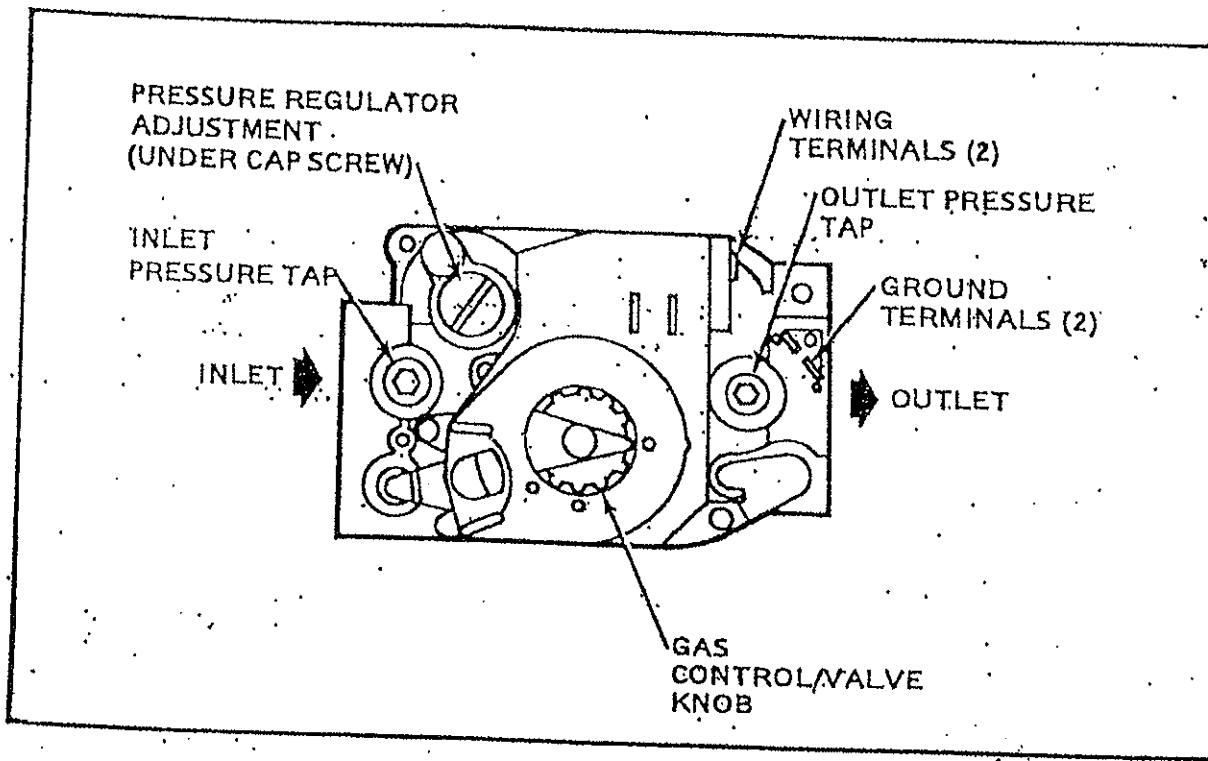


Figure 36 - Gas Valve

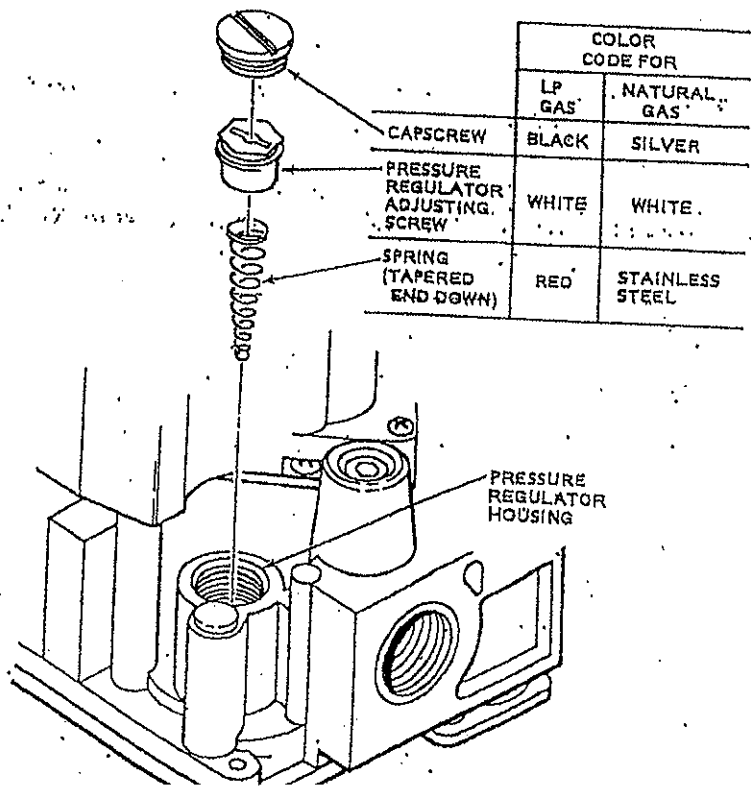

GAS VALVE DETAILS HI/LO

Check and Adjust Gas Input
and Burner Ignition**IMPORTANT**

1. Do not exceed input rating stamped on appliance nameplate, or manufacturer recommended burner orifice pressure for size orifice(s) used.

2. IF CHECKING GAS INPUT BY CLOCKING GAS METER: Make certain there is no gas flow through the meter other than to the appliance being checked. Other appliances must remain off with the pilots extinguished (or deduct the consumption from the meter reading). Convert flow rate to Btu/h and compare to Btu/h input rating on appliance nameplate.

3. IF CHECKING GAS INPUT WITH MANOMETER: Make sure the gas control knob or the ignition control switch is in the OFF position before removing outlet pressure tap plug to connect manometer (pressure gauge). Also move the gas control knob or the ignition system control switch to the OFF position when removing the gauge and replacing the plug. Before removing the inlet pressure tap plug, shut off the gas supply at the manual valve in the gas piping to the appliance or, for LP, at the tank. Also shut off the gas supply before disconnecting the manometer and replacing the plug. Repeat the Gas Leak Test at the plug with the main burner operating.

NOTE: Check the inlet pressure before adjusting the pressure regulator.

Two-stage regulator models require that you check and adjust both high and low pressure regulator settings. Two-stage appliance operating sequences vary; consult the appliance manufacturer instructions for the specific operating sequence and regulator adjustment procedures for the appliance in which the control is installed. The regulator adjustment instruction is as follows:

1. Turn ON/OFF switch to ON. Set HI/LO switch to HI.
2. Carefully check the main burner lightoff. Make sure that the main burner lights smoothly and that all ports remain lit.
3. Wait for control to move to high pressure (second stage) and then check the full-rate manifold pressure listed on the appliance nameplate for high pressure. The gas control full rate outlet pressure should match this rating.
4. With main burner operating, check the gas control flow rate using the meter clocking method or check pressure using a manometer connected to the outlet pressure tap on the control.

5. If necessary, adjust the high pressure regulator to match the appliance rating.

a. Remove the pressure regulator adjustment cap.

b. Using a screwdriver, turn the inner adjustment screw for HI pressure clockwise to increase or counterclockwise to decrease the gas pressure to the burner.

6. After high pressure is checked, check low pressure Regulation by setting HI/LO switch to LO.

7. Check the low rate manifold pressure listed on the appliance nameplate. Gas control low rate outlet pressure should match this rating.

8. With main burner operating, check the control flow rate as before (using the meter clocking method or check pressure using a manometer connected to the outlet pressure tap on the control).

9. If necessary, adjust the low pressure regulator to match the appliance rating.

a. Remove the pressure regulator adjustment cap.

Using a screwdriver, turn the inner adjustment screw for LO pressure clockwise to increase or counterclockwise to decrease the gas pressure to the burner.

10. Once high and low pressure have been checked and adjusted, replace pressure regulator adjustment cap. If the desired outlet pressure or flow rate cannot be achieved by adjusting the gas control, check the gas control inlet pressure using a manometer at the inlet pressure tap of the gas control. If the inlet pressure is in the nominal range (see rating plate) replace the gas control. Otherwise, take the necessary steps to provide proper gas pressure to the control.

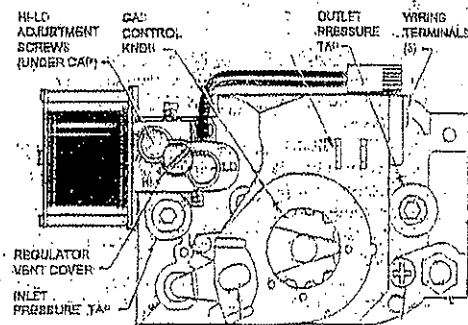


FIGURE #26A. HI/LO GAS VALVE

VALVE DETAILS

- 1 Solenoids V1 + V2
- 2 Electrical connection V1/V2 Molex Serie 3000
- 3 Servo governor
- 4 Main gas outlet
- 5 Test nipple p_1
- 6 Main gas inlet p_2
- 7 Ignition gas outlet
- 8 Test nipple p_2
- 9 Setting screw for governor with SW 2 socket head
- 10 Setting screw for start gas volume or slotted screwdriver
- 11 **only GB-GD...D01 and GB-N... D01**
Signal p_{air} connection
- 12 **only GB-GD...D01 and GB-N... D01**
"Min" setting screw K (SW 2) 0-point offset
- 13 **only GB-GD...D01 and GB-N... D01**
"Max" setting screw V (SW 2) Ratio adjustment
- 14 **GB-M... D01 only**
Cover
- 15 **GB-M... D01 only**
setting screw SW 3 Min
- 16 **GB-M... D01 only**
setting screw SW 2 Max
- 17 **GB-M... D01 only**
Modulator
- 18 **GB-M... D01 only**
Modular power supply, Male connector AMP 6,3 x 0,8 mm
- 19 Solenoid retaining screw
- 20 Side cover with screws

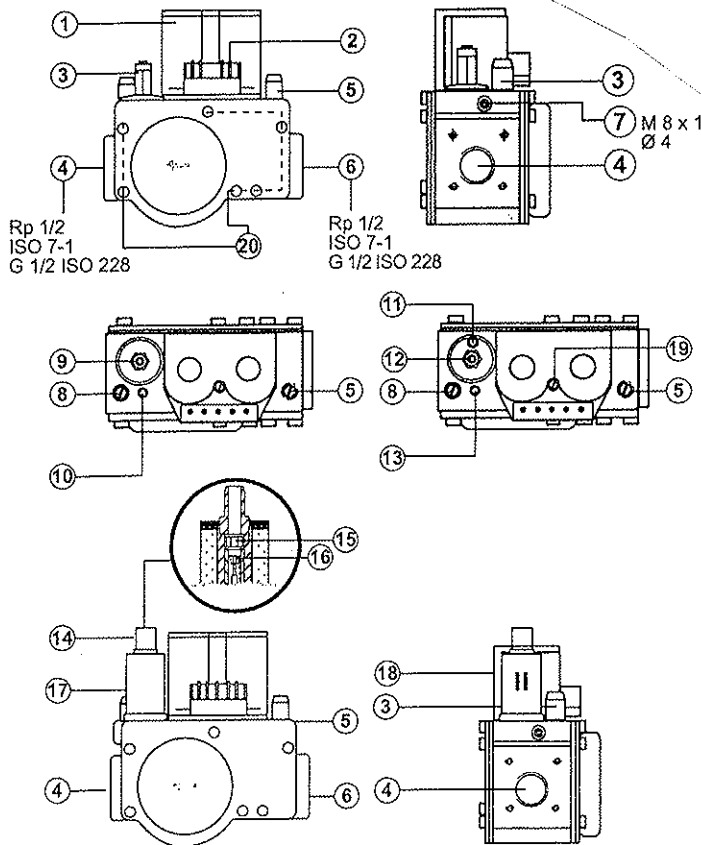


FIGURE #20 GAS VALVE

SETTING MANIFOLD PRESSURE

Setting the modulator

Caution! Always set Min first since Max is adjusted simultaneously!

Setting Min

A Remove electrical connection 18 from modulator

Caution! Do not use ball head tools with a 3 mm shaft. Otherwise Min is adjusted simultaneously!

B Set small load, setting screw 15 (use 3 mm socket head):

higher pressure
counterclockwise

lower pressure
clockwise

Setting Max

Operate Heater On HIGH

C Set Max, setting screw 16 (2 mm socket head)


60° corresponds to approx. 1 mbar

higher pressure
counterclockwise

lower pressure
clockwise

On completion of work on the GB-M... D01, perform a leakage and function test.

REFER TO RATING PLATE FOR MIN/MAX MANIFOLD PRESSURES

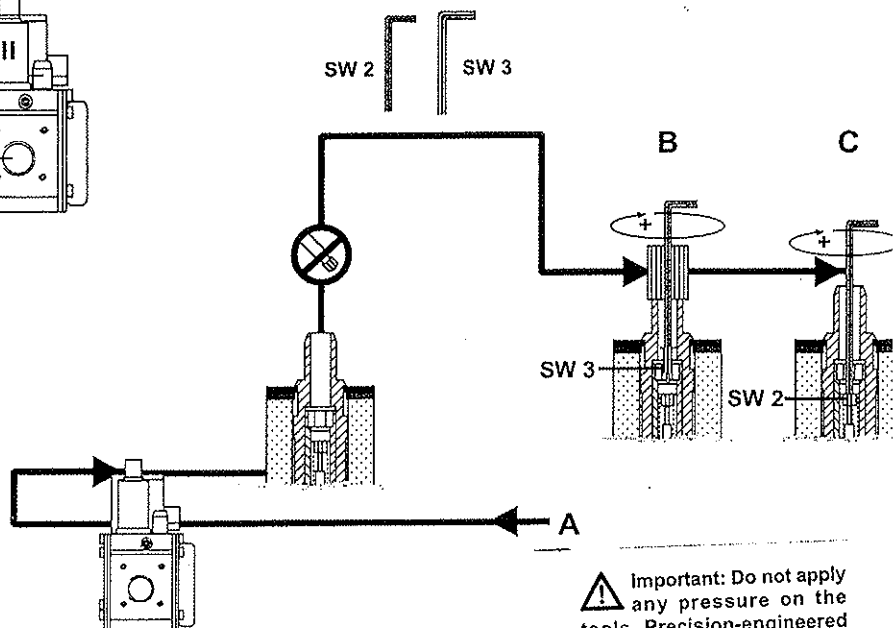

Important! Do not apply any pressure on the tools. Precision-engineered tools.

SEQUENCE OPERATION

DESCRIPTION OF 3-TRY DIRECT SPARK IGNITION SYSTEM:

The TRITON 2461D is a 24 VAC Microprocessor Based Direct Spark Ignition Control designed for use in all types of heating applications such as gas furnaces, boilers, water heaters and other similar appliances. The control utilizes a microprocessor to continually and safely monitor, analyze and control the proper operation of the gas burner. Value added features such as combustion blower control, LED diagnostics, automatic one hour reset, and flame current test pins highlight the controls benefits.

OPERATION:

POWER UP / STANDBY

- Upon applying power (24 volts) to 24 VAC/R, the control will reset, perform a self check routine, initiate fulltime flame sensing, flash the diagnostic LED for up to four seconds, and enter the thermostat scan state.

HEAT MODE

- When a call for heat is received from the thermostat supplying 24 volts to TH/W, the control will check the pressure switch for normally open contacts. The combustion blower is then energized and once the pressure switch contacts close, a pre-purge delay begins. Following the pre-purge period the gas valve is energized and sparks commence for the trial for ignition period.
- When flame is detected during the trial for ignition , sparks are shut off immediately and the gas valve and combustion blower remains energized. The thermostat, pressure switch, and main burner flame are constantly monitored to assure the system continues to operate properly. When the thermostat is satisfied and the demand for heat ends, the main valve is de-energized immediately, the control senses the loss of flame signal and de-energizes the combustion blower.

FLAME FAILURE – RE-IGNITION

- If the established flame signal is lost while the burner is operating, the control will respond within 0.8 seconds. The HV spark will be energized for a trial for ignition period in an attempt to re-light the burner. If the burner does not light the control will make two more attempts to re-light the burner. If the burner does not re-light, the control will go into lockout and flash the LED 3-times. If flame is re-established, normal operation resumes.

TROUBLESHOOTING

NO POWER TO HEATER...

CAUTION: Prior to performing any service or maintenance work on the unit:

- a) disconnect the electrical supply
- b) shut off gas to supply unit
- c) make sure unit has cooled down before opening service panel

⚠WARNING:

Only allow qualified, licensed, service people trained to service gas fired heating equipment to perform any repairs on this unit. All replacement parts **MUST** originate from the manufacturer of this heater in order not to void CGA/AGA certification.

Safety devices are not allowed to be rendered inoperative and left unattended. Failure to do any of the above can cause property damage, injury or death.

INITIAL ELECTRICAL CHECKS

- a) Make sure thermostat is calling for heat.
- b) Make sure electrical connection is secure.
- c) Check electrical supply for blown fuse or breaker.
- d) Test for power to burner head.
- e) Check wiring to components. Refer to wiring diagram on pages 62 & 63. Also refer to legend below. This legend is located on the control module.

TERMINAL DESIGNATIONS

S1	NOT USED
GND	SYSTEM GROUND (GREEN)
V2	VALVE GROUND (BROWN)
R	NOT USED
L1	120/240 VAC INPUT (HOT) (BLACK)
IND	INDUCER BLOWER OUTPUT (BLACK)
V1	VALVE POWER (WHITE)
PSW	PRESSURE SWITCH INPUT (RED)
W	THERMOSTAT INPUT (RED)

CAUTION: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. A functional checkout of a replacement control is recommended. Verify proper operation after servicing.

Attention. Au moment de l'entretien commandes, étiquetez tous les fils avant le débranchement. De erreurs de câbage peuvent entraîner un fonctionnement inadéquate et dangereux. S'assurer que l'appareil fonctionne adéquatement une fois l'entretien terminé.

INITIAL GAS CHECKS

- a) Make sure manual valve is turned on.
- b) Make sure gas valve knob is turned on.
- c) Check for gas supply and proper pressure to valve.
- d) Check wires and make sure that they and their connections are in good condition.
- e) Check for power to valve.
- f) If no power, check control board. (see page 52)

ELECTRICITY AND GAS TO HEATER, BUT STILL IS INOPERATIVE

If after confirming that adequate gas and electricity are present and unit still does not operate, review the symptoms below. After the symptom has been identified, refer to the corresponding cause/cure. Review CHECK CONTROL BOARD section, and finalize troubleshooting procedure.

Symptom	Cause/Cure
1. Dead	A) Miswired B) Transformer bad C) Fuse/circuit breaker bad D) Bad control (check LED for steady on)
2. Thermostat on – No Blower Output	A) Miswired (check PSW terminal voltage) B) Bad thermostat – no voltage @ terminal W C) Bad control (check LED for steady on)
3. Pressure Switch, input okay but no Trial for Ignition after purge delay	A) Miswired (check PSW terminal voltage) B) Flame sense problem (existing flame-check LED-2 flashes) C) Bad control (check voltage between L1 & IND)
4. Valve on, no spark	A) Shorted electrode B) Open HV cable C) Bad control
5. Spark on, no valve	A) Valve coil open B) Open valve wire C) Bad control (check voltage between V1 & V2)
6. Flame okay during TFI, no flame sense (after TFI)	A) Bad electrode B) Bad S1 or HV wire C) Poor ground at burner D) Poor flame (check flame current)

NOTE: TFI = Trial For Ignition

CHECK CONTROL BOARD

Open access door and view the diagnostic red LED, located on the grey direct spark ignition module.

FAULT CONDITIONS

Error Mode	LED Indication
Internal Control Failure	Steady On
Air Flow Fault	1 flash
Flame with No Call for Heat	2 flashes
Ignition Lock Out	3 flashes

The LED will flash on for ¼ second, then off for ¼ second during a fault condition. The pause between fault codes is 3-seconds.

INTERNAL CONTROL FAULT

- If power supply cycle are fluctuating beyond 50/60 cycles such as with an unstabilized power supply from a generator, unit will not operate. If the circuit board is faulty the unit will not operate.

AIRFLOW FAULT – LOCK OUT (Combustion Air Flow Problems)

- Combustion airflow is continually monitored during an ignition sequence by the airflow switch (PSW). If during the initial call for heat the pressure switch contacts are in the closed position for 30-seconds without an output to the Combustion Blower, an airflow fault will be declared and the control will remain in this mode with the combustion blower off.
- If the airflow switch remains open for more than 30-seconds after the combustion blower output (L1 & IND) is energized, an airflow fault will be declared and the control will stay in this mode with the combustion blower off.
- If the airflow signal is lost while the burner is firing, the control will immediately de-energize the gas valve and the combustion blower will remain on. If the call for heat remains, the control will wait for proper airflow to return. If proper airflow air is not detected after 30-seconds an airflow fault signal will be declared.

Proceed as follows to verify reason for airflow lockout:

1. Check air intake and exhaust for blockage. Remove any blockage.
2. Check combustion air blower for dirt. Clean and/or replace as necessary.
3. If there is no blockage, disconnect fresh air intake at burner head (if equipped). Retry for ignition. If unit does ignite, check to verify that duct size to unit is of proper size and length and that there is no blockage. Replace ducting as necessary to reduce amount of air restriction to unit.

4. If unit still does not ignite, disconnect exhaust vent at heater and retry for ignition. If unit does ignite, check to verify that vent size to unit is of proper size and length and that there is no blockage. (Refer to VENTING on pages 31 - 34). Replace venting as necessary to reduce amount of restriction.
5. If after 2, 3 and 4 are performed and unit still does not operate, replace air switch.
6. Reconnect venting and ducting, verify operation of unit.

FLAME WITH NO CALL FOR HEAT (Flame Fault)

- If at anytime the main valve fails to close completely and maintains a flame, the full time flame sense circuit will detect it and energize the combustion blower. Should the main valve later close off completely removing the flame signal, the combustion blower will power off.


IGNITION LOCK OUT (Failure to Light)

- FENWAL DSI Module will attempt three ignition trials before going into lockout. The valve relay will be de-energized immediately, and the combustion blower will be turned off.
- Recovery from lockout requires a manual reset by either resetting the thermostat or removing 24 volts, or removing the electrical power supply for a period of 5-seconds.
- If the thermostat is still calling for heat after one hour, the control will automatically reset and attempt to ignite the burner again.

If units still does not operate, proceed as follows:

- Check flame sensor current. (see below)
- Check electrode for cracks and proper location. (see page 73)

FLAME SENSOR CURRENT CHECK

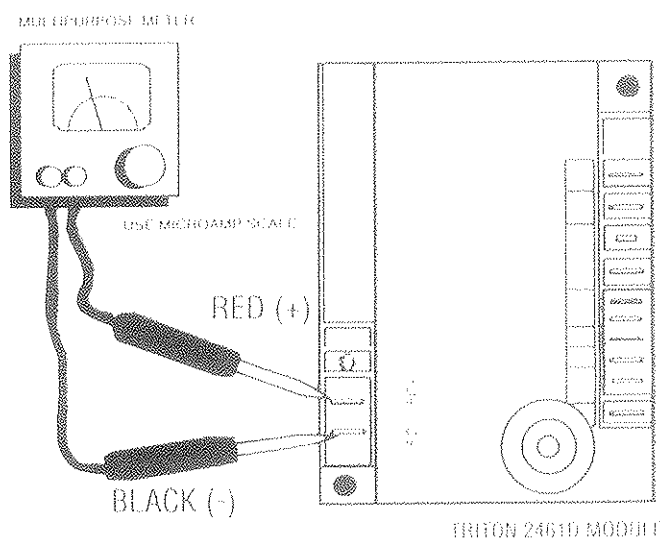

SERVICE CHECKS

Flame current is the current which passes through the flame from the sensor to the ground. The minimum flame current necessary to keep the system from lockout is

Figure #43 – Flame Sensor Current Check

PROPER ELECTRODE LOCATION

Proper location of the electrode assembly is important for optimum system performance. The electrode assembly should be located so that the tips are inside the flame envelope about $\frac{3}{4}$ " (1.9 cm) to 1" (2.54 cm).

CAUTIONS

1. Ceramic insulators should not be in or close to the flame
2. Electrode assemblies should not be adjusted or disassembled. Electrodes should have a gap spacing of .125" (3.175mm). If this spacing is not correct, the assembly must be replaced. Electrodes are NOT field adjustable.
3. Exceeding the temperature limits can cause nuisance lockouts and premature electrode failure.

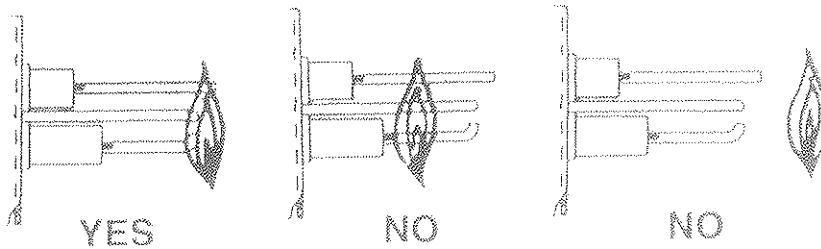


Figure #44 – Proper Electrode Location

MAINTENANCE

Maintenance is required once a year. Annually inspect your heater and its venting system, before the heating season starts. If unit is in a dusty environment, maintenance will be required more often. If dust conditions are extreme, monthly or weekly maintenance may be required.



WARNING

Disconnect electrical supply to heater and shut off gas prior to inspection.

- A) Check combustion air intake for blockage.
- B) Check vent terminal and/or roof terminal for blockage. Remove as necessary for cleanliness and reinstall. Check for cracks or holes. Replace as necessary.
- C) Open service door.
- D) Check blower motor and scroll for dirt and/or locked rotor. Remove dirt with compressed air or vacuum cleaner. If rotor is locked, replace assembly.
- E) If burner needs cleaning, remove burner head from tube and use a combination of compressed air and/or a wire brush to remove any deposits or debris that may be on the actual burner.
- F) Make sure all wiring is intact and in good condition.
- G) Check electrode for proper gap and cleanliness. Clean or replace as necessary.
- H) Check ignition system for spark. Replace as necessary.
- I) Check exchanger tube for holes and/or cracks, dirt and/or deposits. Clean and/or replace as necessary.
- J) Wash any dirt or dust off of the unit with a soap and water solution.
- K) Check any gas connections that were disconnected during maintenance for leaks. Use soap and water solution. **DO NOT USE FLAME.**
- L) Test fire unit by setting thermostat above room temperature. Make sure unit is operating quietly and efficiently.
- M) Periodically visually check burner through view port to confirm proper operation.
- N) Check all couplers for tightness and/or leakage.

WARNING

Only allow qualified/licensed service people, trained to service gas fired heating equipment, to perform any repairs on this unit. All replacement parts **MUST** originate from the manufacturer of this heater in order not to void CGA/AGA certification. Safety devices are not allowed to be rendered inoperative.

WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

The heater area must be kept clear and free from combustible materials, gasoline and other flammable vapors and liquids. The flow of combustion and ventilation air to heater must not be obstructed.

BURNER HEAD & RELATED PARTS

(Refer to page 58 for part numbers & description)

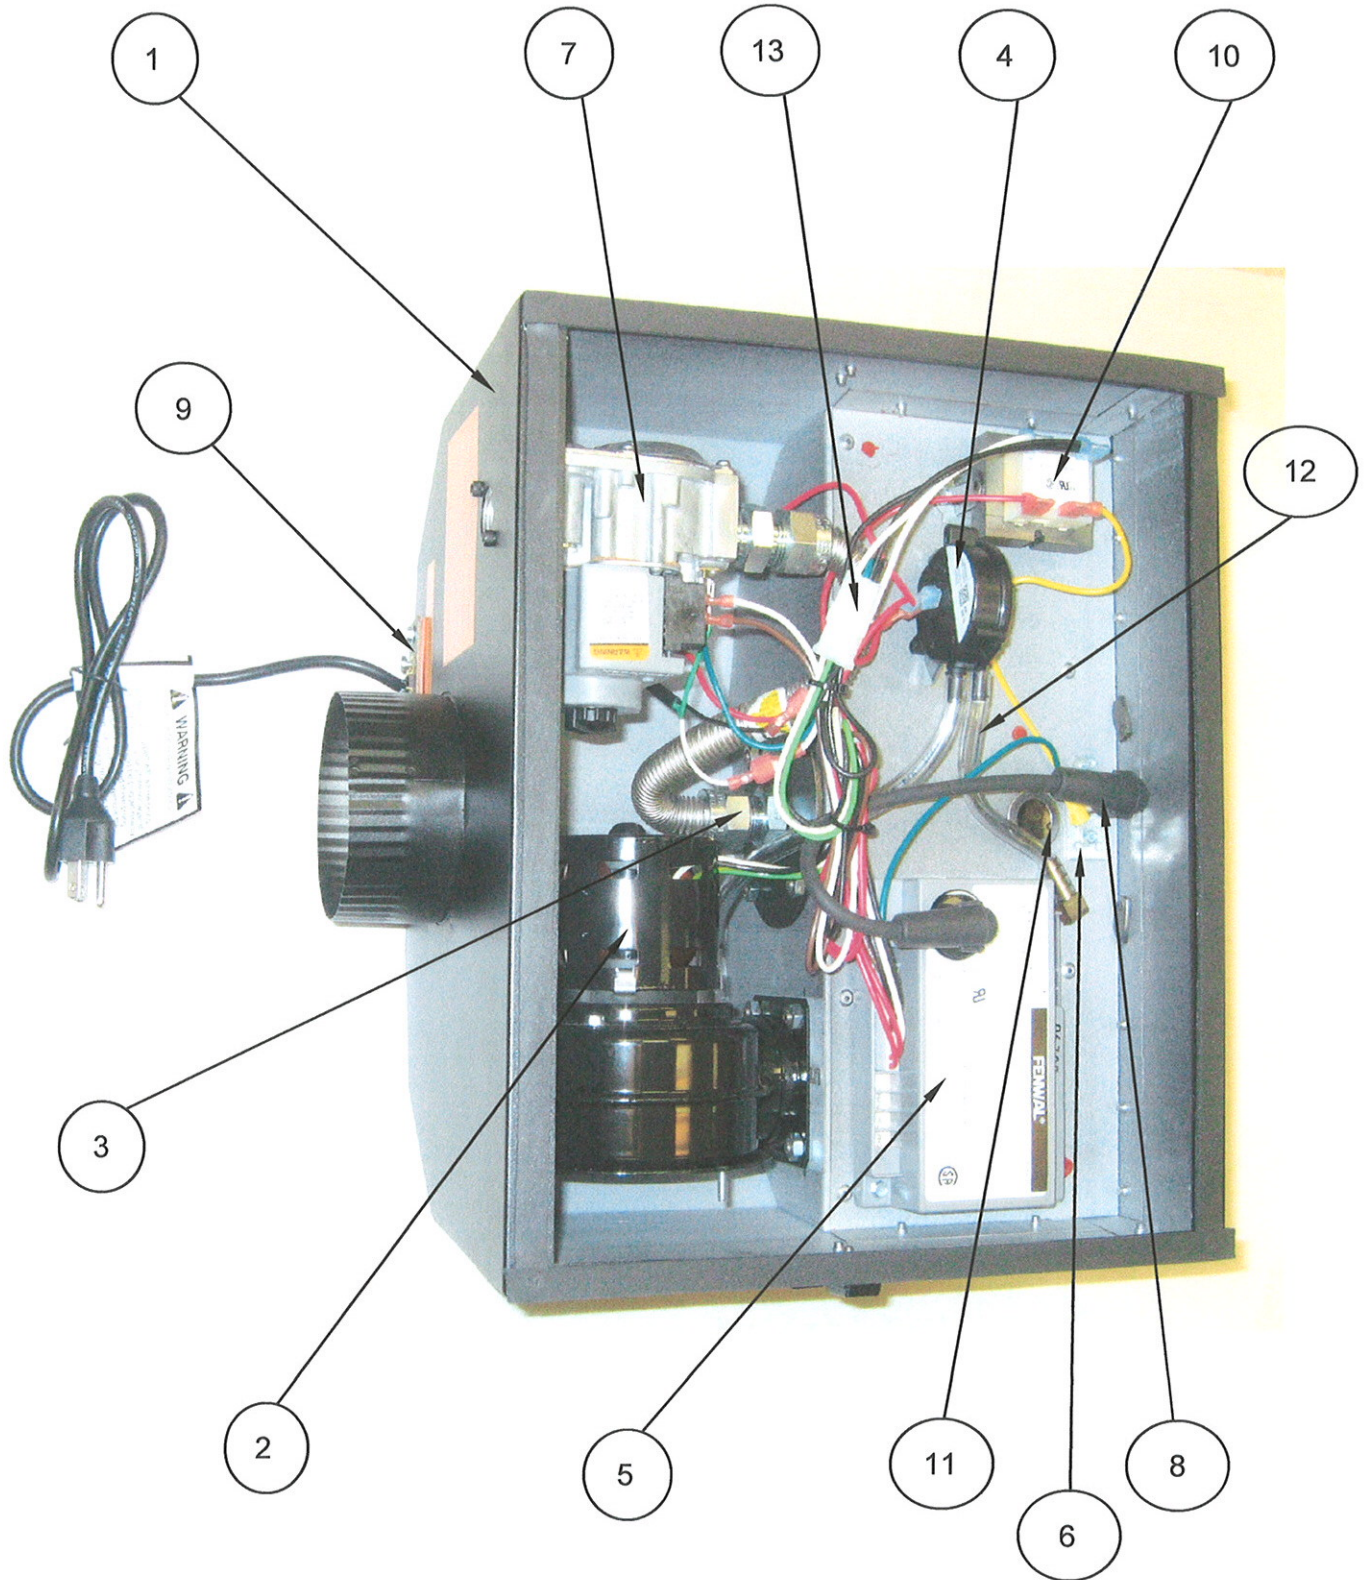


FIGURE #45. BURNER HEAD PARTS

REFLECTOR AND TUBE PARTS

(REFER TO PAGE 58 FOR PART NUMBER AND DESCRIPTION)

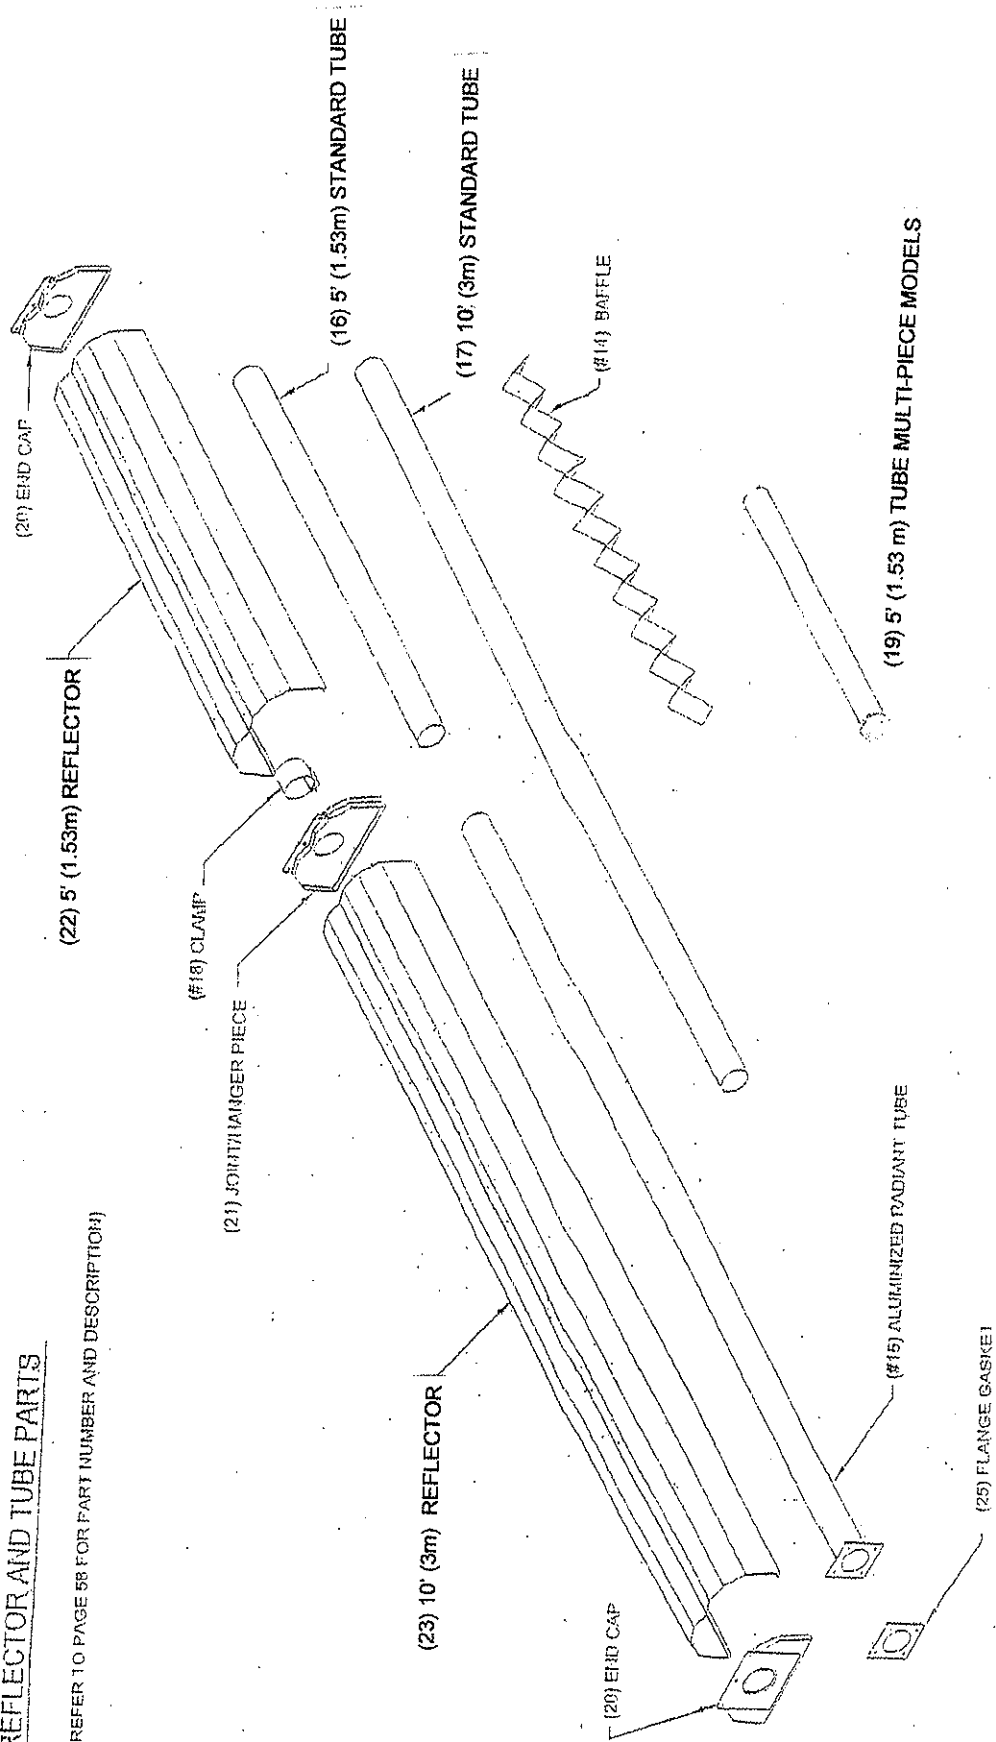


FIGURE #46, REFLECTOR AND TUBE PARTS

See page 56 & 57 for visual detail

REPLACEMENT BURNER HEADS

ITEM #	PIN	INPUT	FUEL	WEIGHT
1	5120173	20,000	NG	36 lbs (36 kg)
1	5120174	20,000	LP	36 lbs (36 kg)
1	5120175	40,000	NG	36 lbs (36 kg)
1	5120176	40,000	LP	36 lbs (36 kg)
1	5120177	50,000	NG	36 lbs (36 kg)
1	5120178	50,000	LP	36 lbs (36 kg)
1	5120179	75,000	NG	36 lbs (36 kg)
1	5120180	75,000	LP	36 lbs (36 kg)

BURNER HEAD COMPONENTS

ITEM #	PIN	DESCRIPTION	WEIGHT
2	3010001	Blower Motor Assembly	**
3	5090437	Burner Assembly	**
4	3070416	Air Switch 20,000 BTU	**
4	3070417	Air Switch 40,000 BTU	**
4	3070418	Air Switch 50,000 BTU	**
4	3070419	Air Switch 75,000 BTU	**
5	3030021	Direct Spark Ignition Module (Fenwal)	**
6	3030633	Electrode Assembly	**
7	3020005	Gas Valve LP	**
7	3020003	Gas Valve NG	**
8	3030026	High Voltage Ignition Wire	**
9	3070025	Thermostat Connector	**
10	3070016	Transformer	**
11	3110022	View Port - Mica Window	**
12	5040374	Vinyl Hose for Differential Air Proving Switch	**
13	3070321	Wire Harness	**

TUBE COMPONENTS

ITEM #	PIN	DESCRIPTION	WEIGHT
14	5170743	Baffle Turbulator	5 lbs (2.3 kg)
15	5170163	Flanged Tube Aluminized 124" (315 cm)	30 lbs (13.7 kg)
16	5170171	Tube 4" (10.2 cm) x 5' (1.53m) Standard	15 lbs (6.8 kg)
17	3170169	Tube 4" (10.2 cm) x 10' (3 m) Standard	30 lbs (13.7 kg)
18	3170201	Tube Clamp	**
19	3090076	Tube 5' (1.53m) Multi-Piece Units	15 lbs (6.8 kg)

REFLECTOR COMPONENTS

20	5190139	End Cap	**
21	5190137	Hanger / Joint Piece	5 lbs (2.3 kg)
22	5180161	Reflector 5' (1.53m)	5 lbs (2.3 kg)
23	5180162	Reflector 10' (3m)	15 lbs (6.8 kg)
24	5180202	Reflector Support Strap (One per reflector)	**
25	5080319	Flange Gasket	**

** Under 5 lbs (2.3 kg)

Calcana USA Ltd. ("the Manufacturer") warrants to the original owner at the original installation site that the heater manufactured by the manufacturer ("the Product") will be free from defects in material and workmanship for one (1) year from date of shipment from the factory. Calcana further warrants that the heat exchanger, reflectors, brackets, burner and burner box will be free from defects in material and workmanship for three (3) years from the date of shipment from the factory. If upon examination by the Manufacturer the Product is shown to have a defect in the material or workmanship during the warranty period, the Manufacturer will repair or replace, at its option, that part of the Product which is shown to be defective. In no event shall the customer be entitled to consequential, indirect or special damages of any nature for defective merchandise, and in no instance may damages include loss of profit. Calcana reserves the right to inspect the system involved in any claim against the warranty. The warranty is null and void if any of the components installed are not original Calcana parts, or the installation does not conform to the supplied installation manual.

- This limited warranty does not apply;
- a) if the Product has been subjected to misuse or neglect, has been accidentally or intentionally damaged, has not been installed, maintained or operated in accordance with the furnished written instructions, or has been altered or modified in any way by an unauthorized person.
 - b) To any expenses, including labour or material, incurred during removal or reinstallations of the Product.
 - c) To any damage due to corrosion by chemicals, including halogenated hydrocarbons precipitated in the air.
 - d) To any workmanship of the Installer of the Product
 - e) If Product is not paid for in a timely manner and in accordance with payment terms
 - f) If Product or any part of it is damaged by any act of nature including, but not limited to; hurricanes, gales, tornadoes, wind snow, sleet, hail, rain, flood, fire or any other similar or dissimilar condition, or by normal wear and tear, which included marks and/or dents to the reflector caused by improper transportation or installation.
 - g) If Product or any part of it is damaged by vandalism, improper use, accumulation of weight or heavy loads on the heater.

- h) If Product is damaged due to lack of cleaning or maintenance, whether routine or otherwise.

The limited warranty is conditional upon;

- a) Advising the installing contractor, who will in turn notify the distributor or Manufacturer
- b) Shipment to the Manufacturer of that part of the Product thought to be defective. Goods can only be returned with prior written approval of the Manufacturer. All returns must be freight prepaid.
- c) Determination in the reasonable opinion of the Manufacturer that there exists a defect in material or workmanship.

Repair or replacement of any part under the Limited Warranty shall not extend the duration of the warranty with respect to such repaired or replaced part beyond the stated warranty period.

This Limited Warranty is in lieu of all other warranties, either express or implied, and all such other warranties, including without limitation implied warranties of merchantability and fitness for a particular purpose, are hereby disclaimed and excluded from this limited warranty. The warranty cannot be transferred or assigned by the Customer. All disputes arising from this warranty are to be governed by the laws of the State of Alabama and any action to enforce this warranty must be initiated in the State of Alabama. In no event shall the Manufacturer be liable in any way for any consequential, special, or incidental damages of any nature whatsoever, or for any amounts in excess of the selling price of the Product or any parts thereof found to be defective. This Limited Warranty gives the original owner of the Product specific legal rights. You may also have other rights which may vary by each jurisdiction.

USA
Calcana USA Ltd.
30345 Suite A,
County Rd 49
Loxley, AL, 36551
Tel: 251-964-4400
Fax: 251-964-4404

USE WITH HONEYWELL PART #393691 LP Gas AND 394588 Natural Gas Conversion Kits used in Models SR, SLR and CAL Series Heaters.

The conversion shall be carried out in accordance with the requirements of the provincial/state authorities having jurisdiction and in accordance with the requirements as follows:

CANADA: *Natural Gas and Propane Installation Code, CSA B149.1* or latest edition.

USA: *National Fuel Gas Code, ANSI Z223.1/NFPA 54*, or latest edition.

⚠ WARNING: This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authority having jurisdiction. If the information in these instructions is not followed exactly, a fire, explosion or production of carbon monoxide may result causing property damage, personal injury or loss of life. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit. The installer of this conversion kit assumes full responsibility and liability for the installation of this conversion kit. If you do not understand these instructions or the information contained in the installation manual, DO NOT INSTALL THIS CONVERSION KIT OR OPERATE THE UNIT ASSOCIATED WITH THIS GAS CONVERSION.

DIRECTIONS:

- 1) Caution the gas supply shall be shut off prior to disconnecting the electrical power, before proceeding with the conversion.
- 2) Turn off electrical supply to heater
- 3) Disconnect gas supply line to heater
- 4) Disconnect electrical supply to heater
- 5) Disconnect thermostat control wire from heater
- 6) Remove burner head from reflector assembly being careful to support burner head in such a fashion that it will not fall from the location overhead where it was installed. Use two people if necessary.
- 7) Remove service door that provides access to gas valve location
- 8) Remove ignitor assembly
- 9) Use deep wall socket to remove orifice spud.
- 10) Install correct orifice for the fuel that you are converting to. **CHECK TWICE TO MAKE SURE.** Reference chart below:
- 11) Locate gas valve and following instructions as detailed on the enclosed **Honey Well Instruction sheet for Gas Conversion Kits. Make sure you have the correct conversion spring for the fuel type you are converting to.**
- 12) **Verify Manifold pressure using a manometer. Adjust pressure if necessary. (see valve instructions for details) Manifold Pressure is: NG: 3.5 "w.c" for LPG: 10.5" w.c.. Leak Test all Fittings Prior to Operation**
- 13) When the conversion is complete, fill out the information as required on the enclosed conversion label.
- 14) **Attach completed label on or near the rating plate**

Conversion Chart With Part Numbers and Corresponding Orifice Sizes

MODEL	PIN	FROM	TO	ORIFICE
SR/SLR 40	3025000	NG	LPG	#51
				1.95 mm
SR/SLR 50	3025003	NG	LPG	#45
SR/SLR 60	3025004	NG	LPG	#42
SR/SLR 75	3025002	NG	LPG	2.4mm
SR/SLR 80	3025005	NG	LPG	#36
SR/SLR 100	3025006	NG	LPG	#31
SR/SLR 125	3025007	NG	LPG	#3.4 mm
SR/SLR 150	3025008	NG	LPG	#25
SR/SLR 175	3025009	NG	LPG	#20
SR/SLR 200	3025010	NG	LPG	#51
CAL-40	3025000	NG	LPG	#48
CAL-50	3025001	NG	LPG	#42
CAL-75	3025002	NG	LPG	#31
				3.3mm
				#28
				#21
				#19
				#13
				5.3 mm
				6.1mm
				#H
				7.3 mm
				#32
				3.3mm
				#21



Calcana USA Ltd.
30245 Suite A
County Rd 49
Loxley, AL, 36551
Tel: 251-964-4400
Fax: 251-964-0444

NOTE: CONVERSION KITS COME WITH GAS VALVE CONVERSION SPRING, PREDRILLED ORIFICE AND CONVERSION LABEL.
CONVERSION KITS ARE FOR UNITS RATED FOR THE FOLLOWING LOCATIONS AND ELEVATIONS: CANADA: 0 – 4500 FT (1372 m)
FOR INSTALLATIONS ABOVE THE DESIGNATED ELEVATIONS, CONTACT FACTORY. USA: 0 – 2000 FT (610 m)

- For one ft³ per revolution gas meter dials, use Table 1 directly.
- For 1/2 ft³ per revolution gas meter dials:
 - Determine time for two dial revolutions
 - Use Table 1 directly
- For two ft³ per revolution gas meter dials:
 - Determine time for one complete dial revolution.
 - Divide time by two.
 - Use Table 1 directly.

Table 1. Converting Gas Flow Rate.

Time (sec)	Flow (cfh)	Flow (m ³ /hr)
40	90	2.55
41	88	2.50
42	86	2.44
43	84	2.38
44	82	2.32
45	80	2.27
46	78	2.21
47	77	2.18
48	75	2.12
49	73	2.07
50	72	2.04
51	71	2.01
52	69	1.95
53	68	1.93
54	67	1.90
55	65	1.84
56	64	1.81
57	63	1.78
58	62	1.76
59	61	1.73
60	60	1.70
62	58	1.64
64	56	1.58
66	54	1.53
68	53	1.50

Time (sec)	Flow (cfh)	Flow (m ³ /hr)
70	51	1.44
72	50	1.42
74	49	1.39
76	47	1.33
78	46	1.30
80	45	1.27
84	43	1.22
86	41	1.16
92	39	1.10
96	38	1.08
100	35	1.02
105	34	0.96
110	33	0.93
115	31	0.88
120	30	0.85
125	29	0.82
130	28	0.78
135	27	0.76
140	26	0.74
150	24	0.68
160	23	0.65
170	21	0.59
180	20	0.57

CHECKOUT

- Make certain the primary air supply to the main burner is properly adjusted for complete combustion at final pressure regulator setting. Main burner must light reliably under all conditions. Place system in operation and observe through at least one complete cycle to assure all controls are operating properly.
- If manometer (pressure gauge) method is used, perform Gas Leak Test at outlet pressure tap plug. Apply the conversion label in the conversion kit to the gas control, heating appliance, and any other controls to show conversion to a new type of gas.

Honeywell

393691 LP Gas and 394588 Natural Gas Conversion Kits

FOR VR8200/VR8300/SV9500/SV9600 FAMILY OF COMBINATION GAS CONTROLS

APPLICATION

The 393691 LP Conversion Kit changes VR8200/VR8300/SV9500/SV9600 family combination gas controls from regulated natural gas to regulated LP gas. The 394588 Natural Gas Conversion Kit changes VR8200/VR8300/SV9500/SV9600 family combination gas controls from regulated LP gas to regulated natural gas. Kits include a new cap screw, pressure regulator adjustment screw, spring and conversion label.

To use this kit, assure gas control is equipped with a standard or slow opening pressure regulator.

NOTE: Step regulator valves cannot be converted.

INSTALLATION

When installing this Product...

- Read these instructions carefully. Failure to follow instructions can damage product or cause a hazardous condition.
- Check ratings given in instructions and on product to make sure product is suitable for your application.
- The installer must be a trained, experienced service technician.
- After installation is complete, use these instructions to check out product operation.

WARNING

Fire or Explosion Hazard.
Can cause severe injury, death or property damage.
Follow these warnings exactly:

- Disconnect power supply before wiring to prevent electrical shock or equipment damage.
- To avoid dangerous accumulation of fuel gas, turn off gas supply at appliance service valve before starting installation and perform Gas Leak Test after completion of installation.
- Use only your hand to turn gas control knob. Never use any tools. If gas control knob will not operate by hand, then a qualified technician should replace the gas control. Force or attempted repair may result in fire or explosion.
- Change main and pilot burner orifices to meet appliance manufacturer specifications. To convert from one gas to another:

- Turn off gas supply at the appliance service valve.
- Remove regulator cap screw and pressure regulator adjusting screw. Refer to Fig. 1.
- Remove the existing spring.
- Insert the replacement spring. Refer to Fig. 2.


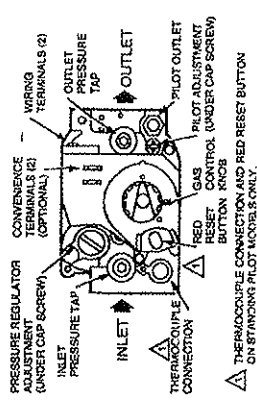


Fig. 1. Top view of VR8200 combination gas control.

Honeywell

Automation and Control Solutions
Honeywell International Inc.
1985 Douglas Drive North
Golden Valley, MN 55422

Honeywell Limited-Honeywell Limited
34 Dynamic Drive
Scarborough, Ontario
M1V 4Z9



COLOR CODE FOR	
LP GAS	NATURAL GAS
CAP SCREW	BLACK
O-RING	BLACK
PRESSURE REGULATOR SCREW	BLACK
SPRING	RED
	STAINLESS STEEL

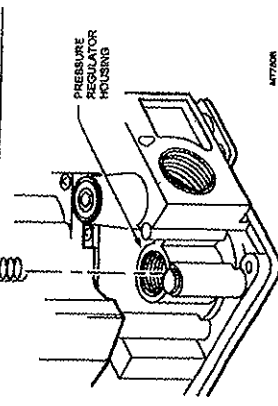


Fig. 2. Conversion kit installation in regulator.

- Install the new plastic pressure regulator adjustment screw. Assure that the screw top is flush with the regulator top.
- Turn pressure regulator adjustment screw clockwise eleven complete turns. The preliminary pressure setting is approximately 10.0 in. wc (2.5 kPa) for LP gas regulator (393691) and 3.5 in. wc (0.9 kPa) for natural gas regulator (394588).
- Check the regulator setting using a manometer or by checking the gas meter. See Check and Adjust Gas Input and Burner Ignition section.
- Install the new cap screw and O-ring.
- Mount conversion label on the gas control.
- Install the gas control and appliance according to appliance manufacturer instructions.

START-UP

Gas Control Knob Settings

OFF: Prevents pilot and main burner gas flow.
PILOT (On standing pilot controls only): Permits pilot burner gas flow when red knob is held down or thermocouple current is above power unit dropout value.

ON: Permits gas flow into gas control. Pilot burner gas is controlled as in the PILOT position for standing pilot and intermittent pilot systems. Main burner gas flow is controlled by thermostat and automatic valve operators.

Perform Gas Leak Test



WARNING

Fire or Explosion Hazard.
 Can cause severe injury, death or property damage.
 Check for gas leaks with soap and water solution any time work is done on a gas system.

Gas Leak Test

- Paint pipe connections upstream of gas control with rich soap and water solution. Bubbles indicate gas leak.
- Shut clear of main burner while lighting to prevent injury caused from hidden leaks that could cause flashback in the appliance vestibule. Light main burner.
- With main burner operating, paint pipe joints (including adapters) and control inlet and outlet with rich soap and water solution.
- If another gas leak is detected, tighten adapter screws, joints, and pipe connections.
- Replace part if gas leak can not be stopped.

Light Pilot (Standing Pilot Models)

- Turn gas control knob clockwise to OFF. Wait five minutes to dissipate any unburned gas. Smell for gas around the appliance near the floor. Do not relight pilot flame if you smell gas. Turn gas control knob counterclockwise to PILOT. Push down and hold the knob while lighting the pilot flame.
- Hold down the gas control knob about one minute, then release.
- If pilot flame goes out, turn gas control knob clockwise to OFF and repeat steps 1 through 3.
- If pilot flame remains lit, turn gas control knob counterclockwise to ON.

Turn on System (Intermittent and Direct Ignition Systems)

Rotate the gas control knob counterclockwise to ON.

Turn on Main Burner

Follow appliance manufacturer instructions or adjust thermostat setting to call for heat.

Adjust Pilot Flame

The pilot flame should envelop 3/8 to 1/2 in. (10 to 13 mm) of the thermocouple or igniter-sensor tip. Refer to Fig. 3. To adjust pilot flame:

- Remove pilot adjustment cap screw. Refer to Fig. 1.
- Turn inner adjustment screw clockwise to decrease or counterclockwise to increase pilot flame.
- Always replace cap screw after adjustment and tighten firmly to safeguard proper operation.

- Make sure that the only gas flowing through the meter is for the appliance being checked.
- Make certain that other appliances are turned off with their pilot flames extinguished (or deduct their gas consumption from the meter reading).
- Turn gas control knob to ON position.
- To obtain an accurate outlet pressure reading, cycle main burner on and off several times to stabilize the pressure regulator diaphragm. Using a watch with a second hand, carefully clock the gas meter to determine the time per revolution. Use Table 1 to determine the exact main burner gas flow rate in cubic feet per hour (cfh).
- Compare actual input with burner manufacturer recommended input (stamped on burner nameplate). To convert Bluh rating to cfh (m³/hr) use the following formula:

$$\text{Input Rating in Bluh (MJ/hr)} = \text{cfh (m}^3\text{/hr)} \times \text{gas Bluh Content of Gas per ft}^3 \text{ (MJ Content of Gas per m}^3\text{)}$$

- If necessary, adjust pressure regulator to match appliance rating. (On step-opening regulators, match the full rate outlet pressure.)
 - Remove pressure regulator adjustment cap screw.
 - Using a screwdriver, turn inner adjustment screw clockwise to increase or counterclockwise to decrease gas pressure to main burner.
 - Always replace cap screw and tighten firmly to prevent gas leakage.
- Turn gas supply back on to other appliances and relight all pilot flames according to appliance manufacturer instructions.
- Proceed to Checkout section.

Checking Gas Pressure Using a Manometer (Pressure Gauge)

- Turn gas control knob to PILOT (standing pilot systems) or OFF (intermittent and direct ignition systems).
- Remove outlet pressure tap plug from gas control and connect pressure gauge. Refer to Fig. 1.
- Turn gas control knob to ON position.
- To obtain an accurate outlet pressure reading, main burner must be cycled on and off several times to stabilize the pressure regulator diaphragm.
- Light main burner and read pressure gauge.
- If necessary, adjust pressure regulator to match appliance rating. (On step-opening regulators, match the full rate outlet pressure.)
 - Remove pressure regulator adjustment cap screw.
 - Using a screwdriver, turn inner adjustment screw clockwise to increase or counterclockwise to decrease gas pressure to main burner.
 - Always replace cap screw and tighten firmly to prevent gas leakage.
- Turn gas control knob to PILOT (standing pilot systems) or OFF (intermittent and direct ignition systems).
- Remove pressure gauge and replace outlet pressure tap plug and pressure regulator cap screw.
- Proceed to Checkout section.

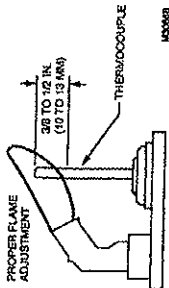


Fig. 3. Proper flame adjustment.

Check and Adjust Gas Input and Burner Ignition



CAUTION

Equipment Damage Hazard.
 Exceeding input ratings can damage the equipment.

- Do not exceed input rating stamped on appliance nameplate, or manufacturer recommended burner orifice pressure for size orifice(s) used. Make certain primary air supply to main burner is properly adjusted for complete combustion. Follow appliance manufacturer instructions.
- CHECKING GAS INPUT BY-CLOCKING GAS METER:**
 - Make sure that the only gas flowing through the meter is for the appliance being checked.
 - Make certain that other appliances are turned off with their pilot flames extinguished (or deduct their gas consumption from the meter reading).
 - Convert flow rate to Bluh as described in form 70-2802, Gas Controls Handbook, and compare to Bluh input rating on appliance nameplate.

IF CHECKING GAS INPUT WITH MANOMETER:

- Be sure the gas control knob is in the PILOT position before removing outlet pressure tap plug to connect manometer (pressure gauge).
- Turn the gas control knob back to PILOT when removing gauge and replacing plug.
- Shut off gas supply at the appliance service valve, or for LP gas, at the gas tank, before removing the outlet pressure tap plug and before disconnecting manometer and replacing outlet pressure tap plug.
- Perform Gas Leak Test at outlet pressure tap plug.

Checking Gas Pressure Using Meter Clocking Method

NOTE: Use this method when manometer is not available or when manifold pressure is not specified in in. wc (kPa) by the burner manufacturer.

Models CAL AND PH Series Heaters.

The conversion shall be carried out in accordance with the requirements of the provincial/state authorities having jurisdiction and in accordance with the requirements as follows:

CANADA: *Natural Gas and Propane Installation Code, CSA B149.1* or latest edition.

USA: *National Fuel Gas Code, ANSI Z223.1/NFPA 54*, or latest edition.

⚠ WARNING: This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authority having jurisdiction. If the information in these instructions is not followed exactly, a fire, explosion or production of carbon monoxide may result causing property damage, personal injury or loss of life. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit. The installer of this conversion kit assumes full responsibility and liability for the installation of this conversion kit. If you do not understand these instructions or the information contained in the installation manual, **DO NOT INSTALL THIS CONVERSION KIT OR OPERATE THE UNIT ASSOCIATED WITH THIS GAS CONVERSION.**

DIRECTIONS:

- 1) Caution the gas supply shall be shut off prior to disconnecting the electrical power, before proceeding with the conversion.
- 2) Turn off electrical supply to heater
- 3) Disconnect gas supply line to heater
- 4) Disconnect electrical supply to heater
- 5) Disconnect thermostat/control wire from heater
- 6) Remove burner head from reflector assembly being careful to support burner head in such a fashion that it will not fall from the location overhead where it was installed. Use two people if necessary.
- 7) Remove service door that provides access to gas valve location
- 8) Remove ignitor assembly
- 9) Use deep wall socket to remove orifice spud.
- 10) Install correct orifice for the fuel that you are converting to. **CHECK TWICE TO MAKE SURE.** Reference chart below:
- 11) Locate gas valve and **REPLACE WITH THE GAS VALVE IN CONVERSION KIT.** Verify you have the correct valve for the fuel type you want to convert to. **CHECK TWICE TO MAKE SURE.**
- 12) **Verify Manifold pressure using a manometer. Adjust pressure if necessary. (see valve instructions for details)**
Manifold Pressure is: NG: Hi 3.5 "w.c" Lo 1.5" w.c.
LPG: Hi 10.5" w.c. Lo 5.5" w.c.

Leak Test all Fittings Prior to Operation

- 13) When the conversion is complete, fill out the information as required on the enclosed conversion label.
- 14) **Attach completed label on or near the rating plate**

Conversion Chart With Part Numbers and Corresponding Orifice Sizes

MODEL	PIN	FROM	TO	ORIFICE
CAL/PH 40	3025025	NG	LPG	#51
CAL/PH 50	3025026	NG	LPG	#48
CAL/PH 75	3025027	NG	LPG	#42

MODEL	PIN	FROM	TO	ORIFICE
CAL/PH 40	3025028	LP	NG	#32
CAL/PH 50	3025029	LP	NG	3.3mm
CAL/PH 75	3025030	LP	NG	#21

NOTE: CONVERSION KITS COME WITH GAS VALVE, PREDRILLED ORIFICE AND CONVERSION LABEL.
 CONVERSION KITS ARE FOR UNITS RATED FOR THE FOLLOWING LOCATIONS AND ELEVATIONS:
 FOR INSTALLATIONS ABOVE THE DESIGNATED ELEVATIONS, CONTACT FACTORY.

CANADA: 0 – 4500 FT (1372 m)
 USA: 0 – 2000 FT (610 m)







Calcana USA Ltd.
 30245 Suite A
 County Rd 49
 Loxley, AL, 36551,
 Tel: 251-964-4400



VALVE DETAILS

- | | |
|---|--|
| <ol style="list-style-type: none"> 1 Solenoids V1 + V2 2 Electrical connection V1/V2 Molex Serie 3000 3 Servo governor 4 Main gas outlet 5 Test nipple p_1 6 Main gas inlet p_1 7 Ignition gas outlet 8 Test nipple p_2 9 Setting screw for governor with SW 2 socket head 10 Setting screw for start gas volume or slotted screwdriver 11 only GB-GD...D01 and GB-N... D01
Signal p_{sig} connection 12 only GB-GD...D01 and GB-N... D01
"Min" setting screw K (SW 2) 0-point offset | <ol style="list-style-type: none"> 13 only GB-GD...D01 and GB-N... D01
"Max" setting screw V (SW 2) Ratio adjustment 14 GB-M... D01 only
Cover 15 GB-M... D01 only
setting screw SW 3 Min 16 GB-M... D01 only
setting screw SW 2 Max 17 GB-M... D01 only
Modulator 18 GB-M... D01 only
Modular power supply, Male connector AMP 6,3 x 0,8 mm 19 Solenoid retaining screw 20 Side cover with screws |
|---|--|

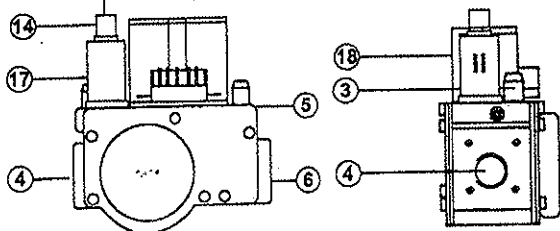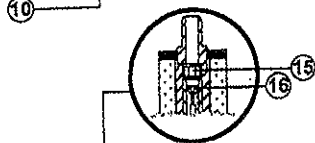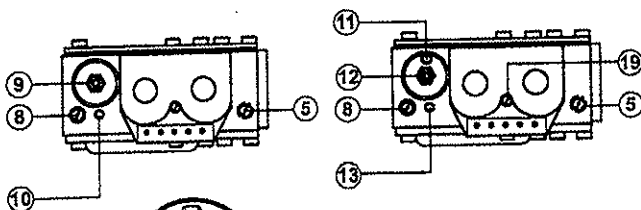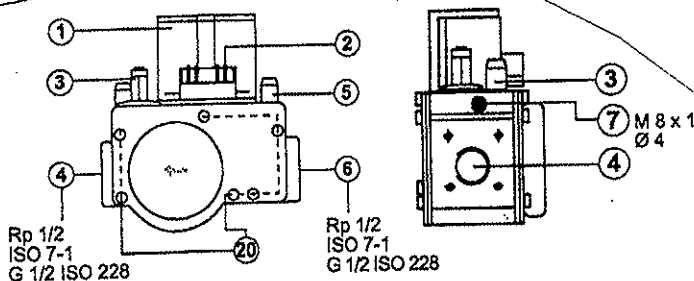

SETTING MANIFOLD PRESSURE

Setting the modulator

⚠ Caution!
Always set Min first since Max is adjusted simultaneously!

Setting Min

A Remove electrical connection 18 from modulator

⚠ Caution!
Do not use ball head tools with a 3 mm shaft. Otherwise Min is adjusted simultaneously!

B Set small load, setting screw 15 (use 3 mm socket head):

higher pressure
counterclockwise

lower pressure
clockwise

Setting Max

Operate Heater On HIGH

C Set Max, setting screw 16 (2 mm socket head)


60° corresponds to approx. 1 mbar

higher pressure
counterclockwise

lower pressure
clockwise

On completion of work on the GB-M... D01, perform a leakage and function test.

REFER TO RATING PLATE FOR
MIN/MAX MANIFOLD PRESSURES

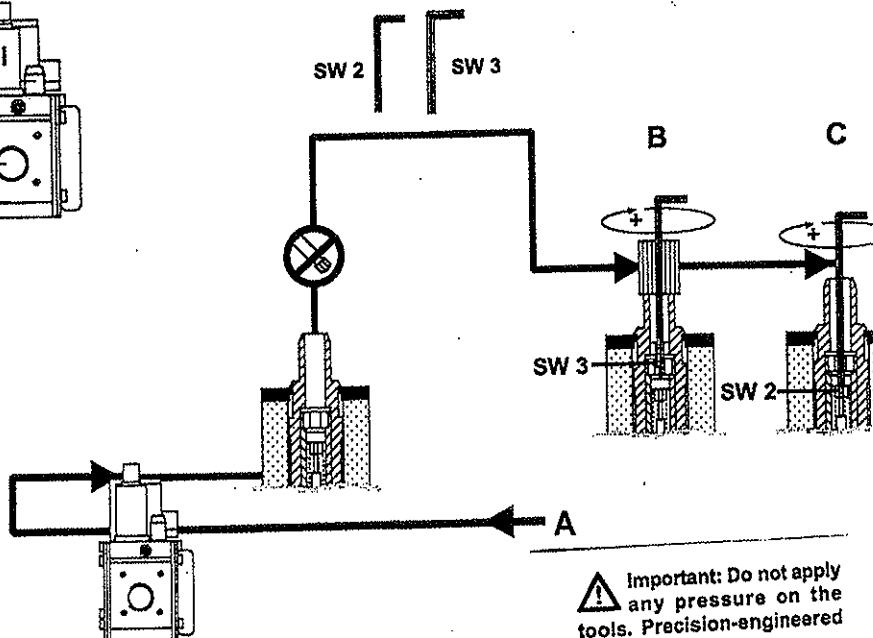

⚠ Important: Do not apply any pressure on the tools. Precision-engineered tools.

EXAMPLE OF CONVERSION KIT LABEL
TO BE COMPLETED AS PER INSTRUCTIONS IN KIT

This appliance was converted on DAY: _____
 MONTH: _____ YEAR: _____
 to NG: _____ LP. _____ gas with Kit # _____
 by: NAME: _____
 COMPANY: _____
 ADDRESS: _____
 CITY/TOWN: _____ STATE/PRO: _____
 TELEPHONE: _____
 Orifice Size: _____ Leak Test Performed: Yes: _____
 Manifold Pressure: Min _____ Max _____
 Input: _____ Altitude: _____
 (The name of the individual and organization making
 this conversion accepts the responsibility that this conversion
 has been properly made and has performed a leak test on the
 appliance prior to placing into service.) Locate label in a
 conspicuous location on the appliance near rating plate.
 =====
 Cet appareil a ete converti au: _____
 Injecteur: _____ Date: _____
 Pression a la tubulure d'alimentation: _____
 Debit calorifique: _____

! WARNING !

Failure to follow these instructions will cause death, personal injury or property damage. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

SAFETY INSTRUCTIONS READ BEFORE OPERATING

- A. This gas heater does not have a pilot. It is equipped with an ignition device which automatically lights the burner. DO NOT try to light the burner with a match, or flame.
- B. BEFORE OPERATING, smell all around the heater area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle to the floor.

WHAT TO DO IF YOU SMELL GAS

- Do not try to operate heater.
- Do not touch any electric switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbour's phone. Follow the gas suppliers instructions.
- If you cannot reach your gas supplier, call the fire department.
- C. Use only your hand to turn the gas valve handle. Never use tools. If handle will not turn by hand, do not try to repair it, call a qualified service technician. Force or attempted repair may result in a fire or explosion.
- D. Do not use this heater if any part has been under water. Immediately call a qualified service technician to inspect the heater and to replace any part of the control system which has been under water.

OPERATING INSTRUCTIONS

1. STOP! Read the safety instructions on this label.
2. Open the manual gas valve in the heater supply line.
3. Turn on electric power to the heater.
4. Set the thermostat to the desired setting.
5. This heater is equipped with an ignition device, which automatically lights burner. Do not try to light the burner with a match, or flame.
6. If heater will not operate, follow instructions "To Turn Off Gas To Heater" and call your service technician or gas supplier.

TO TURN OFF THE GAS TO HEATER

1. Set the thermostat to the lowest setting.
2. Turn off electric power to the heater if service is to be performed.
3. Turn off the manual gas valve in the heater supply line.
4. Wait 5 minutes before attempting to relight heater.